

[Manuals.plus](#) /

› [WALLA SOUND](#) /

› WALLA SOUND TG117 Portable Bluetooth Speaker & FM Radio User Manual

WALLA SOUND TG117

WALLA SOUND TG117 Portable Bluetooth Speaker & FM Radio User Manual

Model: TG117 | Brand: WALLA SOUND

[Box](#) [Features](#) [Setup](#) [Operation](#) [Introduction](#) [What's in the](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your WALLA SOUND TG117 Portable Bluetooth Speaker & FM Radio. Please read this manual thoroughly before using the product and retain it for future reference.



Figure 1: WALLA SOUND TG117 Portable Bluetooth Speaker

2. WHAT'S IN THE BOX

Ensure all items are present upon unboxing:

- Portable Speaker
- AUX Cable
- Micro USB Charging Cable
- Instruction Manual

3. PRODUCT FEATURES

- **360° HD Surround Sound:** Experience immersive audio from all directions.
- **Instant Wired Connectivity:** Connect directly via AUX cable for a stable audio experience.
- **Compact Design:** Big sound in a small, portable size.
- **IPX5 Waterproof Rating:** Resistant to water splashes and jets.
- **Bluetooth Wireless Technology:** Seamless connection to compatible devices.
- **Touch Control:** Intuitive control method for easy operation.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the speaker using the provided Micro USB Charging Cable. Connect the Micro

USB end to the speaker's charging port and the USB-A end to a compatible USB power adapter (not included). The charging indicator light will show charging status.

4.2 Bluetooth Pairing

1. Power on the speaker by pressing and holding the power button.
2. The Bluetooth indicator light will flash, indicating it's in pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for "TG117" in the list of available devices.
4. Select "TG117" to connect. Once connected, the Bluetooth indicator light will remain solid.

The speaker can be connected to two devices simultaneously, allowing for shared control of music playback.

4.3 Wired Connection (AUX)

For a wired connection, use the provided AUX cable. Connect one end to the speaker's AUX input and the other end to your audio device's headphone jack. The speaker will automatically switch to AUX mode.

5. OPERATING INSTRUCTIONS

5.1 Basic Controls

- **Power Button:** Press and hold to turn on/off.
- **Volume Up/Down:** Press '+' or '-' buttons to adjust volume.
- **Play/Pause:** Press the Play/Pause button to control playback.
- **Next/Previous Track:** Use the forward/backward buttons to skip tracks.

5.2 FM Radio Mode

To activate FM Radio mode, press the Mode button (if available, or refer to specific button layout on your device). Use the Next/Previous Track buttons to scan for radio stations.

6. MAINTENANCE

- **Water Resistance (IPX5):** The speaker is resistant to water splashes and low-pressure water jets. Do not submerge the speaker in water for extended periods.
- **Drying After Water Exposure:** If the speaker gets wet, ensure all ports are completely dry before charging to prevent damage. Allow it to air dry thoroughly.
- **Cleaning:** Use a soft, damp cloth to clean the speaker. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect to a power source using the Micro USB cable.
Cannot pair via Bluetooth.	Ensure the speaker is in pairing mode (flashing Bluetooth light). Check your device's Bluetooth settings and try reconnecting. Move closer to the speaker.

Problem	Solution
No sound or low volume.	Check volume levels on both the speaker and your connected device. Ensure the correct input mode (Bluetooth/AUX) is selected.
Charging indicator shows red after water exposure.	This indicates moisture in the charging port. Allow the speaker to air dry completely before attempting to charge again.

8. SPECIFICATIONS

- **Model Name:** Portable Bluetooth Speaker
- **Input Voltage:** 5 Volts
- **Mounting Type:** Freestanding
- **Special Feature:** Portable
- **Product Dimensions:** 2.5"D x 2.5"W x 6.5"H
- **Item Weight:** 390 Grams (13.8 ounces)
- **Is Waterproof:** IPX5
- **Maximum Range:** 33 Feet (10 Meters)
- **Control Method:** Touch
- **Wireless Communication Technology:** Bluetooth
- **Speaker Size:** 45 Millimeters
- **Number of Batteries:** 1 Lithium Ion batteries required
- **Battery Capacity:** 1200 Milliamp Hours
- **Charging Time:** 3 Hours
- **Speaker Maximum Output Power:** 5 Watts
- **Frequency Response:** 120 Hz
- **Connectivity Technology:** Auxiliary
- **Audio Output Mode:** Stereo
- **Item Model Number:** TG117
- **UPC:** 850055154032

9. WARRANTY & SUPPORT

This product comes with a **Limited Warranty**. For detailed warranty information and support, please refer to the official WALLA SOUND website or contact customer service. The Instruction Manual included in the box also contains specific warranty details.