

Manuals.plus /

› Devoko /

› Devoko Electric Sit-Stand Desk 0463 (120x60cm) User Manual

Devoko 0463 (120x60cm)

Devoko Electric Sit-Stand Desk 0463 (120x60cm) User Manual

Model: 0463 | Dimensions: 120 x 60 cm

1. SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use of the Devoko Electric Sit-Stand Desk. Failure to follow these instructions may result in injury or damage to the product.

- **Load Capacity:** Do not exceed the maximum load capacity of 70 kg (154 lbs). Distribute weight evenly across the desktop.
- **Ergonomic Use:** Utilize the sit-stand functionality to promote ergonomic posture and prevent back pain from prolonged sitting.
- **Pinch Points:** Keep hands, feet, and objects clear of moving parts (legs, motor mechanism) during height adjustment to avoid pinching or crushing injuries.
- **Electrical Safety:** Ensure the power cord is not damaged or pinched. Connect the desk to a properly grounded power outlet. Do not operate the desk if the power cord or plug is damaged.
- **Children and Pets:** Keep children and pets away from the desk during operation to prevent accidents.
- **Assembly:** Follow all assembly instructions carefully. Ensure all screws and fasteners are securely tightened before use.
- **Environment:** Use the desk indoors in a dry environment. Avoid exposure to moisture or extreme temperatures.

2. PRODUCT OVERVIEW

The Devoko Electric Sit-Stand Desk Model 0463 is designed to provide a versatile and ergonomic workspace, allowing users to easily switch between sitting and standing positions. This model features a 120x60cm desktop, an electric height adjustment system, and two programmable memory presets.



Image 2.1: The Devoko Electric Sit-Stand Desk, showcasing its monitor stand, laptop, and other accessories on the desktop.

Key Features:

- **Electric Height Adjustment:** Smooth and quiet transition between sitting and standing heights (73 cm to 118 cm).
- **Memory Presets:** Two programmable height settings for quick adjustments to preferred positions.
- **Robust Construction:** High-quality metal frame and motor tested for durability, supporting up to 70 kg.
- **Integrated Monitor Stand:** Provides an elevated surface for monitors, optimizing viewing angles.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all components are present and undamaged. Refer to the detailed installation instructions included in your package for a complete list and visual guide.

- Desktop sections (typically 2 or 3 pieces)
- Desk legs (2)
- Foot pads (2)
- Motor and control box
- Control panel with display
- Power adapter and cable
- Monitor stand components
- Assembly hardware (screws, bolts, Allen keys, etc.)
- Instruction manual



Image 3.1: Front and side views of the desk, illustrating its design and components.

4. SETUP AND ASSEMBLY

Detailed assembly instructions are provided in the separate manual included with your product. Please follow these instructions step-by-step. Assembly typically requires two people and sufficient clear space.

General Assembly Steps:

1. Unpack all components and verify against the package contents list.
2. Assemble the desk legs and feet according to the diagrams.
3. Attach the motor and control box to the desk frame.
4. Secure the desktop sections to the frame, ensuring proper alignment.
5. Install the control panel in the designated location.
6. Connect all electrical cables as instructed.
7. Attach the monitor stand to the desktop.
8. Perform a functional test of the height adjustment.

Important: Ensure all connections are secure and cables are managed to prevent interference with moving parts.



Image 4.1: Back view of the desk, showing cable management options and structural elements.

5. OPERATING INSTRUCTIONS

The Devoko Electric Sit-Stand Desk features an intuitive control panel for easy height adjustment and memory preset management.



Image 5.1: Close-up of the control panel, indicating buttons for Up, Down, Sitting, and Standing positions.

5.1. Adjusting Height

- **To Raise the Desk:** Press and hold the **Up (▲)** button until the desk reaches your desired height.
- **To Lower the Desk:** Press and hold the **Down (▼)** button until the desk reaches your desired height.
- The current height will be displayed on the control panel screen.

5.2. Setting Memory Presets

The desk allows you to save two frequently used heights for quick access.

1. Adjust the desk to your desired height using the Up/Down buttons.
2. Press the **M** button (or similar 'Set' button if present, not explicitly shown but implied by '2 memory heights'). The display may flash.
3. Immediately press either the **1** or **2** button to save the current height to that preset. The display will confirm the setting.

5.3. Recalling Memory Presets

- To move the desk to a saved height, simply press the corresponding **1** or **2** button. The desk will automatically adjust to the stored height.
- You can also use the dedicated **Sitting** and **Standing** buttons if they are pre-programmed or you have assigned them to specific memory slots.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Devoko Electric Sit-Stand Desk.

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that

could damage the finish.

- **Cable Management:** Periodically check that all cables are neatly organized and not interfering with the desk's movement.
- **Fastener Check:** Every few months, inspect all screws and bolts to ensure they remain tight. Retighten if necessary.
- **Motor and Legs:** Keep the motor and leg mechanisms free from dust and debris. Do not lubricate the moving parts unless specifically instructed by the manufacturer.

7. TROUBLESHOOTING

If you encounter issues with your Devoko Electric Sit-Stand Desk, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Desk does not move or respond to buttons.	No power, loose connection, overload.	Check power cord connection. Ensure outlet is functional. Reduce weight on desk. Reset the system (unplug for 30 seconds, then plug back in).
Desk moves unevenly or makes unusual noises.	Obstruction, loose fasteners, uneven weight distribution.	Check for obstructions under or around the desk. Tighten all assembly fasteners. Redistribute weight evenly.
Error code displayed on control panel.	Specific system fault.	Refer to the detailed instruction manual for specific error code meanings and solutions. If not available, perform a system reset.
Memory presets not saving or recalling correctly.	Incorrect setting procedure.	Review 'Setting Memory Presets' section (5.2) and repeat the steps carefully.

If the problem persists after attempting these solutions, please contact Devoko customer support for further assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	Devoko
Model Number	0463
Desktop Dimensions (L x W)	120 cm x 60 cm
Height Adjustment Range	73 cm to 118 cm
Product Dimensions (L x W x H)	60 x 120 x 73 cm (at lowest height)
Weight	22 Kilograms
Load Capacity	70 kg
Material	Metal (frame), Wood (desktop - inferred)

Feature	Detail
Features	Ergonomic, Electric, 2 Memory Heights
Color	Brown
Country of Origin	China

9. WARRANTY AND SUPPORT

Devoko products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Devoko website.

For technical support, replacement parts, or any questions not covered in this manual, please contact Devoko customer service through their official channels. Contact details can typically be found on the product packaging or the brand's website.

Manufacturer: Devoko
ASIN: B0CKVJ1C8M

© 2025 Devoko. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CKVJ1C8M>

More documents and user manuals: <https://manuals.plus/>