

[Manuals.plus](#) /

› [Panasonic](#) /

› Panasonic TH-55MX750DX 4K Ultra HD Smart Google LED TV User Manual

Panasonic TH-55MX750DX

Panasonic TH-55MX750DX 4K Ultra HD Smart Google LED TV User Manual

Model: TH-55MX750DX

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Panasonic TH-55MX750DX 4K Ultra HD Smart Google LED TV. Please read it thoroughly before using the television and retain it for future reference.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent damage to the TV and personal injury:

- **Power Source:** Connect the TV only to an AC 220V, 50Hz power supply.
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids on the TV.
- **Heat Sources:** Keep the TV away from heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- **Cleaning:** Unplug the TV from the wall outlet before cleaning. Use a soft, dry cloth.
- **Mounting:** Follow instructions carefully when mounting the TV on a wall or stand.
- **Children:** Do not allow children to climb on the TV or stand.

3. WHAT'S IN THE BOX

Carefully unpack the box and ensure all items are present:

- 1 x Panasonic TH-55MX750DX 4K Ultra HD Smart Google LED TV
- 1 x Remote Controller
- 1 x User Manual (this document)
- 2 x Table Top Stand components
- 1 x Warranty Card
- 1 x Wall Mount bracket set
- 2 x AAA Batteries (for remote control)

4. SETUP

4.1 Attaching the Stand or Wall Mounting

Your TV can be placed on a table using the included stand or mounted on a wall. Choose the appropriate method for your installation.

- **Table Top Stand:** Attach the two table-top stand components to the designated slots at the bottom of the TV using the provided screws. Ensure they are securely fastened.
- **Wall Mount:** If wall mounting, use the included wall mount bracket set. Refer to the separate wall mount installation guide for detailed instructions. The VESA mount standard for this TV is 200 x 200 mm.



Image: Rear view of the television, illustrating the back panel and stand attachment points.



Image: Side profile of the television, highlighting its slim design and accessible side ports.

4.2 Connecting External Devices

Connect your external devices such as set-top boxes, gaming consoles, or USB drives to the TV's ports.

- **HDMI Ports:** The TV has 3 HDMI ports. Use HDMI cables to connect devices like Blu-ray players, gaming consoles, or cable/satellite boxes.
- **USB Ports:** The TV has 2 USB ports. Connect USB storage devices for media playback or software updates.
- **Antenna/Cable:** Connect your antenna or cable TV coaxial cable to the RF input if you are watching broadcast TV.

4.3 Power Connection

Once all devices are connected, plug the TV's power cord into a suitable AC 220V, 50Hz wall outlet.

4.4 Remote Control Setup

Insert the two AAA batteries into the remote control, ensuring correct polarity (+/-).



Image: The remote control, highlighting the voice control button for Google Assistant and dedicated hot keys for popular streaming services.

4.5 Initial Setup (Google TV)

Upon first power-on, the TV will guide you through the initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Network Connection:** Connect to your Wi-Fi network. You will need your Wi-Fi password.
3. **Google Account Sign-in:** Sign in with your Google account to access Google TV features, apps, and personalized recommendations.
4. **Terms of Service:** Accept the terms of service.
5. **Google Assistant Setup:** Follow prompts to set up Google Assistant for voice control.
6. **Channel Scan:** If using an antenna, the TV will scan for available channels.

5. OPERATING THE TV

5.1 Basic Functions

- **Power On/Off:** Press the **Power** button on the remote control.
- **Volume Control:** Use the **Volume +/-** buttons.
- **Channel Selection:** Use the **Channel +/-** buttons or number pad.
- **Input Source:** Press the **Input** button to select HDMI, AV, or TV sources.
- **Home Screen:** Press the **Home** button to return to the Google TV home screen.

5.2 Navigating Google TV

The Google TV interface organizes your content from various streaming services and apps. Use the directional pad and OK button on your remote to navigate.

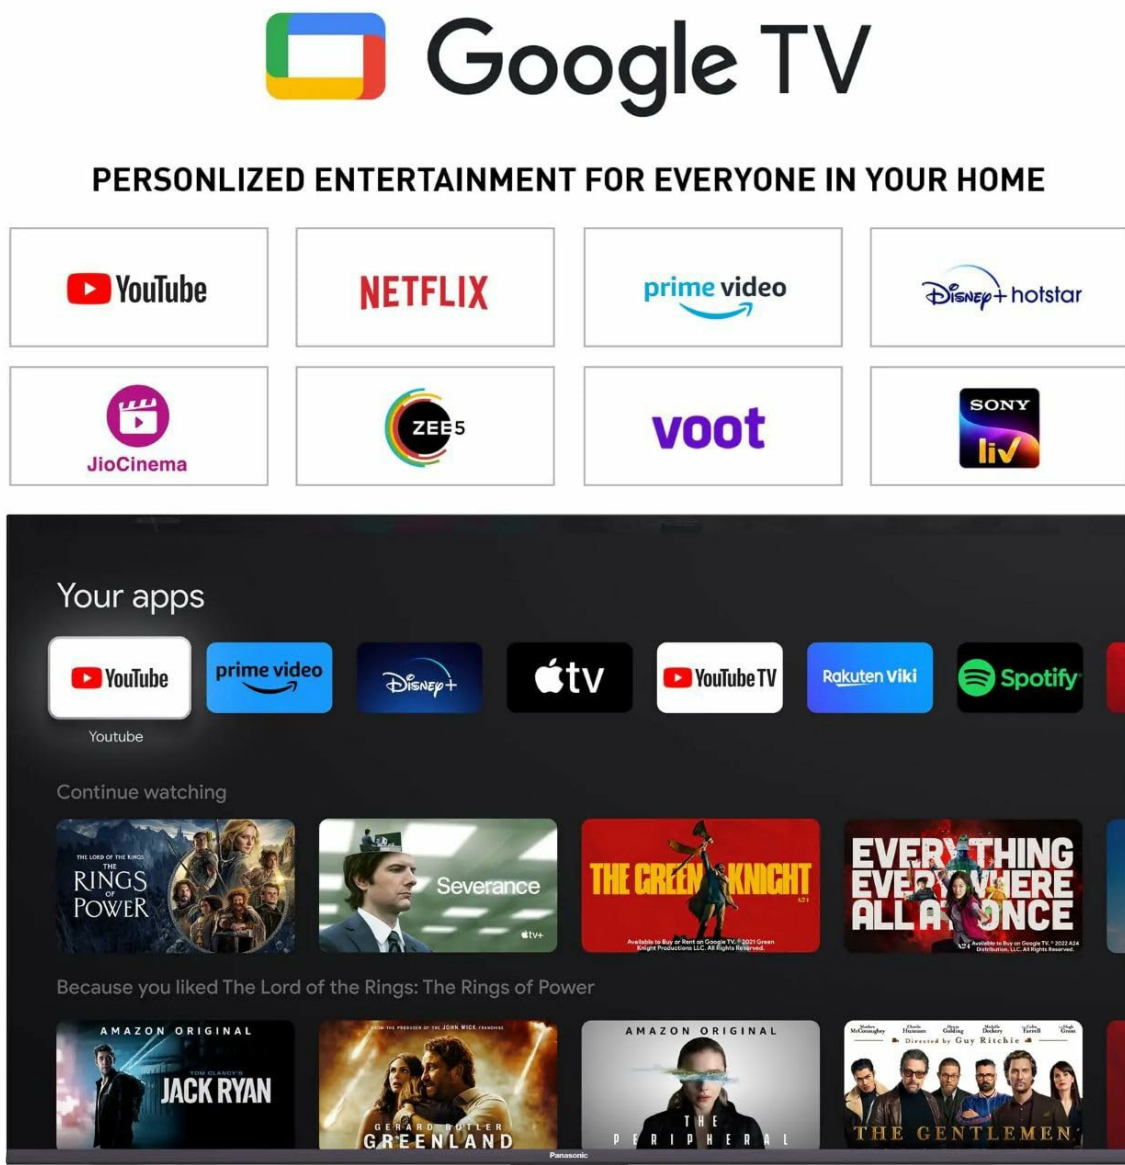


Image: The Google TV home screen, displaying popular streaming applications like YouTube, Netflix, Prime Video, and personalized content recommendations.

- **For You Tab:** Provides personalized recommendations based on your viewing history.
- **Live Tab:** Access live TV channels (if configured).

- **Apps Tab:** Browse and launch installed applications.
- **Library Tab:** Access your purchased movies and shows.

5.3 Voice Control with Google Assistant

Press the **Google Assistant** button on your remote and speak into the microphone to control your TV, search for content, get answers, and more.

- "Find action movies"
- "Open Netflix"
- "What's the weather like?"
- "Turn off the TV"

5.4 Using Built-in Apps

Your TV comes with pre-installed apps like Netflix, YouTube, and Prime Video. You can also download more apps from the Google Play Store.

- Use the dedicated hot keys on your remote for quick access to Netflix, Prime Video, and YouTube.
- Navigate to the "Apps" tab on the Google TV home screen to see all installed applications.

5.5 Screen Mirroring (Chromecast built-in)

Cast content from your compatible smartphone, tablet, or computer directly to your TV using Chromecast built-in. Ensure your device and TV are on the same Wi-Fi network.

- Open a Chromecast-enabled app (e.g., YouTube, Netflix) on your mobile device.
- Tap the **Cast** icon and select your Panasonic TV from the list.

6. MAINTENANCE

6.1 Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution (do not spray directly on the screen).
- **Cabinet:** Wipe the TV cabinet with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- Always unplug the TV before cleaning.

6.2 Software Updates

Your TV may receive software updates to improve performance and add new features. Ensure your TV is connected to the internet for automatic updates. You can also check for updates manually via the Settings menu.

7. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common solutions:

Problem	Possible Solution
No power	• Check if the power cord is securely plugged into the TV and the wall outlet. • Ensure the wall outlet is working (test with another device). • Press the power button on the TV itself, not just the remote.

Problem	Possible Solution
No picture, but sound is present	• Check the input source. Ensure it matches the device connected (e.g., HDMI 1). • Check the cable connection between the TV and the external device. • Try a different HDMI port or cable.
No sound, but picture is present	• Check the volume level and ensure the TV is not muted. • Check audio settings on the TV and external device. • If using external audio system, ensure it is powered on and correctly connected.
Remote control not working	• Replace the batteries with new AAA batteries. • Ensure there are no obstructions between the remote and the TV's IR sensor. • Point the remote directly at the TV.
Wi-Fi connection issues	• Ensure your Wi-Fi router is on and working. • Restart your router and the TV. • Check Wi-Fi password in TV settings. • Move the TV closer to the router or reduce interference.

8. SPECIFICATIONS

Detailed technical specifications for the Panasonic TH-55MX750DX TV:

Feature	Detail
Model Name	TH-55MX750DX
Screen Size	55 Inches (139 cm)
Display Technology	LED
Resolution	4K Ultra HD (3840 x 2160)
Refresh Rate	60 Hz
Operating System	Google TV
HDR Support	HDR10, HLG, Dolby Vision
Connectivity	Wi-Fi, 3 x HDMI, 2 x USB
Audio Output Mode	Stereo (2.0 channel)
Voice Assistant	Google Assistant built-in
Screen Mirroring	Google Cast (Chromecast)
Product Dimensions (D x W x H)	122.7D x 26.1W x 77.8H Centimeters (with stand)

Feature	Detail
Item Weight	17.6 Kilograms
VESA Mount Standard	200 x 200 mm
Power Consumption	0.5 Watts (Standby)
Line Voltage	220 VAC 50 Hz
Included Components	TV Unit, Remote, User Manual, Table Top Stand, Warranty Card, Wall Mount

9. WARRANTY AND SUPPORT

Your Panasonic TH-55MX750DX TV comes with a comprehensive warranty and dedicated customer support.

- **Warranty Period:** 1 Year Comprehensive Warranty provided by Panasonic from the date of purchase.
- **Contact Support:** For assistance, contact Panasonic's toll-free number: **1800-108-1333**.
- When contacting support, please provide your product's model name (TH-55MX750DX) and the seller's details mentioned on your invoice. The service center will arrange a convenient slot for service.

© 2023 Panasonic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CKVLDTCB>

More documents and user manuals: <https://manuals.plus/>