

INTERGREAT 10 Fingerprint Gun Safe

INTERGREAT 10 Fingerprint Rifle Gun Safe Instruction Manual

Model: 10 Fingerprint Gun Safe

1. PRODUCT OVERVIEW

The INTERGREAT 10 Fingerprint Rifle Gun Safe is designed to provide secure storage for firearms and other valuables. It features multiple access methods, including an electronic keypad for PIN codes and a key lock, along with an integrated alarm system for enhanced security. The safe offers versatile interior organization with removable shelves and door pockets, accommodating various firearm lengths and accessories.



Image 1.1: Front view of the INTERGREAT 10 Fingerprint Rifle Gun Safe.

2. SAFETY GUIDELINES

- **Firearm Safety:** Always store firearms unloaded and locked away from children and unauthorized individuals.
- **Mounting:** For maximum security, bolt the gun safe to the floor or a wall using the provided anchor bolts. This prevents unauthorized removal or tipping.
- **Emergency Keys:** Store emergency keys in a secure location away from the safe and out of reach of children. Do not store them inside the safe.
- **Battery Maintenance:** Regularly check the battery status of the electronic lock. Replace batteries promptly when low to ensure continuous access.
- **Water Resistance:** This safe is not water resistant. Avoid placing it in areas prone to water exposure.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x Rifle Gun Safe Cabinet

- 2 x Backup Keys
- 4 x M6 Expansion Screws (for mounting)
- 1 x Glove
- 1 x Screwdriver
- 1 x Instruction Manual
- 2 x Removable Shelves



SIZE

High: **55.2** in
Wide: **21** in
Long: **15.2** in



1 x Gray Carpet



4 x Anchor Bolts for Floor&Wall Mount



2 x Emergency Keys

Image 3.1: Visual representation of the safe's dimensions and included accessories.

4. PRODUCT SPECIFICATIONS

Brand	INTERGREAT
Model Number	asjk3454
Exterior Dimensions (D x W x H)	15.5" x 21" x 55.5"
Top Compartment Dimensions (W x H)	11.6" x 9.8"

Item Weight	71 Pounds
Lock Type	Electronic, Key
Capacity	Up to 10 rifles, multiple handguns
Material	Metal
Mounting Type	Floor Mount (pre-drilled holes)

5. ASSEMBLY AND INSTALLATION

The safe is designed for straightforward assembly. Ensure you have adequate space and assistance if needed due to the weight and size of the components.

5.1 Initial Assembly Steps

1. Unpack all components and verify against the package contents list.
2. Follow the visual instructions provided in the included manual for assembling the main body of the safe.
3. Install the removable shelves as desired to customize the interior space.

5.2 Mounting the Safe

To enhance security and prevent tipping, it is recommended to bolt the safe to a floor or wall.

- Identify a suitable location for the safe, ensuring it is level and stable.
- The safe features pre-drilled holes on the back and bottom.
- Use the provided M6 expansion screws to secure the safe to the desired surface.

5.3 Visual Installation Guide

Your browser does not support the video tag.

Video 5.1: This video provides a visual guide for the assembly and installation of the INTERGREAT Rifle Gun Safe. It demonstrates how to put together the safe components and secure it to a surface.

6. OPERATING INSTRUCTIONS

6.1 Initial Setup: Battery Installation

1. Locate the battery compartment inside the safe door.
2. Insert 4 AA alkaline batteries, ensuring correct polarity.
3. Close the battery compartment cover.

6.2 Opening the Safe for the First Time (Emergency Key)

The safe comes with an initial password (123456#) for the electronic lock. However, for the very first access or in case of electronic lock failure, use the emergency key:

1. Insert the emergency key into the keyhole on the safe door.
2. Turn the key clockwise to unlock.
3. Rotate the handle to open the safe door.

6.3 Electronic Lock Operation (PIN Code)

To open the safe using the electronic keypad:

1. Wake up the keypad by touching it.
2. Enter your 8-digit PIN code followed by the '#' key.
3. If the code is correct, a green light will illuminate. Rotate the handle within 5 seconds to open the safe.

6.4 Fingerprint Access

For quick access, the safe supports fingerprint recognition:

1. Place your registered finger on the fingerprint sensor.
2. If the fingerprint is recognized, a green light will illuminate. Rotate the handle within 5 seconds to open the safe.

6.5 Programming Passcodes and Fingerprints

Refer to the following instructional videos for detailed steps on programming your safe:

Your browser does not support the video tag.

Video 6.1: This video provides comprehensive instructions on how to operate the INTERGREAT 10 Fingerprint Gun Safe, including setting up passcodes and using the electronic lock.

Your browser does not support the video tag.

Video 6.2: This video focuses specifically on the lock instructions for the INTERGREAT 10 safe, detailing how to program and manage access methods.

6.6 Alarm System

The safe is equipped with a dual alarm system:

- **Incorrect Password/Fingerprint:** If an incorrect PIN code or fingerprint is entered multiple times, the alarm will activate.
- **Forceful Breach:** Any attempt at a forceful entry will trigger the alarm.
- The alarm can be silenced by entering the correct PIN code or registered fingerprint.

DUAL ALARM SYSTEM

2 INCORRECT PASSWORD
OR ANY FORCEFUL BREACH



Combination Lock



Digital Unlock



Key Unlock

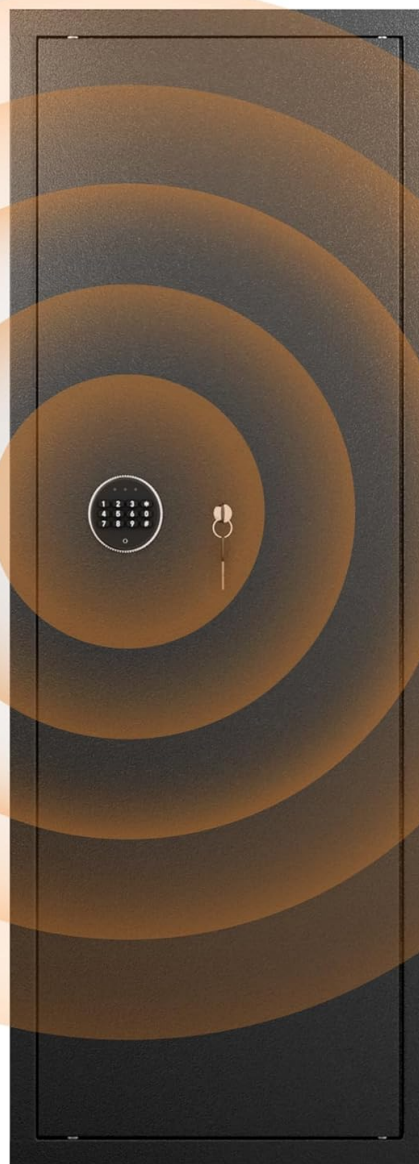 


Image 6.3: Illustration of the safe's dual alarm system.

7. MAINTENANCE

- **Battery Replacement:** When the battery indicator light signals low power, replace all 4 AA batteries promptly.
- **External Power Supply:** In case of completely dead batteries, an external emergency battery box can be used to temporarily power the electronic lock for access.
- **Cleaning:** Clean the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners that could damage the finish.
- **Interior Care:** Periodically inspect the interior for moisture and ensure the felt lining is clean and dry to prevent damage to stored items.

8. TROUBLESHOOTING

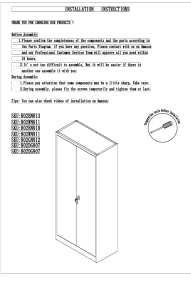

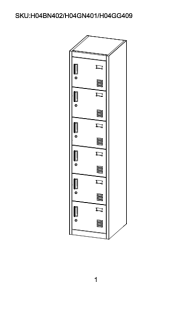
- **Electronic Lock Not Responding:** Check battery levels. If batteries are dead, use the emergency key or external battery box.
- **Forgotten PIN Code:** Use the emergency key to open the safe and reset the PIN code according to the programming instructions (refer to Video 6.1).

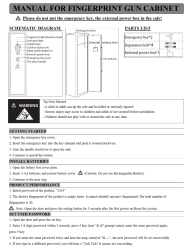
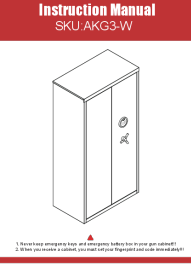

- **Alarm Triggered Accidentally:** Enter the correct PIN code or registered fingerprint to disarm the alarm.
- **Door Not Closing Properly:** Ensure no obstructions are preventing the door from fully closing. Check that the locking bolts are retracting correctly.

9. WARRANTY AND SUPPORT

For specific warranty details, product support, or any questions not covered in this manual, please contact INTERGREAT customer service. Contact information is typically provided in the original packaging or on the manufacturer's official website.

Related Documents - 10 Fingerprint Gun Safe

 <p>INSTALLATION INSTRUCTIONS</p> <p>READ THESE INSTRUCTIONS CAREFULLY BEFORE BEGINNING ASSEMBLY.</p> <p>1. Read all instructions carefully before beginning assembly.</p> <p>2. Do not attempt to assemble the unit if you are under the influence of alcohol or drugs, or if you are feeling drowsy or tired.</p> <p>3. Do not attempt to assemble the unit if you are not at least 18 years old.</p> <p>4. Do not attempt to assemble the unit if you are not familiar with basic tools and techniques.</p> <p>5. Do not attempt to assemble the unit if you are not familiar with the instructions in this manual.</p> <p>6. Do not attempt to assemble the unit if you are not familiar with the safety warnings in this manual.</p> <p>7. Do not attempt to assemble the unit if you are not familiar with the warranty information in this manual.</p> <p>8. Do not attempt to assemble the unit if you are not familiar with the return policy in this manual.</p> <p>9. Do not attempt to assemble the unit if you are not familiar with the contact information in this manual.</p> <p>10. Do not attempt to assemble the unit if you are not familiar with the disclaimer in this manual.</p>	<p>Installation Instructions for Tall Metal Storage Cabinet</p> <p>Step-by-step assembly guide for the INTERGREAT Tall Metal Storage Cabinet with 4 adjustable shelves and 2 locking doors. Includes parts list and assembly diagrams.</p>
 <p>SKU: H04BN403/H04GG404</p> <p>1</p>	<p>Assembly Instructions for H04BN403/H04GG404 Metal Locker</p> <p>Step-by-step assembly guide for the INTERGREAT Metal Locker, model H04BN403/H04GG404. This guide details the installation of the locker's components, including side panels, shelves, and doors, using provided hardware.</p>
 <p>SKU: H04BN402/H04GN401/H04GG409</p> <p>1</p>	<p>INTERGREAT 6-Door Locker Assembly Instructions (SKU: H04BN402/H04GN401/H04GG409)</p> <p>Step-by-step assembly guide for the INTERGREAT 6-door metal locker, including parts list, hardware details, and installation instructions for home, office, or gym use.</p>

	<p>KAER Fingerprint Gun Cabinet User Manual and Instructions</p> <p>This user manual provides comprehensive instructions for the KAER Fingerprint Gun Cabinet, covering setup, operation, password and fingerprint management, low voltage warnings, and mounting procedures.</p>
	<p>AKG3-W Fingerprint Gun Safe Instruction Manual</p> <p>Detailed instruction manual for the Re Labida Floor AKG3-W fingerprint gun safe, covering installation, setup, operation, security features, and troubleshooting. Learn how to assemble, secure, and operate your gun safe effectively.</p>
	<p>Riflewell G3-138W Gun Safe Instruction Manual</p> <p>Comprehensive instruction manual for the Riflewell G3-138W gun safe, covering component descriptions, mounting instructions, dual alarm system, mute function, system settings, and methods for opening the safe.</p>