

kwiwis HY-XYJ-11L

kwiwis Portable Mini Foldable Washing Machine

Model: HY-XYJ-11L

Brand: kwiwis

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your kwiwis Portable Mini Foldable Washing Machine, Model HY-XYJ-11L. Please read this manual thoroughly before using the appliance and retain it for future reference.

The kwiwis Portable Mini Foldable Washing Machine is designed for washing small loads of laundry such as underwear, socks, baby clothes, and other delicate items. Its foldable design makes it ideal for travel, apartments, dormitories, and camping.

SAFETY INFORMATION


Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the power supply voltage matches the rating label on the appliance.
- Do not immerse the main unit in water or other liquids.
- Unplug the appliance from the outlet when not in use, before cleaning, or before performing any maintenance.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.
- Do not operate the appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- Use only attachments/accessories specified by the manufacturer.
- Do not use the appliance outdoors.
- Avoid placing heavy objects on the power cord.

PRODUCT OVERVIEW

Familiarize yourself with the components of your washing machine:

- **Main Unit:** Foldable body with washing tub.
- **Lid:** Covers the washing tub.
- **Control Panel:** Push buttons for operation.
- **Drain Basket:** Used for semi-dehydration (spin drying).
- **Drain Hose & Valve:** For water drainage.
- **Power Adapter:** Connects the machine to an electrical outlet.

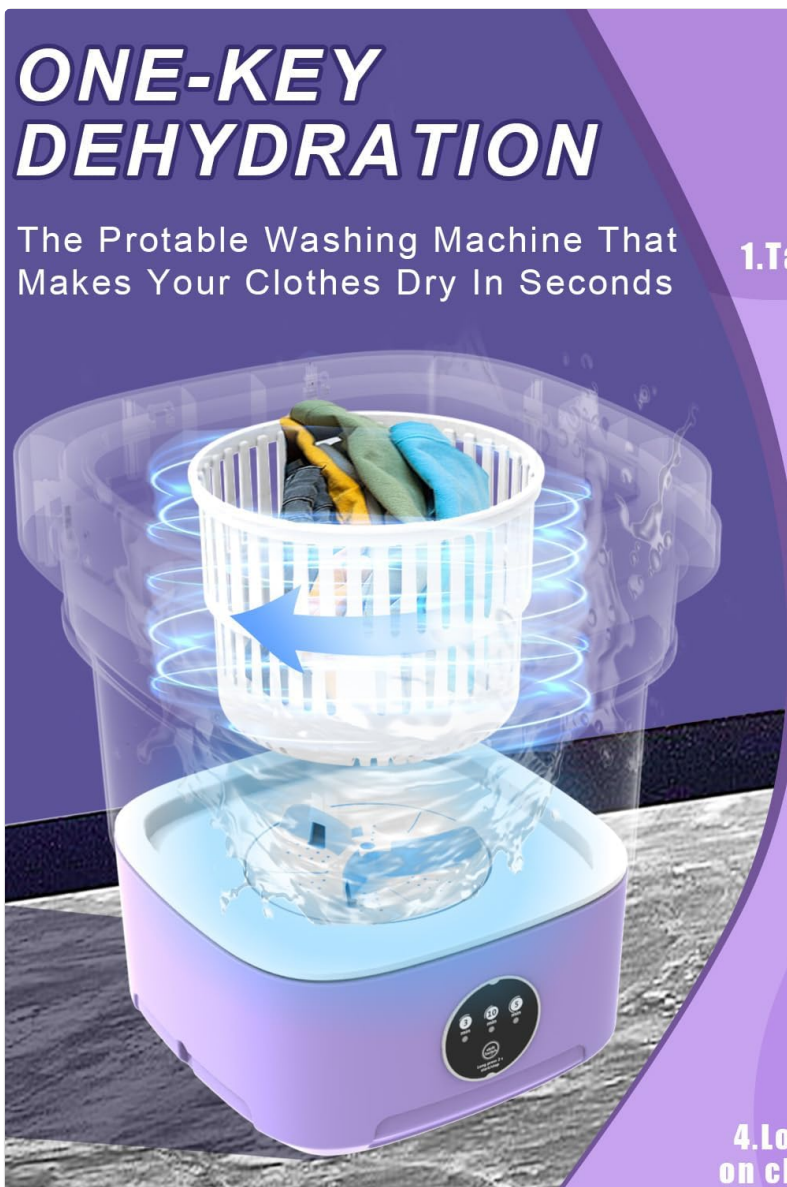

ONE-KEY DEHYDRATION

The Portable Washing Machine That Makes Your Clothes Dry In Seconds





- **1. Take out the drain basket**
- **2. Put the clothes to be washed and fill with water**
- **3. Put laundry detergent and cover it**
- **4. Long press for 2s to tuim on click to switch and select**

Image: Overview of the portable washing machine, highlighting the drain basket and control panel. It also illustrates the steps for washing and dehydration.

SETUP

1. **Unpack:** Carefully remove the washing machine and all accessories from the packaging.
2. **Expand:** Place the folded washing machine on a flat, stable surface. Gently pull up the top rim to expand the washing tub to its full height.

3. **Connect Power:** Insert the power adapter into the designated port on the machine, then plug the adapter into a suitable electrical outlet. Ensure it is a 12V power supply.
4. **Position:** Place the machine near a drain or sink for easy water disposal.

Your browser does not support the video tag.

Video: Demonstrates the quick setup of the kwiwis Portable Mini Washing Machine, including expanding the unit and connecting the power supply.

OPERATING INSTRUCTIONS

Washing Cycle


1. **Load Laundry:** Open the lid and place a small amount of laundry into the washing tub. Do not overload the machine. The capacity is 11 liters, suitable for items like 10 pairs of underwear, 8 panties, 8 towels, 10 socks, 5 baby clothes, or 2 T-shirts.
2. **Add Water:** Fill the tub with an appropriate amount of water, ensuring the clothes are submerged.
3. **Add Detergent:** Add a small amount of liquid laundry detergent. Close the lid.
4. **Select Cycle:** Press and hold the power button for 2 seconds to turn on the machine. Short press the power button to cycle through the available wash times (e.g., 10 minutes for standard wash, 15 minutes for soft washing). The indicator light will show the selected time.
5. **Start Washing:** The machine will automatically start the washing cycle after selection.

Draining and Semi-Dehydration (Spin Drying)

1. **Drain Water:** Once the wash cycle is complete, open the drain valve located at the bottom of the machine to release the water. Ensure the drain hose is positioned to direct water into a sink or drain.
2. **Insert Drain Basket:** After draining, place the clothes into the provided drain basket and insert the basket into the washing tub.
3. **Select Dehydration Cycle:** Close the lid. Press and hold the power button for 2 seconds to turn on the machine. Short press the power button to select the 2-minute semi-dehydration (spin dry) cycle.
4. **Start Dehydration:** The machine will begin the spin cycle to remove excess water from the clothes.
5. **Remove Laundry:** Once the dehydration cycle is complete, remove the clothes. They will be damp but significantly less wet than after a wash cycle.

ONE-KEY DEHYDRATION

The Portable Washing Machine That Makes Your Clothes Dry In Seconds

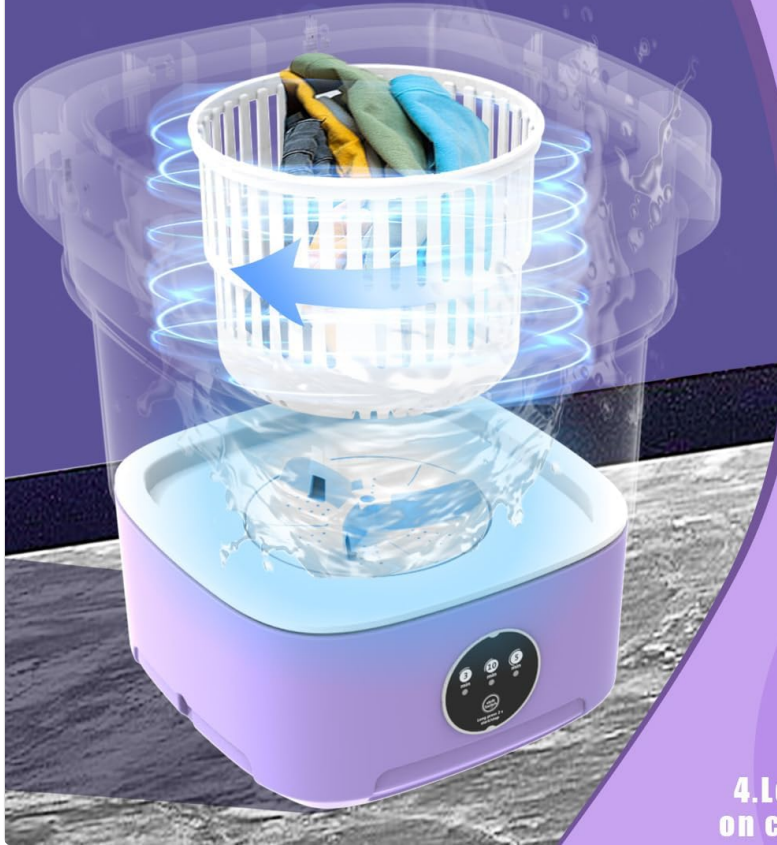

1. Take out the drain basket



2. Put the clothes to be washed and fill with water



3. Put laundry detergent and cover it



4. Long press for 2s to tuim on click to switch and select

Image: Visual guide for the washing and dehydration process, showing how to load clothes, add detergent, and operate the control panel for different cycles.

Your browser does not support the video tag.

Video: Demonstrates the full washing process, including adding clothes, water, detergent, selecting a wash cycle, draining water, and performing the semi-dehydration cycle.

MAINTENANCE

- **Cleaning the Tub:** After each use, rinse the washing tub with clean water. Wipe down the interior and exterior with a soft, damp cloth.
- **Draining:** Ensure all water is drained from the machine after use to prevent mildew and odors.
- **Storage:** When not in use, ensure the machine is clean and dry. Fold the machine by gently pressing down on the top rim until it collapses. Store in a cool, dry place away from direct sunlight.
- **Do Not Use Harsh Chemicals:** Avoid using abrasive cleaners, solvents, or harsh chemicals that could damage the machine's surfaces.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet issue; power button not pressed correctly.	Ensure power adapter is securely plugged into both the machine and a working electrical outlet. Press and hold the power button for 2 seconds.
Washing action is weak or stops.	Overloaded with laundry; insufficient water; foreign object obstructing impeller.	Reduce laundry load. Add more water. Check for and remove any obstructions.
Water does not drain.	Drain valve closed; drain hose kinked or blocked.	Open the drain valve. Straighten the drain hose and check for blockages.
Machine is noisy during operation.	Unbalanced load; machine not on a stable surface.	Rearrange laundry for an even load. Place the machine on a flat, stable surface.

SPECIFICATIONS

- **Model:** HY-XYJ-11L
- **Brand:** kwiwis
- **Capacity:** 11 Liters
- **Item Weight:** 4.86 pounds
- **Product Dimensions (Expanded):** Approximately 11 x 11 x 12.6 inches
- **Product Dimensions (Folded):** Approximately 11 x 11 x 5.5 inches
- **Control Type:** Push Button
- **Standard Cycles:** 1 (with multiple time options for wash and spin)
- **Cycle Options:** Baby Wear, Spin
- **Power Supply:** 12V (via included adapter)

Product Size



Image: Product dimensions and examples of laundry capacity for various items.

WARRANTY INFORMATION

Specific warranty details are not provided in the product information. Please refer to the retailer or manufacturer's website for warranty terms and conditions, or contact customer support for assistance.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your kwiwis Portable Mini Foldable Washing Machine, please contact the retailer where the product was purchased or visit the official kwiwis brand store online.

Online Store: [kwiwis Store on Amazon](#)