

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Audecook](#) /

› [Audecook Hot Pot Electric 2.5L Multicooker User Manual](#)

Audecook AHP-2.5L

Audecook 2.5L Electric Hot Pot Multicooker User Manual

Model: AHP-2.5L

1. INTRODUCTION

Thank you for choosing the Audecook 2.5L Electric Hot Pot Multicooker. This versatile appliance is designed for convenient cooking of various meals, including pasta, soups, oatmeal, fried dishes, and hot pot. Its compact size and dual power settings make it suitable for individuals, couples, and small families. Please read this manual thoroughly before first use to ensure safe and optimal operation.

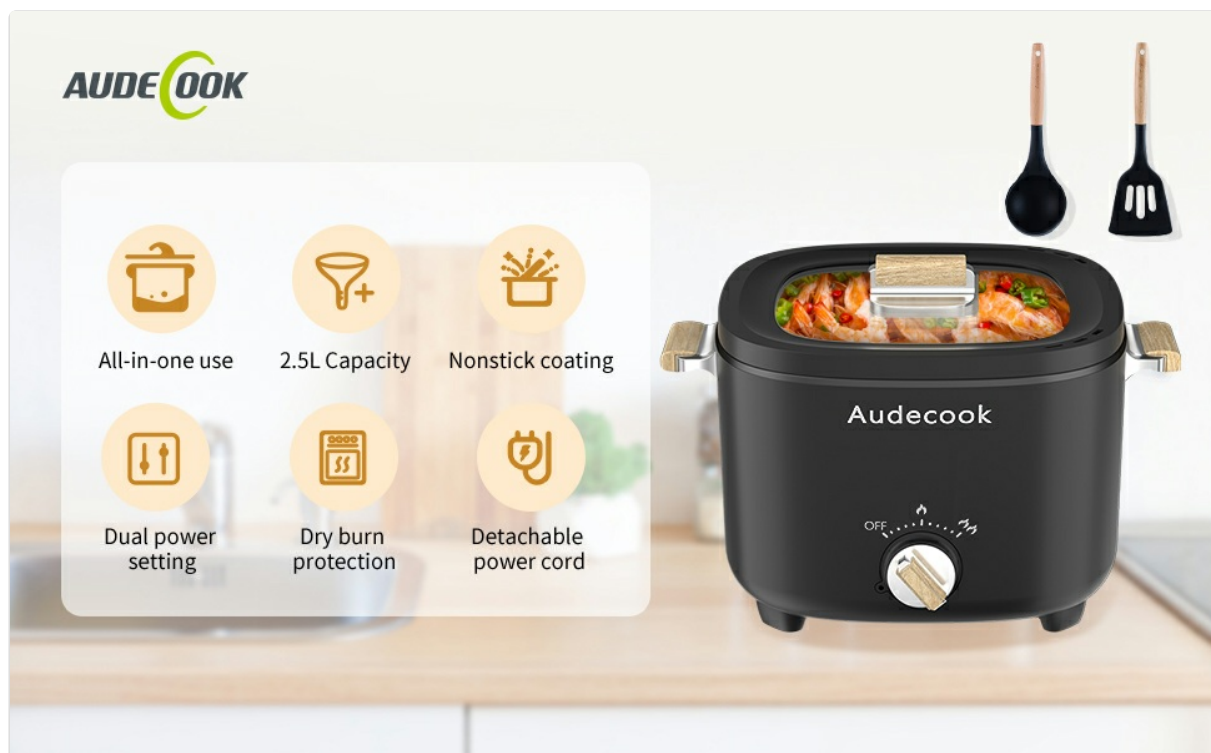 


Image 1.1: Audecook 2.5L Electric Hot Pot Multicooker highlighting its main features.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons. Read all instructions carefully.



Image 2.1: Safety precautions as printed on the product packaging.

1. Before connecting the appliance to a power source, ensure that the rated voltage indicated on the product nameplate matches your local power supply voltage. The power cord plug must be inserted into an appropriate, grounded outlet.
2. To prevent electrical shock and damage to the internal circuit, never immerse the main body of the multicooker in water or any other liquid.
3. Always supervise the appliance when it is in operation. Do not leave the multicooker unattended to prevent potential accidents.
4. Keep children away from the appliance during operation to avoid burns or other injuries. The product should not be used unattended, and the power cord must be unplugged when not in use.
5. For initial cleaning, add a moderate amount of water to the pot, boil it, and then discard the water. Ensure the power cord does not hang over the edge of a table or counter, and avoid contact with hot surfaces.
6. Always unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts, and before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
8. Use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.

3. PRODUCT COMPONENTS

The Audecook 2.5L Electric Hot Pot Multicooker consists of the following main components:

- **Main Pot Body:** Features a non-stick honeycomb textured interior.
- **Glass Lid:** Transparent lid with a steam vent and a wooden-style handle.
- **Power Control Dial:** Located on the front, used to select power settings (OFF, LOW, HIGH).
- **Detachable Power Cord:** For easy portability and storage.
- **Accessories:** Includes one spatula and one soup ladle.



Image 3.1: Main components of the Audecook Multicooker, including the pot, lid, spatula, and ladle.

4. BEFORE FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and inspect the multicooker for any damage. Retain packaging for future storage or transport if needed.
2. **Initial Cleaning:** Wipe the exterior of the pot with a damp cloth. Wash the glass lid, spatula, and soup ladle with warm, soapy water, then rinse and dry thoroughly. For the interior of the pot, add a moderate amount of water, boil it for a few minutes, then discard the water and wipe the interior dry. This helps remove any manufacturing residues.
3. **Placement:** Place the multicooker on a stable, flat, heat-resistant surface, away from flammable materials. Ensure there is adequate ventilation around the appliance.

4. **Power Connection:** Connect the detachable power cord to the appliance and then plug it into a suitable electrical outlet. Ensure the power control dial is in the 'OFF' position before plugging in.



Image 4.1: The Audecook Multicooker as packaged, indicating its readiness for unpacking and initial setup.

5. OPERATING INSTRUCTIONS

The Audecook Multicooker features a dual power control system, allowing you to adjust the heat level for various cooking needs.

5.1 Power Settings

The power control dial on the front of the appliance has three settings:

- **OFF:** Turns the appliance off.
- **LOW (350W):** Ideal for gentle cooking, simmering, keeping food warm, or preparing delicate items like eggs, oatmeal, or soup.
- **HIGH (800W):** Suitable for rapid heating, boiling, frying, or cooking dishes that require higher temperatures, such as steaks, pasta, or hot pot.



Image 5.1: The rotary power control dial for adjusting heat levels.

5.2 General Cooking Steps

1. Ensure the multicooker is clean and dry before adding ingredients.
2. Add your desired ingredients to the pot. Do not overfill beyond the maximum fill line (if indicated) to prevent overflow during cooking.
3. Place the glass lid on the pot if required for your recipe.
4. Plug the power cord into a wall outlet.
5. Turn the power control dial to either 'LOW' (350W) or 'HIGH' (800W) depending on your cooking needs. The indicator light will illuminate.
6. Monitor your food during cooking. The transparent glass lid allows for easy viewing.
7. Once cooking is complete, turn the power control dial to 'OFF' and unplug the appliance from the wall outlet.
8. Carefully remove food using the provided spatula or ladle. Be cautious as the pot and its contents will be hot.

5.3 Cooking Examples

- **Boiling Water/Noodles:** Use 'HIGH' setting for faster boiling.

- **Frying Eggs/Steak:** Use 'HIGH' setting for searing and frying. Add a small amount of oil before heating.
- **Simmering Soup/Oatmeal:** Use 'LOW' setting to maintain a gentle simmer.
- **Hot Pot:** Use 'HIGH' setting to bring broth to a boil, then adjust to 'LOW' to maintain a simmer while cooking ingredients.



2.5L Multi-functional Pot

Immersively enjoy the joy of the kitchen and make the food colorful.

Stew

Steak

Frying

Pasta

Pancakes

Deep Fry

Image 5.2: The multicooker's versatility for preparing different types of meals.



Cooking steak.



Preparing an omelette.



Cooking noodles or soup.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Audecook Multicooker.

1. **Always Unplug:** Before cleaning, ensure the appliance is turned off and unplugged from the power outlet. Allow it to cool completely.
2. **Cleaning the Interior:** The non-stick honeycomb coating prevents food from sticking, making cleaning easy. Wipe the interior with a soft sponge or cloth and warm, soapy water. Rinse thoroughly with a damp cloth. Do not use abrasive cleaners, metal scrubbers, or sharp objects that could damage the non-stick surface.
3. **Cleaning the Exterior:** Wipe the exterior of the pot with a damp cloth. Do not immerse the main pot body in water.
4. **Cleaning the Lid and Accessories:** The glass lid, spatula, and soup ladle can be washed with warm, soapy water or placed in the dishwasher (if specified as dishwasher safe). Rinse and dry thoroughly.
5. **Storage:** Ensure all parts are completely dry before storing. Store the multicooker in a dry place, away from direct sunlight and moisture.



Easy to Clean



**Honeycomb
Nonstick Coating**

Image 6.1: The non-stick interior and ease of cleaning of the multicooker.

7. TROUBLESHOOTING

If you encounter any issues with your Audecook Multicooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly; Power outlet malfunction; Power control dial not set.	Ensure the power cord is securely plugged into both the appliance and a working wall outlet. Check the power control dial is set to 'LOW' or 'HIGH'. Test the outlet with another appliance.
Food sticks to the bottom.	Insufficient oil/liquid; Non-stick coating wear; Overheating.	Ensure adequate oil or liquid is used for frying. Avoid using metal utensils that can damage the non-stick coating. Ensure the pot is clean before use.
Appliance heats slowly.	'LOW' power setting selected; Too much food/liquid.	Switch to the 'HIGH' power setting for faster heating. Reduce the amount of food or liquid if necessary.

Problem	Possible Cause	Solution
Steam escaping excessively from lid.	Normal operation; Lid not seated properly.	A small amount of steam release is normal through the steam vent. Ensure the lid is properly seated on the pot.
Burning smell.	Food residue; Overheating; Dry burning.	Immediately turn off and unplug the appliance. Allow to cool and clean thoroughly. Ensure there is always liquid or food in the pot when operating to prevent dry burning.

If the problem persists after attempting these solutions, please contact customer support.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Audecook
Model Number	AHP-2.5L
Capacity	2.5 Liters
Color	Black
Material	Stainless steel (exterior), Non-stick coating (interior)
Product Dimensions (D x W x H)	9.45" x 9.45" x 6.69" (24cm x 24cm x 17cm)
Wattage	350W (LOW), 800W (HIGH)
Voltage	127 Volts
Item Weight	1.43 Kilograms (3.15 pounds)
Control Method	Rotary Dial
Operation Mode	Manual
Dishwasher Safe	Yes (Lid and accessories only; main pot body is hand wash only)
Special Feature	Portable, Dry Burn Protection, Detachable Power Cord



Image 8.1: Product dimensions for the Audecook Multicooker.

9. WARRANTY AND CUSTOMER SUPPORT

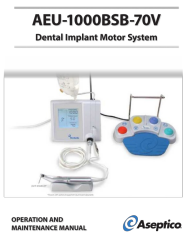 

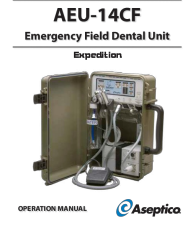 
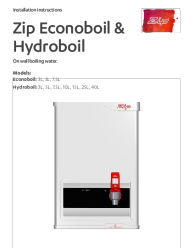 


Audecook is committed to providing high-quality products. For warranty information, product support, or any questions regarding your Audecook 2.5L Electric Hot Pot Multicooker, please contact our customer service team.

Refer to the contact information provided with your purchase or visit the official Audecook website for the most up-to-date support details.

Manufacturer: Audecook

ASIN: B0CKVT72TT

© 2025 Audecook. All rights reserved.

	<p>AEU-1000BSB-70V Dental Implant Motor System Operation and Maintenance Manual</p> <p>Comprehensive operation and maintenance manual for the Blue Sky Bio AEU-1000BSB-70V Dental Implant Motor System. Includes setup, operation, maintenance, troubleshooting, and specifications.</p>
	<p>Ceramax Electric Cooker 2.6 Quart - User Manual & Instructions</p> <p>Comprehensive user manual for the Emson Ceramax Electric Cooker (Model MDG-03/6456). Learn about its features, specifications, safe usage, cleaning, and storage for this 2.6-quart ceramic nonstick hot pot.</p>
	<p>Aseptic AEU-14CF Expedition Emergency Field Dental Unit Operation Manual</p> <p>Comprehensive operation manual for the Aseptic AEU-14CF Expedition Emergency Field Dental Unit, detailing setup, operation, maintenance, charging, troubleshooting, and warranty information for portable dental professionals.</p>
	<p>Zip Econoboil & Hydroboil Installation Instructions</p> <p>Comprehensive installation guide for Zip Econoboil and Hydroboil on-wall boiling water appliances, covering safety, technical specifications, step-by-step installation, operation, and troubleshooting.</p>
	<p>Aquaspray Mobile Water Filtration Systems Instruction Manual</p> <p>Comprehensive guide for Aquaspray mobile water filtration systems (10L, 15L, 25L, 2 Stage). Learn about setup, installation, operation, safety, and maintenance for achieving spotless cleaning results.</p>
	<p>AutoPot AirBase: Enhance Root Zone Drainage for Hydroponic Systems</p> <p>Learn how to install and use the AutoPot AirBase, a component designed to optimize root zone drainage and integrate with AirDomes in AutoPot watering systems. Includes setup guide for AirBase Square and Round.</p>