

[Manuals.plus](#) /

› [Briloner](#) /

› Briloner LED Dimmable Ceiling Light Instruction Manual (Model 3761015)

Briloner 3761015

Briloner LED Dimmable Ceiling Light Instruction Manual

Model: 3761015

1. INTRODUCTION

Thank you for choosing the Briloner LED Dimmable Ceiling Light. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read these instructions carefully before installation and retain them for future reference.

2. SAFETY INSTRUCTIONS

- **Electrical Safety:** Installation must be performed by a qualified electrician in accordance with local wiring regulations. Ensure the power supply is disconnected before installation or maintenance.
- **Handling:** Handle the light fixture with care to avoid damage. Do not apply excessive force.
- **Environment:** This product is designed for indoor use only. Do not expose to moisture or extreme temperatures.
- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use abrasive cleaners or solvents.
- **Light Source:** The LED light source is not replaceable. Do not attempt to open or modify the fixture.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged:

- Briloner LED Dimmable Ceiling Light (Model 3761015)
- Remote Control (requires 2 AAA batteries, included)
- Mounting Hardware
- Instruction Manual (this document)



White change
2700K - 6500K



Memory-
function



Dimmable

Image 1: The Briloner LED Ceiling Light shown with its accompanying remote control. The light fixture features a modern, rectangular design with two overlapping elements, while the remote control is white with grey buttons for power, dimming, color temperature, night light, and timer functions.

4. SETUP AND INSTALLATION

Note: Assembly is required. Ensure power is disconnected at the main circuit breaker before beginning installation.

1. **Prepare the Installation Area:** Choose a suitable location on the ceiling. Ensure the ceiling can support the weight of the fixture.
2. **Mount the Bracket:** Use the provided mounting hardware to securely attach the ceiling bracket to the ceiling. Mark drilling points, drill holes, insert wall plugs (if necessary), and fasten the bracket.
3. **Connect Wiring:** Connect the household electrical wires to the fixture's wires according to local electrical codes (Live, Neutral, Earth). Ensure all connections are secure.
4. **Attach the Fixture:** Carefully lift the light fixture and attach it to the mounted ceiling bracket. Secure it with the screws or fasteners provided.

5. **Insert Remote Batteries:** Open the battery compartment on the remote control and insert the 2 AAA batteries (included), observing polarity.
6. **Restore Power:** Once installation is complete and all connections are secure, restore power at the main circuit breaker.

5. OPERATING INSTRUCTIONS

The Briloner LED Ceiling Light offers various functions controlled by the included remote.

5.1 Basic Functions

- **ON/OFF:** Press the **ON** button to turn the light on, and **OFF** to turn it off.
- **Dimming:** Use the brightness adjustment buttons (sun icons) to continuously dim the light from 100% to 0%.
- **Color Temperature Adjustment:** Use the color temperature buttons (sun/snowflake icons) to adjust the light from warm white (2700K) to cool daylight (6500K).



Image 2: An illustration highlighting the key features of the Briloner LED Ceiling Light: "White change 2700K - 6500K" indicating adjustable color temperature, "Memory-function" for retaining settings, and "Dimmable" for brightness control.



Image 3: A visual representation of the adjustable color temperature feature. Three room settings are shown with the ceiling light emitting different light hues, ranging from warm yellow (2700K) on the left to cool blue (6500K) on the right, with a slider indicating the spectrum.

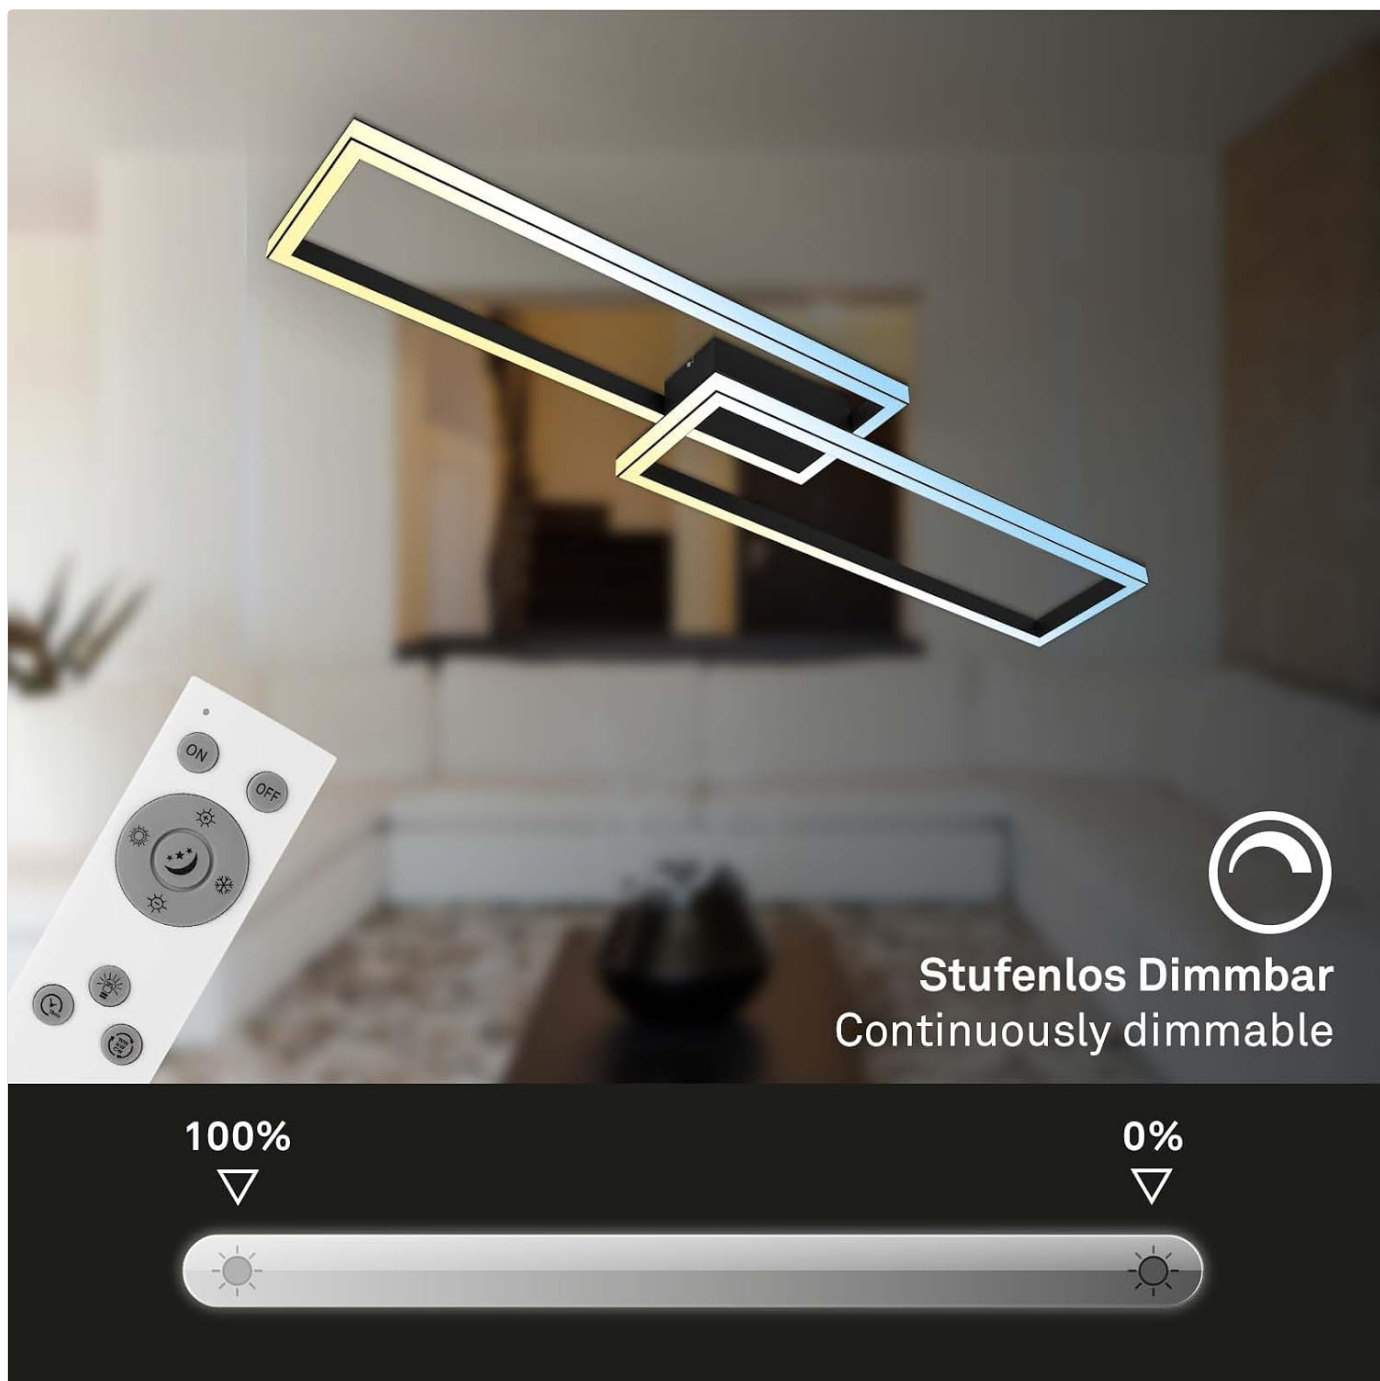


Image 4: A detailed view illustrating the horizontal light emission feature of the Briloner LED Ceiling Light. The image highlights how light is emitted from the lateral edges of the fixture, providing enhanced room illumination.

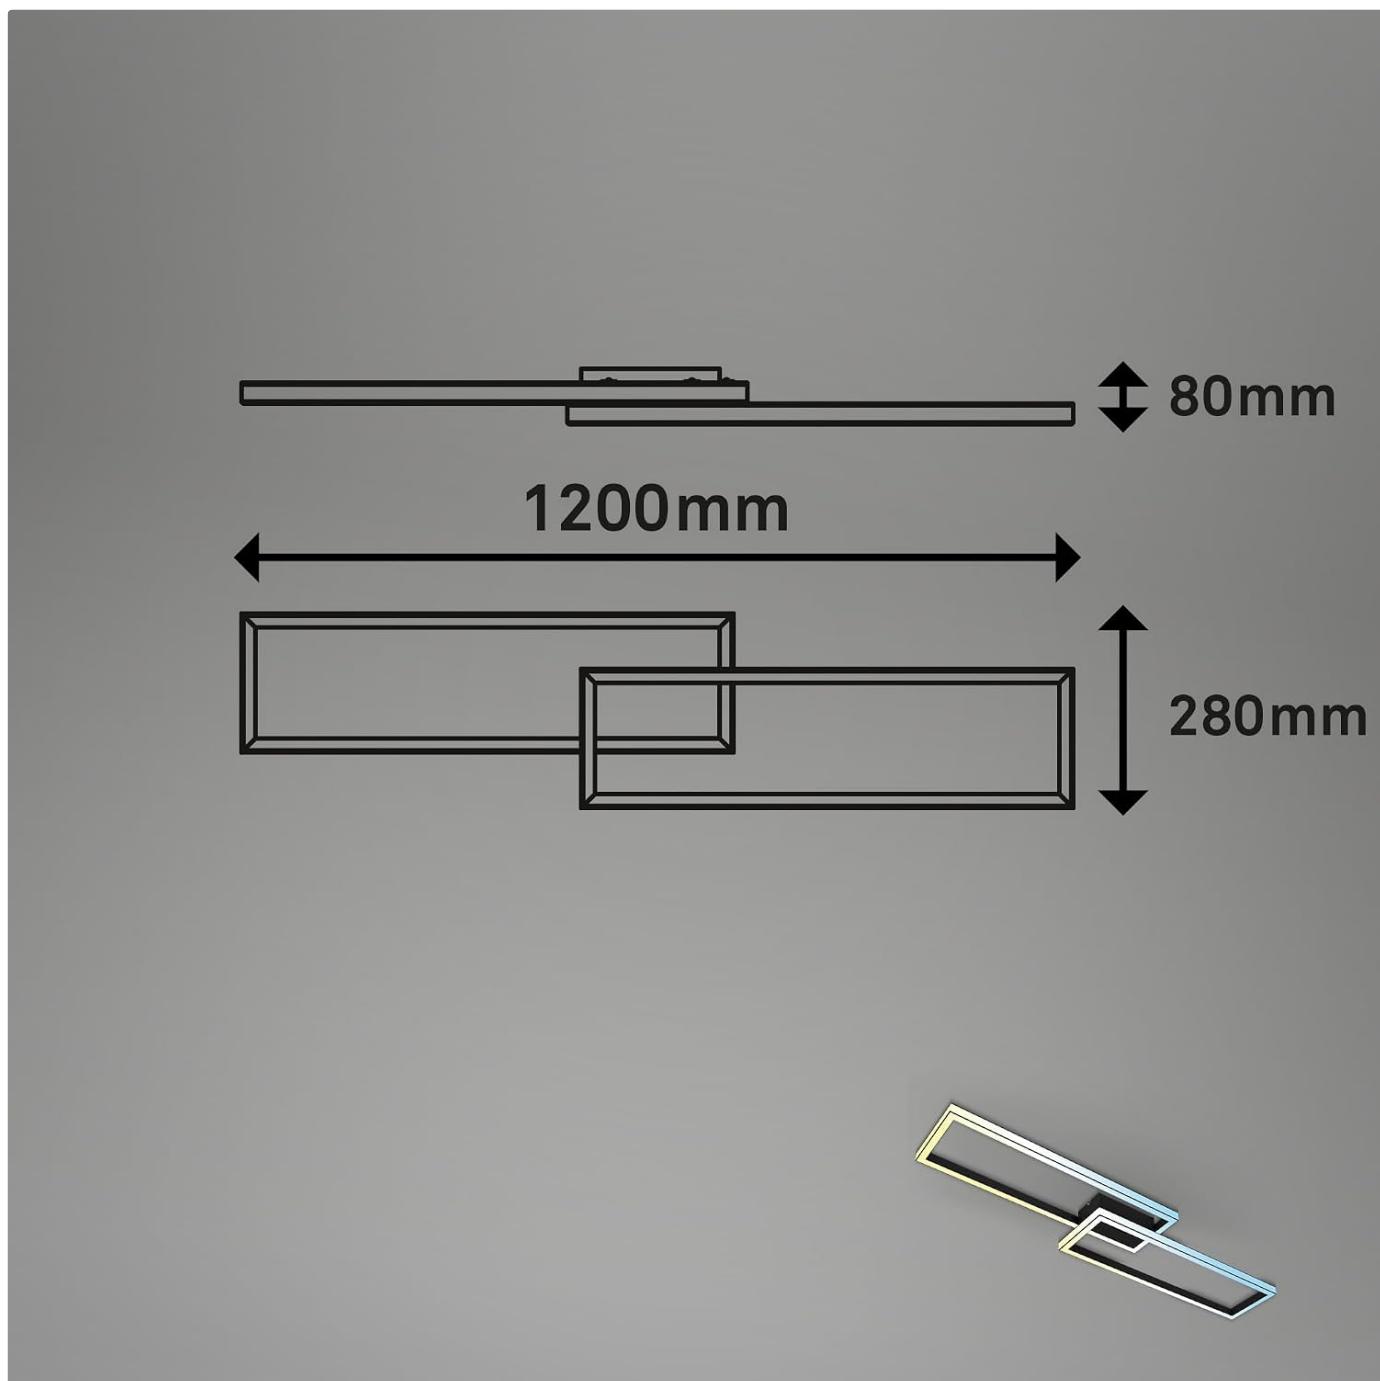


Image 5: This image illustrates the continuous dimming capability of the light. The light fixture is shown in a room, with a graphic slider below indicating brightness levels from 100% to 0%, demonstrating the smooth transition of light intensity.

5.2 Advanced Functions

- **Night Light Function:** Press the moon icon button to activate the night light mode, which provides a soft, low-intensity light suitable for nighttime.
- **Timer Function:** Press the clock icon button to set a timer for the light to automatically turn off after a specified duration (e.g., 30 minutes or 60 minutes, depending on the remote's specific markings).
- **Memory Function:** The light features an intelligent memory function. It will automatically recall the last brightness and color temperature settings used when turned back on.

6. MAINTENANCE

- **Cleaning:** Ensure the light is switched off and cool before cleaning. Wipe the surface with a soft, dry, lint-free cloth. Do not use liquid cleaners, sprays, or abrasive materials.

- **Bulb Replacement:** The LED light source is integrated and not user-replaceable. If the light source fails, the entire fixture must be replaced.
- **Remote Control Batteries:** Replace the AAA batteries in the remote control when its range or responsiveness decreases. Dispose of used batteries responsibly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power supply; loose wiring; remote control batteries depleted.	Check circuit breaker. Verify wiring connections (consult an electrician). Replace remote control batteries.
Remote control not responding.	Remote control batteries depleted; obstruction between remote and light; remote not paired (if applicable).	Replace remote control batteries. Ensure clear line of sight. Refer to pairing instructions (if any, not specified for this model).
Light flickers or dims unexpectedly.	Unstable power supply; faulty wiring; internal component issue.	Check power supply stability. Consult an electrician to inspect wiring. If problem persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Briloner
Model Number	3761015
Dimensions (L x W x H)	120 x 28 x 8 cm
Weight	1.42 kg
Material	Aluminium
Color	Black
Light Source	Integrated LED
Luminosity	5000 Lumens
Color Temperature	2700K (warm white) to 6500K (daylight)
Dimmable	Continuously Dimmable
Power Source	AC
Batteries Required	Yes (2 AAA for remote, included)
Energy Efficiency Class	F

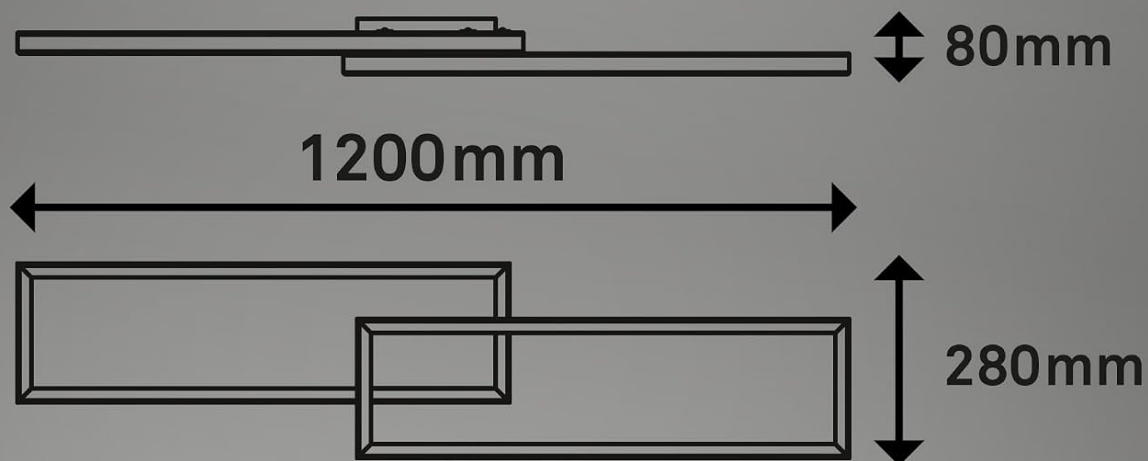


Image 6: A technical diagram illustrating the dimensions of the Briloner LED Ceiling Light. The diagram shows the length as 1200mm, width as 280mm, and height as 80mm, providing precise measurements for installation planning.

9. WARRANTY AND SUPPORT

Briloner products are manufactured with high-quality standards. For warranty information or technical support, please refer to the Briloner official website or contact your retailer. Keep your proof of purchase for warranty claims.

For more information, visit the official Briloner store: [Briloner Store](#)

© 2023 Briloner. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CKVZR32N>

More documents and user manuals: **<https://manuals.plus/>**