

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Soundlogic](#) /

› Soundlogic TWS Earbuds Model 80136 Instruction Manual

Soundlogic 80136

Soundlogic TWS Earbuds Model 80136 Instruction Manual

Model: 80136

1. INTRODUCTION

This manual provides detailed instructions for the Soundlogic TWS Earbuds Model 80136. Please read this guide thoroughly before using your earbuds to ensure proper operation and to maximize your listening experience. Keep this manual for future reference.

2. PACKAGE CONTENTS

- Soundlogic TWS Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- User Manual

Note: Specific accessories may vary.

3. PRODUCT OVERVIEW

The Soundlogic TWS Earbuds are designed for wireless audio playback and hands-free communication. They feature a noise-isolating design and precision drivers for clear sound.



Image 1: Soundlogic TWS Earbuds in their open charging case. The earbuds are black and securely seated within the black charging case, which features the 'Soundlogic' logo on its front surface.

Components:

- **Earbuds:** Left and Right, with integrated microphone and touch controls.
- **Charging Case:** Stores and charges the earbuds, protects them when not in use.
- **LED Indicators:** On earbuds and/or case to show charging status and pairing mode.
- **Charging Port:** Located on the charging case for power input.

4. SETUP

4.1. Charging the Earbuds and Case

1. **Initial Charge:** Before first use, fully charge both the earbuds and the charging case.
2. **Charge Case:** Connect the USB charging cable to the charging port on the case and to a USB power source (e.g., computer, wall adapter). The LED indicator on the case will show charging status.
3. **Charge Earbuds:** Place the earbuds into the charging case. Ensure they are correctly seated. The earbuds will begin charging automatically. LED indicators on the earbuds will show their charging status.
4. **Full Charge:** Once fully charged, the LED indicators will change or turn off. Disconnect the charging cable.

4.2. Pairing with a Bluetooth Device

1. **Power On:** Open the charging case or remove the earbuds from the case. The earbuds will automatically power on and enter pairing mode. You may hear an audio prompt.
2. **Activate Bluetooth:** On your smartphone, tablet, or laptop, enable Bluetooth.
3. **Search for Devices:** In your device's Bluetooth settings, search for available devices.
4. **Select Earbuds:** Locate and select "Soundlogic TWS" (or similar name) from the list of available devices.
5. **Confirm Pairing:** Once connected, you will hear a confirmation tone or voice prompt. The earbuds are now ready for use.
6. **Reconnect:** After initial pairing, the earbuds will automatically connect to the last paired device when removed from the case and Bluetooth is active on your device.

5. OPERATING INSTRUCTIONS

The Soundlogic TWS Earbuds feature touch controls for various functions. Specific touch patterns may vary slightly; refer to the quick start guide included with your product for precise details if available.

5.1. Power On/Off

- **Power On:** Remove earbuds from the charging case. They will power on automatically.
- **Power Off:** Place earbuds back into the charging case and close the lid. They will power off automatically. Alternatively, some models allow a long press on the touch area to power off manually.

5.2. Music Playback

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud (common control).
- **Previous Track:** Double tap on the left earbud (common control).
- **Volume Control:** Some models support triple tap or long press for volume adjustment. If not, adjust volume via your connected device.

5.3. Call Management

- **Answer/End Call:** Single tap on either earbud during an incoming call or active call.
- **Reject Call:** Long press on either earbud during an incoming call.

5.4. Voice Assistant

- **Activate Voice Assistant:** Triple tap on either earbud (common control for Siri, Google Assistant, etc.).

6. MAINTENANCE

6.1. Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Gently remove any earwax or debris from the earbud tips and speaker mesh using a small, soft brush or cotton swab.

6.2. Storage

- When not in use, always store the earbuds in their charging case to protect them from dust, damage, and to keep them charged.
- Store in a cool, dry place, away from extreme temperatures and direct sunlight.

7. TROUBLESHOOTING

Problem	Solution
Earbuds not pairing/connecting.	<ul style="list-style-type: none">◦ Ensure earbuds are charged.◦ Make sure Bluetooth is enabled on your device.◦ Turn off and on your device's Bluetooth.◦ Forget "Soundlogic TWS" from your device's Bluetooth list and re-pair.◦ Place earbuds back in the case, close, then reopen to reset.
No sound from one or both earbuds.	<ul style="list-style-type: none">◦ Check device volume.◦ Ensure earbuds are properly connected to your device.◦ Re-pair the earbuds.◦ Clean any debris from the earbud speaker mesh.
Earbuds not charging.	<ul style="list-style-type: none">◦ Ensure the charging cable is securely connected to both the case and power source.◦ Check if the charging case itself has power.◦ Clean the charging contacts on both the earbuds and inside the case.◦ Try a different charging cable or power adapter.

8. SPECIFICATIONS

- **Brand:** Soundlogic
- **Model Number:** 80136
- **Connectivity Technology:** Wireless (Bluetooth)
- **Wireless Communication Technology:** Bluetooth
- **Power Source:** Lithium-ion battery (integrated)

- **Color:** Black
- **Dimensions (Product):** 14 x 8 x 32 cm; 70 grams
- **Special Features:** Bluetooth, Noise-isolating design, Integrated microphone
- **Compatible Devices:** Laptop, Smartphone, Tablet
- **Audio Output Mode:** Stereo
- **Max Speaker Output Power:** 10 Watts

9. WARRANTY AND SUPPORT

This product comes with a 1-year availability for spare parts. For further assistance, troubleshooting not covered in this manual, or warranty claims, please contact Soundlogic customer support through your retailer or the official Soundlogic website.

Please retain your proof of purchase for warranty purposes.