

Soundlogic 80199

Soundlogic TWS In-Ear Bluetooth Earbuds User Manual

Model: 80199 | Brand: Soundlogic

INTRODUCTION

Thank you for choosing the Soundlogic TWS In-Ear Bluetooth Earbuds. These earbuds are designed to provide a high-quality wireless audio experience with convenience and portability. This manual will guide you through the setup, operation, and maintenance of your new earbuds.

PACKAGE CONTENTS

Please ensure all items are present in your package:

- Soundlogic TWS In-Ear Bluetooth Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- User Manual

SAFETY INFORMATION

Read all safety warnings before using this product. Failure to follow these instructions may result in electric shock, fire, or other injuries.

- Do not expose the earbuds or charging case to extreme temperatures, humidity, or liquids.
- Do not disassemble or attempt to repair the device yourself.
- Keep out of reach of children.
- Dispose of the product responsibly according to local regulations.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

1. Place the earbuds into the charging case.
2. Connect the USB charging cable to the charging port on the case and to a USB power source (e.g., computer, wall adapter).
3. The indicator lights on the case and/or earbuds will show charging status. They will typically turn off or change color when fully charged.

2. Bluetooth Pairing

Pair your earbuds with your device (smartphone, tablet, laptop) for the first time.

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode (indicator lights may flash).
3. On your device, go to Bluetooth settings and turn Bluetooth on.
4. Search for available devices and select "Soundlogic TWS" (or similar name) from the list.
5. Once connected, the earbuds will indicate successful pairing (e.g., a voice prompt or steady light).
6. For subsequent use, the earbuds will automatically connect to the last paired device when taken out of the case.



This image displays the Soundlogic TWS In-Ear Bluetooth Earbuds in white, alongside their compact white charging case. The earbuds feature a sleek, minimalist design, and the charging case is designed for portability and protection.

OPERATING INSTRUCTIONS

The Soundlogic TWS earbuds offer intuitive controls for managing your audio and calls.

Music Playback

- **Play/Pause:** Tap once on either earbud.
- **Next Track:** Double-tap the right earbud.

- **Previous Track:** Double-tap the left earbud.

Call Management

- **Answer/End Call:** Tap once on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.

Voice Assistant

- **Activate Voice Assistant:** Triple-tap either earbud (functionality depends on your connected device).

MAINTENANCE

Proper care will extend the life of your Soundlogic TWS earbuds.

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged.
- **Battery Care:** Avoid fully discharging the battery frequently. Charge regularly to maintain battery health.

TROUBLESHOOTING

If you encounter issues with your earbuds, try the following solutions:

Problem	Solution
Earbuds not pairing	Ensure earbuds are charged. Turn off and on Bluetooth on your device. Forget the device in Bluetooth settings and re-pair.
No sound from one earbud	Place both earbuds back in the case, close it, then open again. Ensure both are charged.
Low volume or poor sound quality	Clean any debris from the earbud speakers. Adjust volume on your connected device. Ensure earbuds are properly seated in your ears.
Earbuds not charging	Check the charging cable and power source. Ensure earbuds are correctly placed in the charging case. Clean charging contacts.

SPECIFICATIONS

Feature	Detail
Brand	Soundlogic
Model Number	80199
Connectivity Technology	Wireless (Bluetooth)
Special Features	Bluetooth, Noise Isolation
Speaker Type	Multimedia
Material	Plastic

Feature	Detail
Product Dimensions (L x W x H)	8 x 19 x 37 cm
Weight	90 grams
Compatible Devices	Mobile phones, tablets, laptops, desktop computers, TVs, smart speakers, music production equipment, car audio systems, game consoles, motorcycles
Specific Uses	Sport, Travel

WARRANTY AND SUPPORT

Soundlogic provides a 1-year availability for spare parts for this product. For further support or warranty claims, please refer to the contact information provided with your purchase or visit the official Soundlogic website.

© 2023 Soundlogic. All rights reserved. Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question