

[Manuals.plus](#) /

› [Gyfirmoie](#) /

› Gyfirmoie Dresser-770 6-Drawer Dresser with Power Outlet and LED Light User Manual

Gyfirmoie Dresser-770

Gyfirmoie Dresser-770 User Manual

6-Drawer Dresser with Power Outlet and LED Light

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Keep this manual for future reference.


- **Anti-Tipping Device:** Always install the included anti-tipping device to prevent serious injury from furniture tip-over.
- **Assembly:** Assemble the unit on a soft, clean surface to prevent scratches. Ensure all parts are securely fastened before use.
- **Weight Capacity:** Do not overload drawers or the top surface. Refer to specifications for weight limits.
- **Electrical Safety:** Ensure the power outlet is properly grounded. Do not exceed the rated electrical load. Keep liquids away from electrical components.
- **Children:** Keep small parts and packaging materials away from children during assembly.

HWPW	0.05 ppm
PB	0.09 ppm
MDF	0.11 ppm
Thin MDF	0.13 ppm
Laminated Product	0.05 ppm

For the maximum permissible limit of Laminated product, Effective date is March 22, 2024

Unless otherwise stated, the decision rule for conformity reporting is based on Binary Statement for Simple Acceptance Rule ($w=0$) stated in ILAC-G8:09/2019.

Sample Photo:

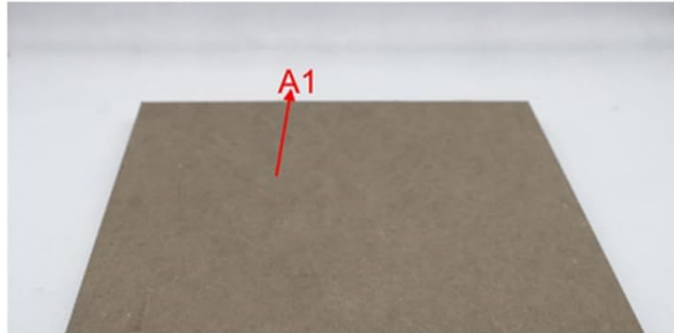

Sample Photo:

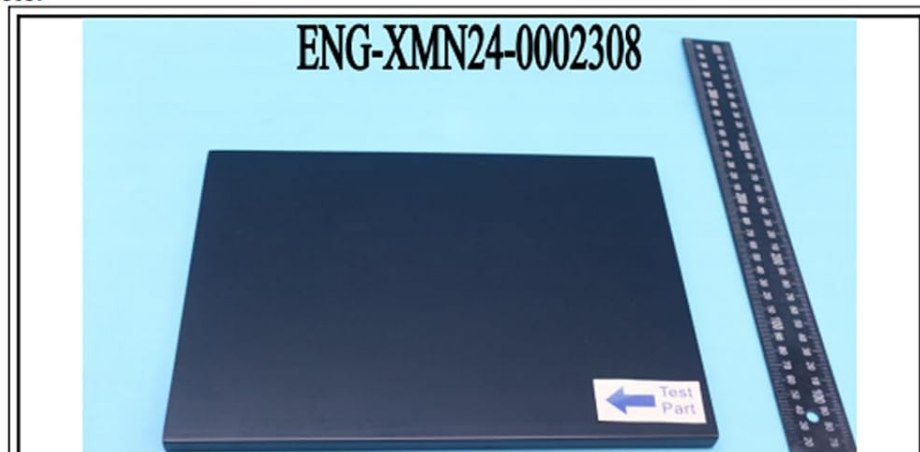 


Image 1.1: Illustration of the anti-tipping device. This device must be securely installed to prevent the dresser from tipping over.

2. PACKAGE CONTENTS

Verify that all components and hardware are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

Charging Station

Provide a more convenient charging method



-125V/12A-
2AC outlets



-5V/2A-
2USB Ports



-4.9 Feet-
Power Cord



Image 2.1: Exploded view showing all numbered wooden panels and lettered hardware components included in the package. Please cross-reference with the provided parts list in your physical manual.

Component List:

- Numbered wooden panels (e.g., 1x1, 10x1, 12x4, etc.)
- Lettered hardware (e.g., A x55+6, B x16+1, etc.)
- LED light strip (Item 21)
- Power outlet unit (Item 22)
- Anti-tipping device (Item L)

3. ASSEMBLY INSTRUCTIONS

Follow the step-by-step instructions provided in the accompanying manual. An installation video is also available for visual guidance.

Your browser does not support the video tag.

Video 3.1: Official installation video for the 6-drawer dresser. This video demonstrates the assembly process from unboxing to final setup, including drawer construction and attachment of the power outlet and LED strip.

General Assembly Steps:

1. **Prepare Components:** Lay out all numbered boards and hardware.
2. **Construct Frame:** Assemble the main frame of the dresser using the designated screws and connectors.
3. **Install Drawer Slides:** Attach the metal drawer slides to the interior panels of the dresser frame.
4. **Assemble Drawers:** Construct each of the six drawers individually, ensuring the bottom panel is securely inserted and the drawer slides are attached.
5. **Install LED Strip:** Secure the multi-color RGB LED light strip into the designated channel in the open storage cubby.
6. **Integrate Power Outlet:** Install the power outlet unit into the pre-cut opening on the top surface of the dresser.
7. **Insert Drawers:** Carefully slide the assembled drawers into their respective slots.
8. **Attach Anti-Tipping Device:** Secure the anti-tipping device to the back of the dresser and to a wall stud, following the instructions in Section 1.

4. OPERATING INSTRUCTIONS

4.1 Power Outlet Usage

The dresser is equipped with an integrated power outlet for convenient device charging.

- **AC Outlets:** Features 2 standard 125V/12A AC outlets for powering small appliances.
- **USB Ports:** Includes 2 USB ports (5V/2A) for charging mobile phones, tablets, and other USB-powered devices.
- **Power Cord:** The unit comes with a 4.9-foot power cord. Ensure it is plugged into a suitable wall outlet.

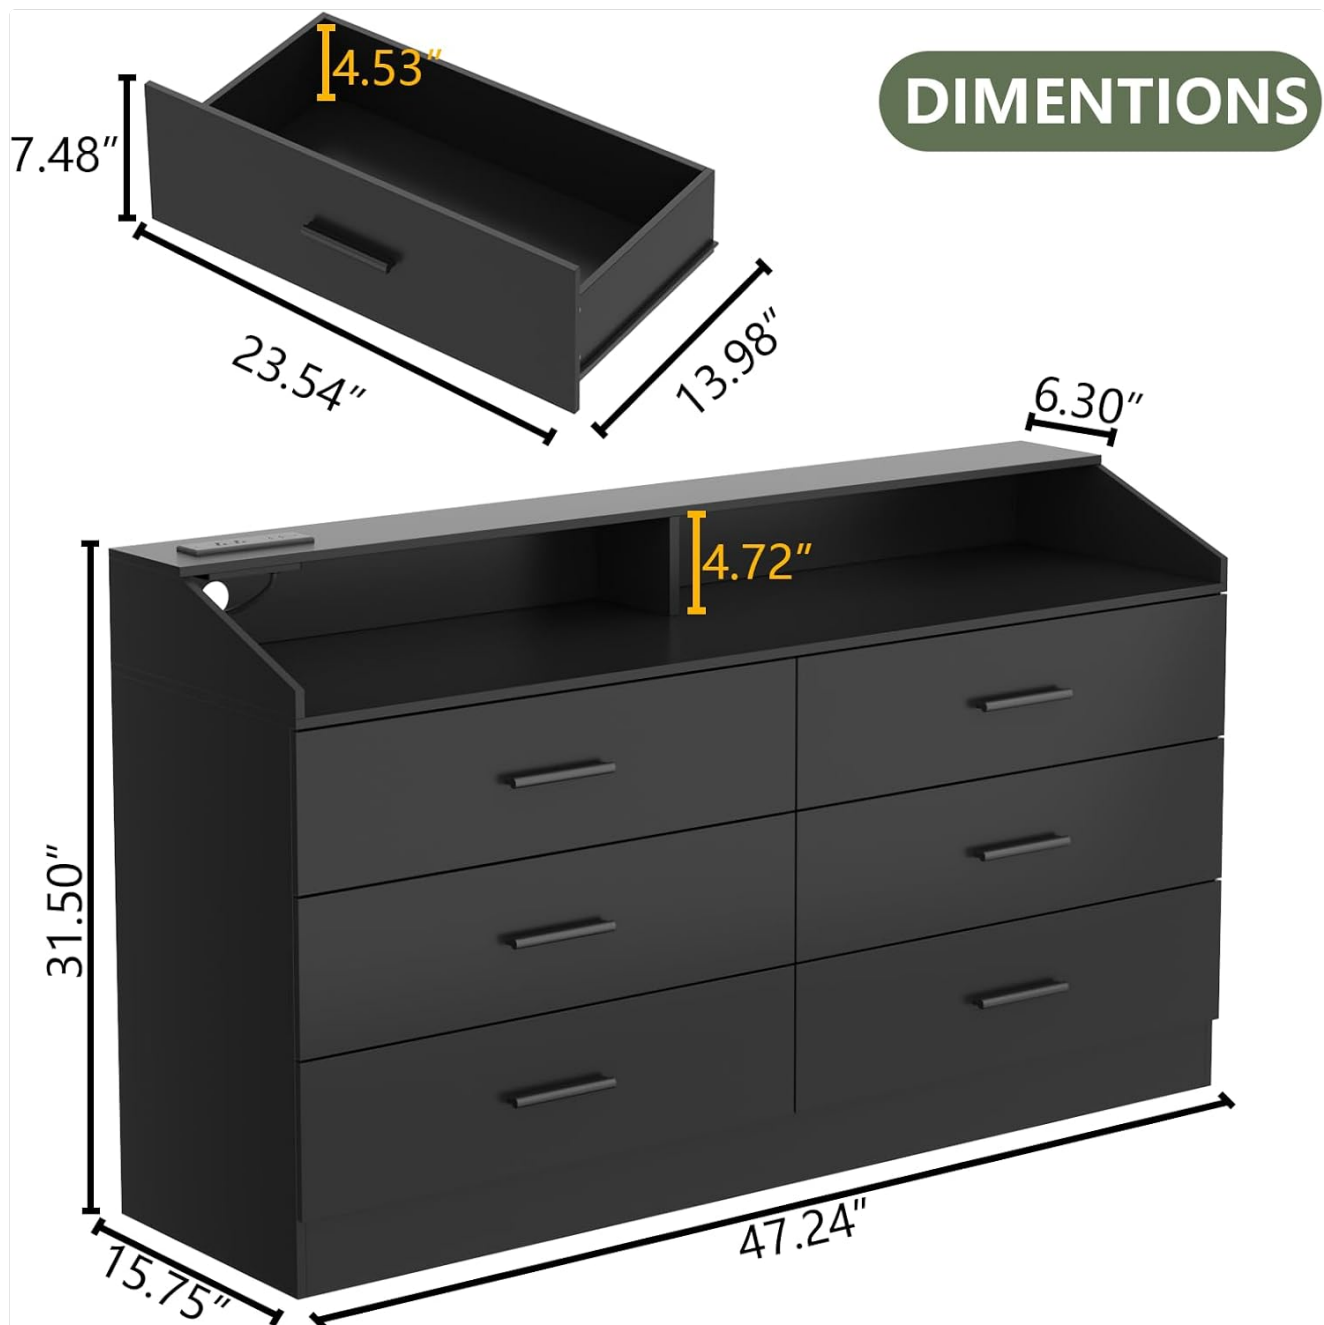 


Image 4.1: Detail of the charging station, showing two AC outlets and two USB ports, designed for convenient power access.

4.2 LED Light Operation

The dresser features multi-color RGB LED light strips for customizable ambiance.

- **Control Methods:** The LED lights can be controlled via a physical button or a dedicated mobile application.
- **Color and Brightness:** Adjust the color and brightness settings to your preference using the control interface.
- **Music Sync Mode:** The lights can synchronize with the rhythm of music played nearby.
- **Timer Setting:** Use the app to set a timer for automatic turning on or off of the lights.

Adjustable RGB Light Strips



Key Control



RGB Colors



Light Mode



Mic Mode



Music Mode

 


Timing Mode




App Control

Sync your lights with your favourite music

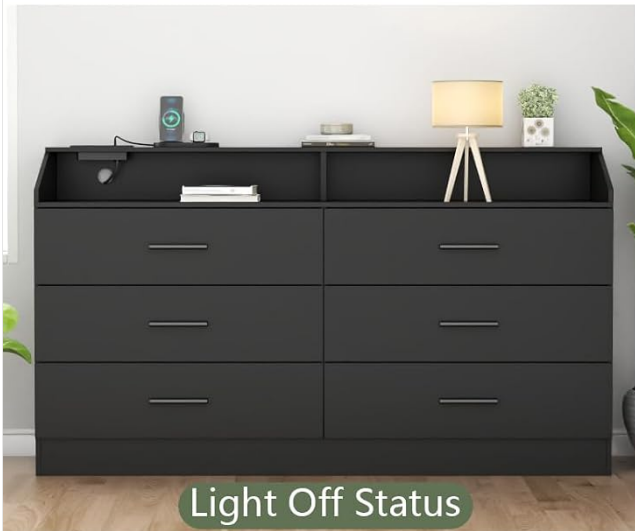

Light Off Status

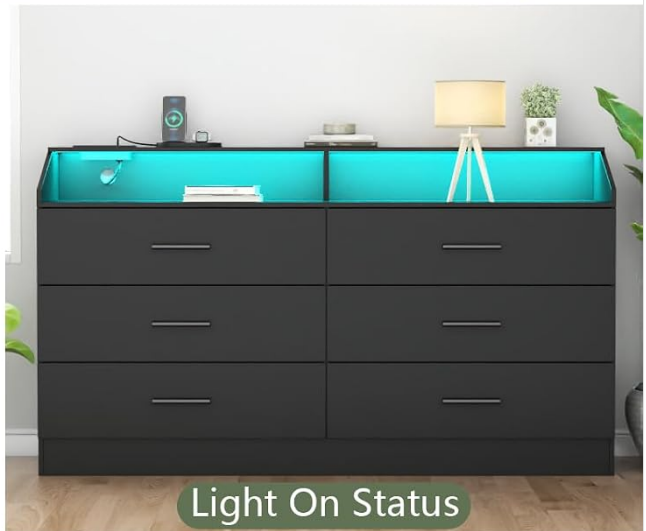 

Light On Status



Image 4.2: The dresser showcasing its adjustable RGB LED light strips, with various color options and control features like key control, app control, music mode, and timer setting.

5. MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your dresser.

- **Cleaning:** Wipe the dresser surfaces with a dry cloth. For minor spills, use a slightly damp cloth and dry immediately. Avoid abrasive cleaners.
- **Material:** The dresser is constructed from premium MDF with a black finish, designed to be scratch-resistant.
- **Drawer Slides:** The ball-bearing drawer slides are designed for smooth operation. Periodically check for debris and ensure they are clean.



Image 5.1: Detailed view highlighting the premium MDF material, durable metal handles, smooth metal sliding rails for drawers, and a wire hole for cable management.

6. TROUBLESHOOTING

If you encounter any issues with your dresser, refer to the following common solutions:

- **Drawers Not Sliding Smoothly:** Check that the drawer slides are correctly aligned and free of obstructions. Ensure all screws on the slides are tightened.
- **LED Lights Not Functioning:** Verify that the LED strip is properly connected to its power source and that the power outlet is active. Check the control button or app settings.
- **Power Outlets Not Working:** Ensure the dresser's main power cord is securely plugged into a live wall outlet. Check for tripped circuit breakers.
- **Wobbling:** Confirm that all assembly screws are tightened. Ensure the dresser is placed on a level surface. Adjust leveling feet if present.

For persistent issues, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Gyfimoie
Model Name	Dresser-770
Item Model Number	G-CA-770
Product Dimensions	15.75"D x 47.24"W x 31.5"H
Color	Black
Room Type	Cloakroom, Entryway, Dressing Room, Living Room, Bedroom
Furniture Finish	Black
Drawer Type	Ball Bearing Slide
Product Care Instructions	Wipe with Dry Cloth
Assembly Required	Yes
Item Weight	92.8 pounds (42.2 Kilograms)
Number of Pieces	1

8. WARRANTY AND SUPPORT

For warranty information, replacement parts, or technical assistance, please refer to the contact details provided with your purchase documentation or visit the official Gyfimoie store online.

[Visit the Gyfimoie Store](#)

© 2025 Gyfimoie. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question