

Xavax B0CKWD9C7R

Xavax Angled Siphon Connector Instruction Manual

Model: B0CKWD9C7R

[Product Overview](#) [Package Contents](#) [Specifications](#) [Setup & Installation](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The Xavax Angled Siphon Connector is designed for the secure and space-saving connection of washing machine and dishwasher drain hoses to built-in wall siphons. This adapter prevents the drain hose from kinking, ensuring unobstructed water drainage and allowing appliances to be placed closer to the wall. It features a practical 3/4 inch angled spout, suitable for drain hoses with diameters of 20 mm, 23 mm, and 3/4 inch. The connector includes a conical fitting and a hose clamp for a reliable seal.



Image: The main Xavax Angled Siphon Connector, showing its white plastic construction and angled design for connecting a drain hose to a siphon.

2. PACKAGE CONTENTS

Please check that all items are present in the package:

- 1 x Angled Siphon Connector
- 1 x Gasket
- 1 x Plastic Rosette
- 1 x Hose Clamp



Image: All components included in the package: the angled connector, a blue conical gasket, a white plastic rosette, and a metal hose clamp.

3. SPECIFICATIONS

Brand	Xavax
Model	B0CKWD9C7R
Material	Plastic
Color	White
Item Dimensions (LxWxH)	34 x 23 x 20 mm
Thread Size	3/4 inch
Thread Type	BSP
Item Weight	39.24 Grams
Number of Pieces	4

4. SETUP & INSTALLATION

Follow these steps for proper installation of the Xavax Angled Siphon Connector:

1. **Prepare the Wall Siphon:** Ensure the wall siphon connection point is clean and free from debris.
2. **Insert the Gasket:** Place the provided gasket into the threaded end of the angled siphon connector. This gasket ensures a watertight seal.



Image: The angled siphon connector with the black rubber gasket correctly seated inside its threaded opening, ready for connection.

3. **Attach to Wall Siphon:** Screw the angled siphon connector onto the threaded outlet of your built-in wall siphon. Hand-tighten first, then use a suitable wrench if necessary, being careful not to overtighten and damage the plastic threads.
4. **Connect the Drain Hose:** Slide the hose clamp over the end of your washing machine or dishwasher drain hose. Then, push the drain hose firmly onto the conical spout of the angled connector. The conical design accommodates various hose diameters (20mm, 23mm, 3/4 inch).



Image: A metal hose clamp, used to secure the drain hose to the connector's spout.

5. **Secure the Hose:** Position the hose clamp over the drain hose where it connects to the spout and tighten it securely with a screwdriver to prevent leaks.
6. **Install the Rosette:** If desired, place the plastic rosette over the connection point against the wall for a neat finish.



Image: A white plastic rosette, used to cover the wall opening for a clean aesthetic.

Important: Ensure all connections are tight to prevent water leaks. Run a test cycle on your appliance and check for any drips or moisture around the connection points.

5. OPERATION

Once installed, the Xavax Angled Siphon Connector operates passively by providing a secure and kink-free pathway for wastewater from your appliance to the wall siphon. No further user interaction is required for its basic function.

Ensure that the drain hose is not obstructed or pinched at any point between the appliance and the connector to maintain proper drainage.

6. MAINTENANCE

The Xavax Angled Siphon Connector requires minimal maintenance. Follow these guidelines to ensure its longevity and proper function:

- **Regular Inspection:** Periodically check the connector and hose for any signs of wear, cracks, or leaks.
- **Cleaning:** If necessary, clean the exterior of the connector with a damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the plastic.
- **Gasket Check:** Over time, gaskets can degrade. If you notice any leaks from the threaded connection, inspect the gasket and replace it if it appears worn or damaged.

- **Hose Clamp Tightness:** Ensure the hose clamp remains tight. If the hose feels loose or leaks, re-tighten the clamp.

7. TROUBLESHOOTING

If you encounter issues with your Xavax Angled Siphon Connector, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Water leak at the wall siphon connection	Loose connection, damaged gasket, or missing gasket.	Ensure the connector is tightly screwed onto the wall siphon. Check if the gasket is properly seated and undamaged. Replace the gasket if necessary.
Water leak at the drain hose connection	Loose hose clamp, improperly seated hose, or damaged hose.	Tighten the hose clamp. Ensure the drain hose is fully pushed onto the conical spout. Inspect the drain hose for cracks or damage and replace if found.
Slow or no drainage	Kinked drain hose, blockage in the hose or siphon, or improper installation.	Check the entire length of the drain hose for kinks or obstructions. Ensure the connector is not restricting flow. If the problem persists, the blockage might be in the wall siphon itself.

8. WARRANTY & SUPPORT

Warranty Information

Xavax provides a 1-year availability period for spare parts within the EU. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact Xavax customer service.

Customer Support

If you require further assistance, have questions about installation, or need to report a defect, please contact Xavax customer support through their official website or the retailer from whom you purchased the product. Please have your product model number (B0CKWD9C7R) and purchase details ready when contacting support.