

Wahl 3026018

Wahl USA Pro Series High Visibility Skeleton Style Trimmer

Model: 3026018 | Brand: Wahl

INTRODUCTION AND OVERVIEW

The Wahl USA Pro Series High Visibility Skeleton Style Trimmer is a versatile grooming tool designed for precise beard trimming, detailing, body grooming, and shaving. Its innovative design ensures clear visibility and exceptional cutting performance.

- **360 Extreme Visibility:** The exposed skeleton trimming head provides an unobstructed view for precise lines and detailing.
- **Multi-Purpose:** Includes a DLC T-Blade for trimming, a rotary nose trimmer head, and a dual foil shaver head for comprehensive grooming.
- **Forever Blade:** Features a black diamond-hard carbon coating for smoother, cooler cutting and a near zero gap design for a 4x closer cut.
- **Waterproof Design:** Suitable for wet or dry use, allowing for easy cleaning under running water.
- **Lithium-Ion Power:** Provides up to 2 hours of cordless runtime on a full 2-hour charge.



Image: The Wahl Pro Series High Visibility Skeleton Style Trimmer shown with its packaging and various interchangeable heads, highlighting its versatile design.

SETUP AND INITIAL USE

Charging the Trimmer

Before first use, fully charge your trimmer. Connect the USB charge cable to the trimmer's charging port and a compatible USB power source. The battery charging indicator light will blink while charging and become solid when fully charged. A full charge provides up to 2 hours of cordless use.



Image: Diagram illustrating the USB charging port and the battery indicator light, showing blinking for charging and solid for fully charged status.

Attaching and Changing Heads

The trimmer comes with three interchangeable heads: the DLC T-Blade, Rotary Nose Trimmer Head, and Dual Foil Shaver Head. To change heads, simply rotate the knurled thumb screw to loosen, attach the desired head, and rotate to tighten. Ensure the head is securely fastened before use.

EASY DETACHABLE HEADS

with knurled thumb screw
for ease of use



Image: Visual guide demonstrating how to easily detach and attach the trimmer heads using the knurled thumb screw.

Using Guide Combs

The kit includes 8 premium guide combs (1/16" to 1/2") for various cutting lengths. Select the appropriate comb and securely attach it to the DLC T-Blade for desired hair length.

PREMIUM GUIDE COMBS

providing even cutting lengths from 1/16"-1/2" (1.5mm-13mm)

**SMOOTH
EASY-GLIDE
TEETH**

8
UP TO 8
CUTTING LENGTHS



**EASY-TO-SEE
COMB SIZES**

Image: A set of eight premium guide combs with smooth, easy-glide teeth, showing their various sizes for different cutting lengths.

OPERATING INSTRUCTIONS

General Operation

The trimmer is fully waterproof and can be used for wet or dry grooming. To activate the travel lock, hold down the power button for 5 seconds. Repeat to deactivate.



Image: The Wahl trimmer being rinsed under running water, demonstrating its fully waterproof design for easy cleaning and wet grooming.

Using the DLC T-Blade

The DLC T-Blade is ideal for precise trimming and edging of facial hair, beard lines, and necklines. Its 360-degree exposed design provides extreme visibility for clean and crisp results.

A man with short brown hair and a light beard is using a Wahl trimmer to trim his beard. He is looking slightly to the right. The trimmer is silver and black. In the top right corner, there is a circular inset showing four different Wahl trimmer heads (rotary nose trimmer, dual foil shaver, and two different trimmer heads) arranged around a central Wahl trimmer body. The background is a soft, out-of-focus indoor setting with a warm light source.

**360° DESIGN
FOR 5X GREATER
VISIBILITY***

EXTREME VISIBILITY
clear line of sight for precise grooming

*when compared to our standard stainless steel trimmer

Image: A man using the Wahl trimmer to precisely trim his beard, illustrating the extreme visibility provided by the 360-degree design.

Using the Rotary Nose Trimmer Head

Attach the rotary nose trimmer head for hygienic and comfortable removal of unwanted nose and ear hair.

Using the Dual Foil Shaver Head

For an ultra-close shave on the face and neck areas, attach the dual foil shaver head.




DUAL FOIL SHAVER

for cleaning up neck,
cheek, and body hair



SKIN-CLOSE PRECISION BLADE

to trim and edge
facial hair

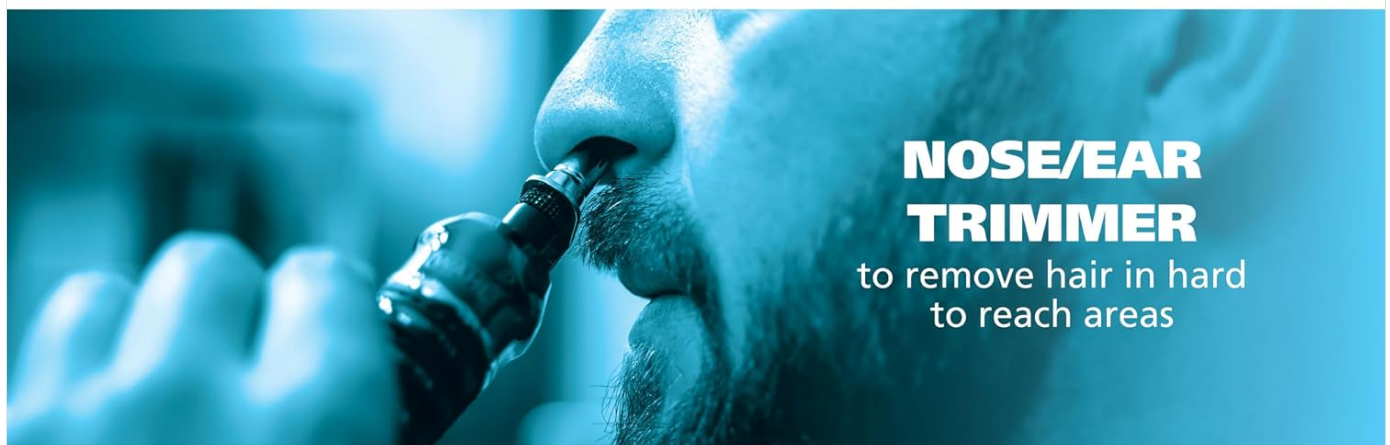

NOSE/EAR TRIMMER

to remove hair in hard
to reach areas

Image: Three close-up images showing the Wahl trimmer with its dual foil shaver head, precision blade, and nose/ear trimmer head in use for various grooming tasks.

MAINTENANCE

Cleaning the Trimmer

The trimmer heads are rinseable for hygienic cleaning. After each use, remove the head and rinse it under running water. Use the included cleaning brush to remove any trapped hairs from the blades.

Blade Oiling

To maintain optimal cutting performance and blade longevity, apply a few drops of the included blade oil to the blades at least every other trim. This ensures smooth operation and prevents rust.

Storage

When storing the trimmer, always unplug the charging cord from the trimmer when not in use. Store the trimmer and its accessories in the provided premium handle storage case to protect them.

TROUBLESHOOTING

If you encounter any issues with your Wahl Pro Series Trimmer, please refer to the following common solutions:

- **Trimmer not turning on:** Ensure the trimmer is fully charged. Check the charging indicator light.
- **Attachment head detaches during use:** Ensure the attachment head is securely fastened by rotating the thumb screw until it is tight.
- **Poor cutting performance:** Clean the blades thoroughly and apply blade oil as per maintenance instructions. Ensure the correct guide comb is properly attached.

For further assistance, please contact Wahl customer support or visit their official website.

SPECIFICATIONS

Product Dimensions	1.57 x 1.57 x 6.1 inches
Item Weight	7.8 ounces (221 Grams)
Item Model Number	3026018
UPC	043917018584
Brand	Wahl
Manufacturer	Wahl Clipper Corp
Power Source	Lithium-Ion Cordless USB Rechargeable
Run Time	Up to 2 hours

WARRANTY AND SUPPORT

Wahl products are designed for quality and durability. For specific warranty information regarding your Wahl USA Pro Series High Visibility Skeleton Style Trimmer, please refer to the instruction booklet included with your product or visit the official Wahl website.

For product tutorials, frequently asked questions, or to contact customer support, please visit [wahlusa.com](https://www.wahlusa.com). You can also find more information and products at the [Wahl Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question