

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Hamilton Beach](#) /
- › [Hamilton Beach Digital Electric Bread Maker Machine \(Model 29987\) - Instruction Manual](#)

## Hamilton Beach 29987

# Hamilton Beach Digital Electric Bread Maker Machine Instruction Manual

Model: 29987

## PRODUCT OVERVIEW

---

The Hamilton Beach Digital Electric Bread Maker Machine (Model 29987) is designed to simplify the process of making homemade bread and dough. This appliance features 14 settings, allowing for a wide variety of bread types, and offers options for 3 loaf sizes and 3 crust shades to customize your baking experience.



Image: The Hamilton Beach Digital Electric Bread Maker Machine, featuring a white top and stainless steel body, designed for countertop use.

## SETUP AND FIRST USE

Before using your bread maker for the first time, ensure all packaging materials are removed. Wash the removable nonstick bread pan, kneading paddle, and any included accessories (measuring cup, spoon, paddle removing tool) with warm, soapy water. Rinse thoroughly

and dry completely. Place the bread maker on a stable, heat-resistant surface, ensuring adequate ventilation around the unit.



# Easy to clean — dishwasher safe accessories included

Removable nonstick bread pan, kneading paddle, paddle removing tool, measuring cup & spoon

Image: Included accessories for the bread maker: a removable nonstick bread pan, a kneading paddle, a paddle removing tool, a measuring cup, and a measuring spoon. These components are designed for easy cleaning.

## OPERATING INSTRUCTIONS

The Hamilton Beach Bread Maker simplifies bread baking into three primary steps: adding ingredients, selecting the desired cycle, and pressing start. Follow these guidelines for optimal results.

### Basic Operation Steps

1. **Add Ingredients:** Place the kneading paddle into the bread pan. Add liquid ingredients first, followed by dry ingredients. Ensure yeast is added last, placed in a small indentation on top of the dry ingredients, away from liquids and salt.
2. **Select Cycle:** Close the lid and plug in the bread maker. Use the control panel to select one of the 14 available settings.
3. **Press Start:** Initiate the baking process by pressing the start button.

# Make homemade bread in 3 easy steps

Add ingredients, select cycle and press start




Image: The Hamilton Beach bread maker positioned on a kitchen counter, accompanied by ingredients such as flour, butter, and sugar, alongside freshly baked and sliced bread, illustrating the ease of making homemade bread.

## Available Settings and Customization

The bread maker offers 14 distinct settings to accommodate various recipes and preferences:

- **Basic:** For white and mixed breads.
- **French:** For light, crispy crust breads.
- **Gluten-Free:** Specifically designed for gluten-free recipes.
- **Whole Grain:** For breads made with whole wheat flour.
- **Express (1 lb., 1.5 lb., 2 lb.):** Faster cycles for various loaf sizes.
- **Package (Quick) Bread:** For quick breads that use baking powder or soda.
- **Sweet:** For sweet breads with high sugar content.
- **Dough:** Prepares dough for rolls, pizza, or other baked goods.
- **Cake:** For baking cakes.
- **Jam Bake:** For making homemade jams.
- **Artisan Dough:** For specialized dough preparations.

You can also customize your bread by selecting from **3 loaf sizes** (1 lb., 1.5 lb., or 2 lb.) and **3 crust shades** (light, medium, or dark) to achieve your preferred texture and appearance.

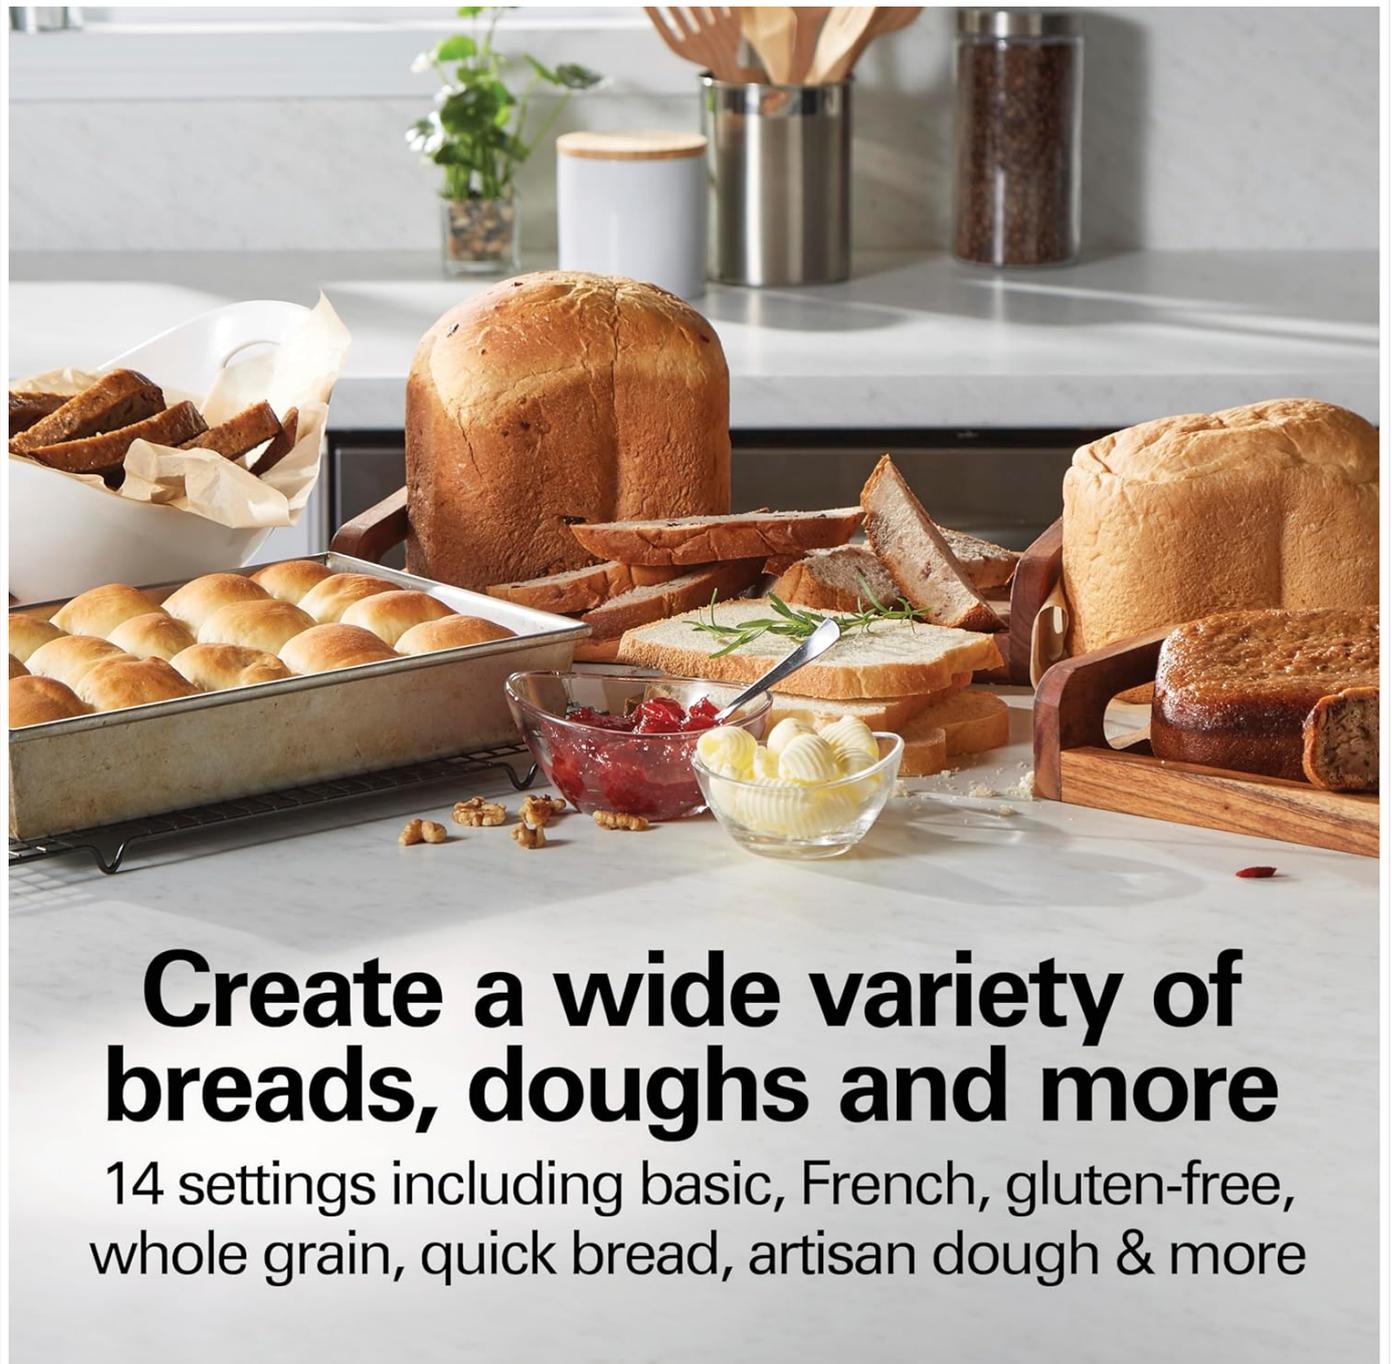

# Create a wide variety of breads, doughs and more

14 settings including basic, French, gluten-free, whole grain, quick bread, artisan dough & more

Image: A variety of baked goods, including several loaves of bread, dinner rolls in a pan, and sliced bread with jam and butter, demonstrating the diverse range of items that can be created with the bread maker's 14 settings.

# Customize bread your way

Includes 3 sizes for  
1, 1.5 or 2 lb. loaves  
& 3 crust shades  
from light to dark



Image: A close-up view of the bread pan containing a perfectly baked, golden-brown loaf of bread, highlighting the ability to customize loaf sizes and crust shades.

## Convenient Features

- **Delay Start:** This feature allows you to set the bread maker to begin baking at a later time, ensuring fresh, warm bread is ready exactly when you desire it, such as for breakfast.
- **Countdown Timer and Auto Keep Warm:** The integrated LCD display shows the remaining bake time. Once baking is complete, the machine automatically switches to a "keep warm" mode to maintain the bread's temperature.

# Convenient delay start

Set it up in advance to  
start cooking later —  
bread will be hot & ready  
when you want it



Image: The Hamilton Beach bread maker with its lid open, revealing a freshly baked loaf of bread inside the pan, demonstrating the convenience of the delay start feature for timed baking.



# Countdown timer and auto keep warm

LCD display indicates remaining bake time & when bread is ready, it automatically switches to keep warm

Image: A detailed view of the Hamilton Beach bread maker's control panel, focusing on the LCD display which shows a countdown timer (12:46), indicating the remaining baking time and the automatic keep warm function.

## MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your Hamilton Beach Bread Maker. The removable nonstick bread pan and kneading paddle are designed for easy cleaning.

- **Bread Pan and Kneading Paddle:** These components are dishwasher safe for convenient cleanup. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge.
- **Exterior:** Wipe the exterior of the bread maker with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Storage:** Ensure all parts are completely dry before storing the appliance.

## TROUBLESHOOTING

This section typically addresses common issues and provides solutions to ensure smooth operation of your bread maker. For specific problems not covered here, please refer to the comprehensive troubleshooting guide in your full product manual or contact customer support.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Bread does not rise	Incorrect yeast amount, expired yeast, or incorrect water temperature.	Ensure yeast is fresh and measured accurately. Use water at the recommended temperature (typically lukewarm).
Bread is too dense	Too much flour or not enough liquid.	Measure ingredients precisely using measuring cups and spoons. Adjust liquid slightly if dough appears too stiff.
Kneading paddle stuck in bread	Common occurrence.	Use the provided paddle removing tool after the bread has cooled slightly.

## SPECIFICATIONS

Feature	Detail
Model Number	29987
Brand	Hamilton Beach
Color	White and Stainless Steel
Product Dimensions (DxWxH)	13.98"D x 9.13"W x 11.89"H
Wattage	550 watts
Number of Programs	14
Product Care Instructions	Dishwasher Safe (for removable parts)
Item Weight	9.3 pounds
UPC	040094299874

# Hamilton Beach®



## Artisan Dough & Bread Maker

Image: The Hamilton Beach Artisan Dough & Bread Maker shown with its approximate dimensions: 11.5 inches in depth, 8.5 inches in width, and 11.5 inches in height.

### WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the warranty card included with your purchase or visit the official Hamilton Beach website. For technical support, replacement parts, or further assistance, please contact Hamilton Beach customer service.

Hamilton Beach Official Website: [www.hamiltonbeach.com](http://www.hamiltonbeach.com)

### IMPORTANT SAFETY INFORMATION

Always read all instructions before using the appliance. Basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Do not touch hot surfaces. Use handles or knobs.

- To protect against electrical shock, do not immerse cord, plugs, or bread maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## VIDEO RESOURCES

---

No official product videos from the seller were found in the provided data that meet the embedding criteria (e.g., m3u8 format with 'Seller' creator type). Please refer to the manufacturer's official website or support channels for any available video tutorials or demonstrations.