

Accutime 030506539995

Accutime DC Justice League Kid's Interactive Smart Watch User Manual

Model: 030506539995

1. INTRODUCTION

Welcome to the user manual for your new Accutime DC Justice League Kid's Interactive Smart Watch. This device is designed to provide an engaging and interactive experience for children, featuring a variety of functions inspired by their favorite DC Justice League characters. This manual will guide you through the setup, operation, and maintenance of your smart watch to ensure a fun and safe experience.

The watch includes a selfie camera, photo album viewer, video player, voice recorder, calculator, alarm clock, pedometer step counter, various playable games, and changeable watch faces, all within a durable and kid-friendly design.

2. IMPORTANT SAFETY INFORMATION

Please read all safety instructions before using the watch. Failure to follow these instructions may result in injury or damage to the device.

- **Choking Hazard:** This product contains small parts and is not suitable for children under 3 years of age.
- **Battery Safety:** The watch contains a non-replaceable rechargeable battery. Do not attempt to open the watch or remove the battery. Do not expose the watch to extreme temperatures or direct sunlight for prolonged periods.
- **Water Resistance:** The watch is splash-proof but not waterproof. Do not submerge the watch in water or expose it to heavy rain.
- **Cleaning:** Clean the watch with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Disposal:** Dispose of the watch and its battery responsibly according to local regulations. Do not dispose of in household waste.

3. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- Accutime DC Justice League Kid's Interactive Smart Watch
- USB Charging Cable
- Quick Start Guide (if included)

4. SETUP

4.1. Charging the Watch

Before first use, fully charge the smart watch. This typically takes 2-3 hours.

1. Locate the USB charging port on the side of the watch.
2. Connect the small end of the included USB charging cable to the watch's charging port.
3. Connect the larger end of the USB charging cable to a standard USB power adapter (not included) or a computer's USB port.
4. The watch screen will indicate that it is charging.

4.2. Powering On/Off

- **To Power On:** Press and hold the power button (usually on the side of the watch) for a few seconds until the screen lights up.
- **To Power Off:** Press and hold the power button until a power-off option appears on the screen, then confirm.

4.3. Initial Setup (Time and Date)

Upon first power-on or after a factory reset, you may need to set the correct time and date. Follow the on-screen prompts or navigate to the 'Settings' menu to adjust these parameters.

5. OPERATING THE WATCH

The Accutime DC Justice League Smart Watch features a touch screen interface. Swipe left/right or up/down to navigate through menus and tap icons to select functions.

5.1. Main Screen and Watch Faces

The main screen displays the time and date. You can change the watch face by tapping and holding the screen, then swiping through the available Justice League themed designs and tapping to select your favorite.





Image: Front view of the Accutime DC Justice League Kid's Interactive Smart Watch. The watch face shows Batman, Superman, The Flash, and Green Lantern with the time 12:43 PM and date 02-26-2021 FRI. The watch band features various DC Comics logos.

5.2. Selfie Camera

Tap the camera icon to open the selfie camera. You can take photos by tapping the shutter button on the screen. Photos are saved to the watch's internal memory.

5.3. Photo Album Viewer

Access the photo album to view pictures taken with the camera. You can swipe through photos and delete unwanted ones.

5.4. Video Player

The video player allows you to watch short video clips stored on the watch. These can be recorded using the watch's camera or transferred to the device.

5.5. Voice Recorder

Record short voice memos or messages using the built-in voice recorder. Play back your recordings from the same application.

5.6. Calculator

Perform basic arithmetic operations using the calculator function.

5.7. Alarm Clock

Set multiple alarms to help with daily routines. You can customize alarm times and sounds.

5.8. Pedometer Step Counter

The pedometer tracks your steps throughout the day, encouraging physical activity. You can view your daily step count and progress.

5.9. Playable Games

The watch comes pre-loaded with various interactive games for entertainment. Navigate to the 'Games' menu and select a game to play.





Image: Top-down view of the Accutime DC Justice League Kid's Interactive Smart Watch. The image displays the full length of the watch, highlighting the black band adorned with yellow Batman symbols, red Superman symbols, green Green Lantern symbols, and red Flash symbols.

6. MAINTENANCE

6.1. Cleaning

To keep your watch clean, gently wipe the screen and band with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water. Do not use harsh chemicals, solvents, or abrasive materials.

6.2. Battery Care

- Charge the watch regularly, even if not in frequent use, to maintain battery health.
- Avoid completely draining the battery before recharging.
- Do not expose the watch to extreme temperatures, as this can degrade battery performance and lifespan.

7. TROUBLESHOOTING

If you encounter issues with your Accutime DC Justice League Smart Watch, please refer to the following common solutions:

Problem	Possible Solution
Watch does not turn on.	Ensure the watch is fully charged. Connect it to the USB charging cable and a power source for at least 30 minutes. Try pressing and holding the power button for 10-15 seconds.
Watch is not charging.	Check if the USB cable is securely connected to both the watch and the power source. Try a different USB port or power adapter. Ensure the charging port on the watch is clean and free of debris.
Screen is unresponsive or frozen.	Perform a soft reset by pressing and holding the power button for approximately 10 seconds until the watch restarts.
Features (camera, games) are not working.	Ensure there is sufficient storage space on the watch. Restart the watch. If the issue persists, a factory reset (if available in settings) might be necessary, but this will erase all data.
Time/Date is incorrect.	Navigate to the 'Settings' menu on the watch and manually adjust the time and date.





Image: Angled view of the Accutime DC Justice League Kid's Interactive Smart Watch. This perspective highlights the watch's screen, which displays the time and Justice League characters, along with the side buttons and USB charging port.

8. SPECIFICATIONS

Feature	Detail
Model Number	030506539995
Item Type Name	Smart Watch
Clasp Type	Buckle
Manufacturer	Accutime Watch Corp.
Department	unisex-adult (for packaging classification)
Connectivity	USB (for charging and data transfer)

Feature	Detail
Features	Selfie Camera, Photo Album, Video Player, Voice Recorder, Calculator, Alarm Clock, Pedometer, Games, Changeable Watch Faces

9. WARRANTY AND SUPPORT

Your Accutime DC Justice League Kid's Interactive Smart Watch is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact Accutime customer service. Contact information can typically be found on the product packaging or the official Accutime website.

Accutime Store: [Visit the Accutime Store on Amazon](#)