

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [weber](#) /

› [Weber Baby Q Premium Gas BBQ \(Q1200N\) User Manual](#)

weber Q1200N

Weber Baby Q Premium Gas BBQ (Q1200N) User Manual

Model: Q1200N

INTRODUCTION

Thank you for choosing the Weber Baby Q Premium Gas BBQ (Q1200N). This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new barbecue. Please read it thoroughly before first use and retain it for future reference.

The Weber Baby Q Premium Gas BBQ (Q1200N) is designed for portability and versatility, allowing you to enjoy incredible flavour wherever you are outdoors. It features removable side tables, a lid thermometer, and a porcelain-enamelled, cast iron cooking grill for even heat distribution.

SAFETY INFORMATION

Always follow these safety guidelines to prevent injury or damage:

- Read all instructions before operating the barbecue.
- Use outdoors only. Do not operate indoors or in enclosed spaces.
- Ensure proper ventilation.
- Keep children and pets away from the hot barbecue.
- Do not move the barbecue while it is in use or hot.
- Always connect and disconnect gas cylinders outdoors and away from ignition sources.
- Check for gas leaks regularly using a soapy water solution.
- Do not store flammable materials near the barbecue.
- Wear protective gloves when handling hot components.

PRODUCT OVERVIEW

The Weber Baby Q Premium Gas BBQ (Q1200N) is a compact and powerful gas barbecue designed for portability and efficient cooking. Key components include:

- **Lid with Built-in Thermometer:** For monitoring internal cooking temperature.

- **Porcelain-Enamelled Cast Iron Cooking Grates:** Provide excellent heat retention and even cooking.
- **Burner Tube:** Delivers consistent heat across the cooking surface.
- **Removable Side Tables:** Offer convenient prep and serving space.
- **Ignition System:** For quick and easy startup.
- **Grease Management System:** Includes a removable catch pan for easy cleaning.



Image: Front view of the Weber Baby Q Premium Gas BBQ (Q1200N) in Charcoal Grey, showcasing its compact design with the lid closed and side tables extended.



Image: The Weber Baby Q Premium Gas BBQ (Q1200N) with its lid open, revealing the porcelain-enamelled cast iron cooking grates.



Image: An angled view of the Weber Baby Q Premium Gas BBQ (Q1200N) with the lid open, highlighting the cooking surface and internal components.



Image: A close-up view of the Weber Baby Q Premium Gas BBQ (Q1200N) with the lid open, focusing on the cooking grates and burner.

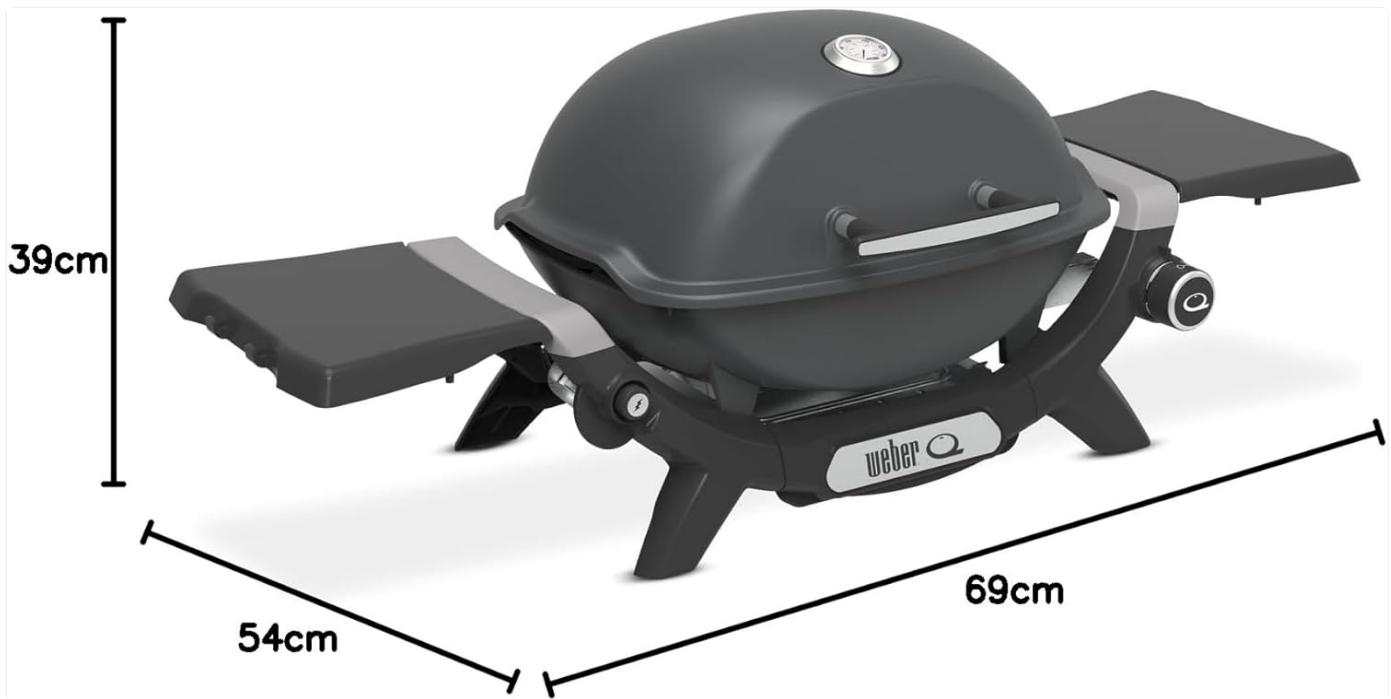


Image: Diagram showing the dimensions of the Weber Baby Q Premium Gas BBQ (Q1200N): 39cm height, 54cm depth, and 69cm width with side tables extended.

SETUP AND ASSEMBLY

The Weber Baby Q Premium Gas BBQ (Q1200N) comes largely pre-assembled. Follow these steps for initial setup:

- 1. Unpacking:** Carefully remove all components from the packaging. Retain packaging for potential future transport or storage.
- 2. Side Tables:** Extend the removable side tables by pulling them outwards until they lock into place.
- 3. Gas Cylinder Connection:**
 - Ensure the barbecue control knob is in the "OFF" position.
 - Connect the gas regulator hose to a compatible LPG gas cylinder. Hand-tighten only.
 - Perform a leak test (see Safety Information section for details).
- 4. Placement:** Place the barbecue on a stable, non-combustible surface, away from flammable materials and structures. Ensure adequate clearance around the unit.

WEBER® BABY Q® PREMIUM

Q1200N - 3rd Generation
Your Q on the go



The Weber® Baby Q® barbecue creates incredible flavour wherever you are outdoors.

While it's compact and lightweight, it's mighty when it comes to portability and cooking versatility.

Image: The Weber Baby Q Premium Gas BBQ (Q1200N) positioned outdoors, ready for use, with a connected LPG gas cylinder.

OPERATING INSTRUCTIONS

Pre-heating

1. Open the barbecue lid.
2. Ensure the gas cylinder valve is fully open.
3. Turn the control knob to the "START/HIGH" position.
4. Press the igniter button repeatedly until the burner ignites.
5. Close the lid and allow the barbecue to pre-heat for 10-15 minutes, or until the lid thermometer reaches the desired cooking temperature.

Cooking

- Place food directly on the pre-heated cooking grates.
- Adjust the control knob to regulate heat as needed. The lid thermometer provides an indication of the internal temperature.
- Keep the lid closed as much as possible during cooking to maintain consistent temperature and enhance flavour.

Shutting Down

1. Turn the control knob to the "OFF" position.
2. Close the gas cylinder valve.
3. Allow the barbecue to cool completely before cleaning or moving.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Weber Baby Q.

After Each Use

- Cooking Grates:** Once cooled, brush off any food residue with a grill brush. For stubborn residue, pre-heat the grill for 10-15 minutes, then brush clean.
- Grease Management:** Empty and clean the grease catch pan. Replace the disposable foil tray if used.

Periodic Cleaning

- Inside the Lid and Cookbox:** Scrape off any accumulated grease and carbonized food particles using a plastic scraper. Wipe with a damp cloth.
- Burner Tube:** Ensure burner ports are clear. Use a wire brush to gently clean the burner if necessary.
- Exterior Surfaces:** Wipe down with a mild soap and water solution. Avoid abrasive cleaners.



Image: A detailed view of the porcelain-enamelled cast iron cooking grates, emphasizing their robust construction for even heat distribution.



Image: The removable grease catch pan of the Weber Baby Q Premium Gas BBQ (Q1200N), designed for easy cleaning and maintenance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner won't light	No gas flow; blocked burner; faulty igniter.	Check gas cylinder connection and level; clean burner ports; check igniter electrode and wire.

Problem	Possible Cause	Solution
Low heat output	Gas regulator issue; low gas level; blocked burner.	Reset regulator (refer to gas cylinder instructions); replace gas cylinder; clean burner.
Flare-ups	Excessive grease build-up; high heat setting.	Clean grease management system; reduce heat; trim excess fat from food.

If problems persist, contact Weber customer support or a qualified service technician.

SPECIFICATIONS

Feature	Detail
Model Number	Q1200N
Fuel Type	LPG Gas
Colour	Charcoal Grey
Dimensions (Lid Closed, Tables Out)	44D x 66W x 38.5H cm
Weight	13.3 kg
Cooking Grate Material	Porcelain-Enamelled Cast Iron
Special Features	Portable, Built-in Lid Thermometer, Removable Side Tables

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official Weber website. Weber provides comprehensive customer support for their products.

Online Support: Visit www.weber.com for FAQs, product registration, and contact information.

Contact: For direct assistance, please refer to the contact details provided in your product's warranty booklet.