

[Manuals.plus](#) /

› [LEFXMOPHY](#) /

› LEFXMOPHY Door Bell Mount Instruction Manual

LEFXMOPHY LF-BACKPLATE-BLACK-2

LEFXMOPHY Door Bell Mount Instruction Manual

Model: LF-BACKPLATE-BLACK-2

OVERVIEW

The LEFXMOPHY Door Bell Mount is a durable replacement backplate designed for compatibility with the Blink Video Doorbell (BDM00200U). This product provides a secure and reliable mounting solution, ensuring your doorbell remains firmly in place. It is an ideal replacement for a broken or worn original backplate, offering easy installation and a precise fit.

PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- 2 x LEFXMOPHY Door Bell Backplates (Black)
- Mounting Screws
- Small Removal Tool



Image: Contents of the LEFXMOPHY Door Bell Mount package, showing two backplates, associated screws, and a small tool.

SPECIFICATIONS

Feature	Detail
Model Number	LF-BACKPLATE-BLACK-2
Compatibility	Blink Video Doorbell (BDM00200U)
Material	Durable Raw Material
Color	Black

Package Dimensions	5.71 x 1.77 x 0.75 inches
Item Weight	2.08 ounces

SETUP INSTRUCTIONS

Follow these steps to properly install the LEFXMOPHY Door Bell Mount with your Blink Video Doorbell:

- Step 1: Prepare Doorbell and Backplate.**
Ensure you have your Blink Video Doorbell and the new LEFXMOPHY backplate ready. If replacing an old backplate, carefully remove the doorbell from the existing mount.



Image: The Blink doorbell positioned next to the LEFXMOPHY backplate, illustrating the initial alignment for installation.

2. Step 2: Align and Push Upwards.

Align the Blink Video Doorbell with the new backplate. Gently press the doorbell onto the backplate and then push it upwards. This action engages the internal clips of the backplate with the doorbell unit.

How to install:



Step 1

Get the doorbell and backplate.



Step 2

Press and push the backplate upwards.



Step 3

The backplate clicks firmly in place.

Image: A visual guide demonstrating the process of attaching the doorbell to the backplate, from initial alignment to the final secure click.

3. Step 3: Secure the Backplate.

Continue pushing the doorbell upwards until you hear or feel a distinct click. This indicates that the backplate has firmly locked into place, securing the doorbell. Ensure it is snug and does not wobble.

4. Step 4: Mount to Surface.

Once the doorbell is securely attached to the backplate, use the provided mounting screws to attach the entire assembly to your desired surface (e.g., wall, door frame). Ensure the screws are tightened sufficiently for a stable mount.



Image: The Blink doorbell, with the LEFXMOPHY backplate, successfully installed on an exterior wall.

OPERATION

The LEFXMOPHY Door Bell Mount serves as a static mounting component. Once installed, its primary function is to securely hold your Blink Video Doorbell in its intended position. There are no active operational controls on the backplate itself.

MAINTENANCE

To ensure the longevity and proper function of your LEFXMOPHY Door Bell Mount:

- **Cleaning:** Wipe the backplate periodically with a soft, damp cloth to remove dust and dirt. Avoid abrasive cleaners or solvents.
- **Inspection:** Regularly check the backplate for any signs of damage, cracks, or loosening from the mounting surface. Ensure the doorbell remains securely attached to the backplate.
- **Environmental Exposure:** While durable, prolonged exposure to extreme weather conditions may affect the material over time. Consider protective measures if installed in harsh environments.

TROUBLESHOOTING

If you encounter issues with your LEFXMOPHY Door Bell Mount, consider the following:

- **Doorbell Not Clicking Securely:** Ensure the doorbell is correctly aligned with the backplate's clips. Apply firm, even pressure while pushing upwards until a click is heard. Check for any obstructions or debris in the mounting grooves.
- **Backplate Feels Loose on Surface:** Verify that the mounting screws are adequately tightened. If installed on a soft material, consider using appropriate wall anchors (not included) for better stability.
- **Rubber Gasket Issues:** Some backplates may include a rubber gasket for weather sealing. If the gasket appears loose or falls out, carefully re-seat it into its groove. A small amount of non-permanent adhesive can be used to hold it in place if necessary, ensuring it does not interfere with the doorbell's fit.

WARRANTY AND SUPPORT

LEFXMOPHY stands behind the quality of its products. For specific warranty information or technical support, please refer to the contact details provided with your purchase or visit the official LEFXMOPHY website. Keep your proof of purchase for warranty claims.

© 2023 LEFXMOPHY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question