

ALLIMITY MECOOL KM2

ALLIMITY MECOOL KM2 Replacement Remote Control User Manual

Model: MECOOL KM2

1. INTRODUCTION

This manual provides instructions for the ALLIMITY MECOOL KM2 Replacement Remote Control. This remote is designed to be a direct replacement for your original MECOOL KM2, KM2 Plus, KM7 Plus, KD3, and KD5 Smart TV Box and TV Stick remote controls. It features integrated voice control with Google Assistant and quick access buttons for popular streaming services.

Key Features:

- Voice Control with Google Assistant
- Dedicated buttons for Netflix, YouTube, Prime Video, and Google Play
- No programming required (pairing with TV is necessary)
- Ergonomic design for comfortable use

2. SETUP

2.1 Battery Installation

To begin using your remote control, you must first install the batteries.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment.
4. Slide the cover back into place until it clicks securely.





Figure 2.1: Battery compartment with AAA battery slots.

2.2 Pairing with Your TV/Device

Although no programming is required, the remote needs to be paired with your MECOOL Smart TV Box or TV Stick for full functionality, especially for voice control and certain features.

1. Ensure your MECOOL device is powered on and connected to your TV.
2. Navigate to the Bluetooth or Remote & Accessories settings on your MECOOL device (usually found in the main settings menu).
3. Select 'Add accessory' or 'Pair new device'.
4. Follow the on-screen prompts. You may need to press and hold specific buttons on the new remote (e.g., the Home and Back buttons simultaneously) until an indicator light flashes or the device appears on the screen.
5. Once the remote appears in the list of available devices, select it to complete the pairing process.



Figure 2.2: Remote compatibility and pairing reminder.

3. OPERATING THE REMOTE CONTROL

The ALLIMITY MECOOL KM2 remote control features a user-friendly layout with dedicated buttons for common functions and streaming services.





Figure 3.1: Overview of the remote control buttons.

3.1 Button Functions

Button	Function
--------	----------

Button	Function
Power Button	Turns the MECOOL device on or off.
Google Assistant / Voice Control	Activates voice commands for searching content, controlling smart home devices, and more. <i>(Requires pairing)</i>
Navigation Pad (Up/Down/Left/Right/OK)	Navigates through menus and selects items.
Back Button	Returns to the previous screen or menu.
Home Button	Returns to the main home screen of the MECOOL device.
Volume Up/Down	Adjusts the volume.
Mute Button	Mutes or unmutes the audio.
Netflix Button	Launches the Netflix application directly.
YouTube Button	Launches the YouTube application directly.
Prime Video Button	Launches the Amazon Prime Video application directly.
Google Play Button	Launches the Google Play Store application directly.

3.2 Using Voice Control

After successful pairing, press the Google Assistant button (usually depicted with a microphone icon or Google's four-color logo) and speak clearly into the remote's microphone. You can ask it to:

- Search for movies or TV shows (e.g., "Find action movies").
- Open applications (e.g., "Open Netflix").
- Control playback (e.g., "Pause", "Play", "Fast forward 30 seconds").
- Get information (e.g., "What's the weather?").



Figure 3.2: Voice control feature.

4. MAINTENANCE

4.1 Battery Replacement

When the remote control's performance degrades or it stops responding, it's time to replace the batteries. Follow the steps in Section 2.1 to replace the two AAA batteries.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in water.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

5. TROUBLESHOOTING

5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly installed and not depleted. Replace if necessary.
- **Line of Sight:** Ensure there are no obstructions between the remote and the MECOOL device.
- **Re-pair Remote:** If the remote was previously working but stopped, try re-pairing it with your MECOOL device as described in Section 2.2.
- **Device Power:** Ensure your MECOOL device is powered on and functioning correctly.

5.2 Voice Control Not Working

- **Pairing:** Voice control requires the remote to be properly paired via Bluetooth. Confirm pairing status in your device settings.
- **Microphone Obstruction:** Ensure the microphone on the remote is not covered.
- **Internet Connection:** Google Assistant requires an active internet connection on your MECOOL device.

6. SPECIFICATIONS

Feature	Detail
Model Number	MECOOL KM2
Compatible Models	MECOOL KM2, KM2 Plus, KM7 Plus, KD3, KD5 Smart TV Box/TV Stick
Dimensions	6.5 x 1.38 x 0.72 inches (16.5 x 3.5 x 1.8 cm)
Item Weight	1.59 ounces (45 grams)
Power Source	2 x AAA Batteries (not included)
Color	Black
Special Feature	No Programming Required (pairing needed)

7. WARRANTY AND SUPPORT

This ALLIMITY product is designed for reliable performance. For any issues or support inquiries, please refer to the seller's return and support policies on the platform where the product was purchased. Keep your purchase receipt as proof of purchase.

For general troubleshooting not covered in this manual, please consult the user manual for your specific MECOOL Smart TV Box or TV Stick, or visit the manufacturer's support website.