

Kenmore KCMWP11S2-10

Kenmore KCMWP11S2-10 Countertop Microwave User Manual

Model: KCMWP11S2-10

INTRODUCTION

Thank you for choosing the Kenmore KCMWP11S2-10 Countertop Microwave. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before use and keep it for future reference.

PRODUCT FEATURES

Key Features Overview

- **11 Variable Power Levels:** Adjust power from 0% to 100% for precise cooking.
- **6 One-Touch Cook Menus:** Pre-programmed settings for common foods: Potato, Popcorn, Pizza, Beverage, Frozen Dinner, Reheat.
- **Time/Weight Defrost:** Conveniently defrost food based on time or weight.
- **Express Cook:** Quick start cooking with a single touch.
- **Multistage Cook:** Program multiple cooking stages for complex recipes.
- **Child Safety Lock:** Prevents unsupervised operation.
- **Interior Light:** Illuminates the oven cavity during operation.
- **LED Display:** Clear and easy-to-read digital display.
- **Kitchen Timer:** Functions as a standalone timer.
- **ADD 30 SEC.:** Quickly add 30 seconds to cooking time.
- **Push Button Door:** Easy and convenient door opening mechanism.

Design and Capacity

- **Color:** Stainless Steel finish.
- **Capacity:** 1.1 Cu.Ft. interior volume.
- **Watts:** 1000W cooking power.

- **Voltage:** 120 Volts / 60Hz.
- **Product Dimensions:** 21.02" W x 15.43" D x 11.14" H.
- **Turntable:** Includes a removable glass turntable with a 12.4" diameter.

SETUP

1. **Unpacking:** Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a broken door. Do not operate the oven if it is damaged.
2. **Placement:** Place the microwave on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure adequate ventilation; leave at least 4 inches (10 cm) of space on the top, sides, and back for proper airflow. Do not block air vents.
3. **Power Connection:** Plug the power cord into a properly grounded 3-prong outlet. Do not use an extension cord or adapter. Ensure the voltage and frequency match the specifications of your microwave.
4. **Turntable Installation:** Place the roller ring in the center of the oven cavity. Position the glass turntable securely on top of the roller ring. Ensure it rotates freely.
5. **Initial Cleaning:** Before first use, wipe the interior and exterior of the microwave with a soft, damp cloth.

1.1 Cu.Ft. Digital Microwave Oven with 12.4" Turntable

Multiple Cooking Functions with 6 Presets

1000 Watts

11 Power Levels



Image: The Kenmore 1.1 Cu.Ft. Digital Microwave Oven with 12.4" Turntable, shown in a kitchen setting, emphasizing its 1000 Watts and 11 Power Levels.

OPERATING INSTRUCTIONS

Basic Operation

1. Setting the Clock:

- Press the "Clock" button.
- Use the number pad to enter the current time (e.g., 12:30).
- Press "Clock" again to confirm.

2. Microwave Cooking:

- Place food in a microwave-safe container on the turntable.
- Close the door firmly.

- Enter desired cooking time using the number pad.
- Press "Start" to begin cooking.

3. **Adjusting Power Level:**

- After entering cooking time, press "Power Level".
- Enter the desired power level (1-11, where 11 is 100% power).
- Press "Start".

4. **Express Cook (ADD 30 SEC.):**

- For quick cooking at 100% power, simply press the "ADD 30 SEC." button. Each press adds 30 seconds to the cooking time.

Pre-set Menus

The microwave features 6 convenient one-touch cook menus:

- **Potato:** For baking potatoes.
- **Popcorn:** For popping microwave popcorn.
- **Pizza:** For reheating pizza slices.
- **Beverage:** For heating drinks.
- **Frozen Dinner:** For cooking pre-packaged frozen meals.
- **Reheat:** For general reheating of leftovers.

To use, simply press the corresponding pre-set button. The microwave will automatically set the optimal cooking time and power level.



6 Microwave Presets



Image: Detailed view of the microwave's control panel, highlighting the intuitive touch buttons and the six pre-programmed cooking options.

Defrost Features

• Time Defrost:

- Press "Time Defrost".
- Enter the desired defrosting time using the number pad.
- Press "Start".

• Weight Defrost:

- Press "Weight Defrost".
- Enter the weight of the food in ounces or grams (refer to the manual for specific weight ranges).
- Press "Start". The microwave will calculate the defrosting time automatically.

Child Safety Lock

The Child Safety Lock prevents accidental operation by children.

- **To Activate:** Press and hold the "Stop" button for 3 seconds until "LOCK" appears on the display.
- **To Deactivate:** Press and hold the "Stop" button for 3 seconds until "LOCK" disappears from the display.

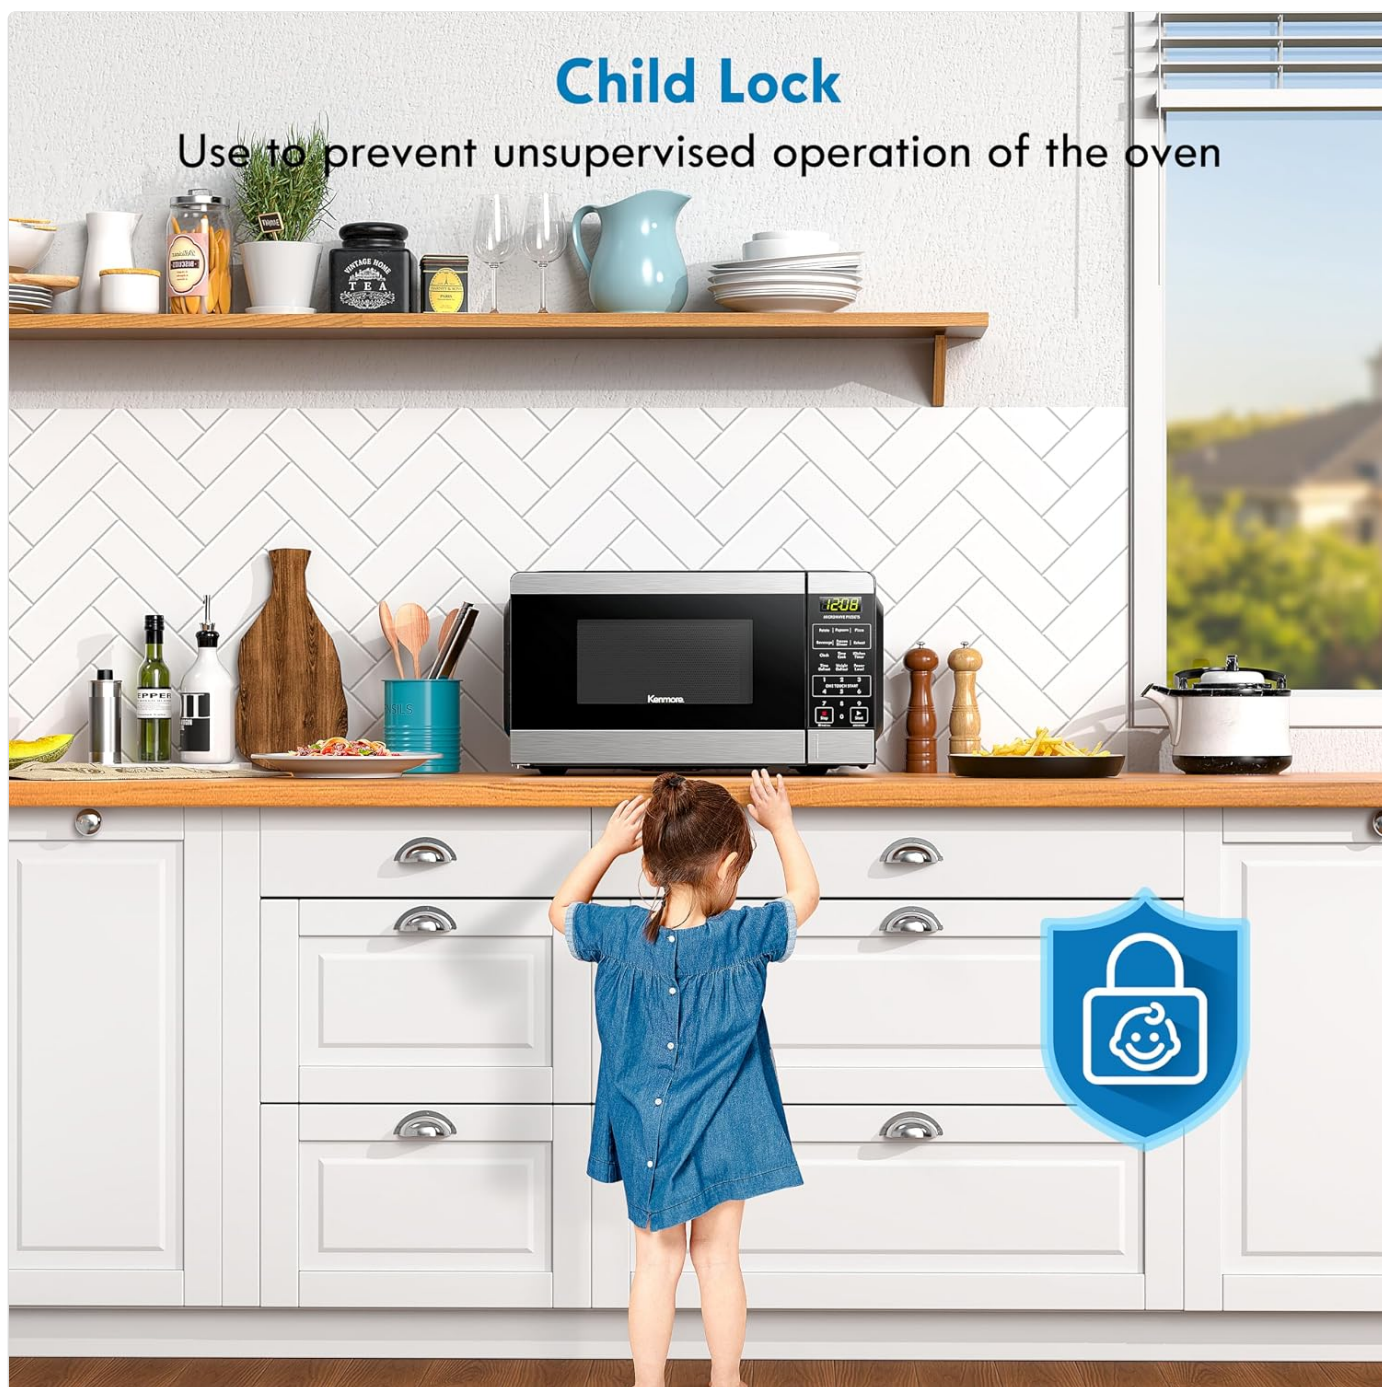


Image: Illustration of the Child Lock feature, emphasizing its role in preventing unsupervised use of the microwave.

MAINTENANCE

Cleaning the Microwave

- **Interior:** After each use, wipe the interior with a damp cloth to remove food splatters. For stubborn stains, use a mild detergent or microwave-safe cleaner. Do not use abrasive cleaners or scouring pads.
- **Exterior:** Clean the exterior surface with a soft, damp cloth. For stainless steel surfaces, use a stainless steel cleaner to maintain its shine.
- **Door Seal and Frame:** Keep the door seal and frame clean to ensure proper closure and prevent microwave energy leakage.
- **Turntable and Roller Ring:** The glass turntable and roller ring can be washed in warm, soapy water or in the

dishwasher. Ensure they are completely dry before placing them back in the microwave.

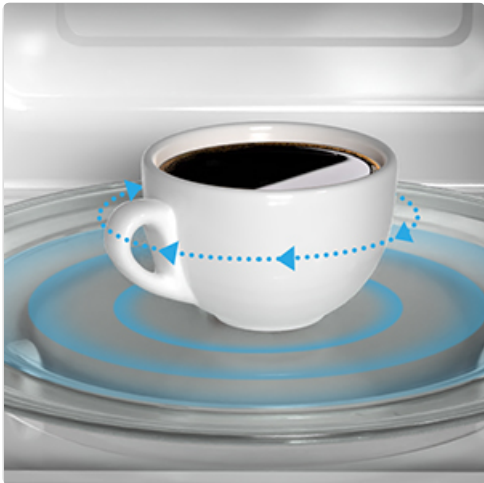


Image: A person cleaning the interior of the microwave, illustrating the ease of maintenance.

General Care

- Do not operate the microwave when empty.
- Avoid placing heavy objects on top of the microwave.
- Ensure the power cord is not pinched or damaged.

TROUBLESHOOTING

If you encounter issues with your Kenmore microwave, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Microwave does not start.	Door not closed properly; Power cord unplugged; Fuse blown or circuit breaker tripped.	Ensure door is securely closed. Check power cord connection. Check household fuse/circuit breaker.
Food not heating.	Incorrect cooking time/power level; Door not closed properly.	Adjust cooking time/power level. Ensure door is securely closed.
Turntable not rotating.	Turntable or roller ring not positioned correctly; Debris under turntable.	Reposition turntable and roller ring. Clean under the turntable.
Oven light not working.	Light bulb burned out.	Contact customer service for bulb replacement. (Note: User replaceable bulbs are not common in microwaves.)
Unusual noise during operation.	Turntable not seated correctly; Food container touching oven walls.	Adjust turntable position. Ensure food container is centered and not touching sides.

SPECIFICATIONS

- **Model:** KMCMWP11S2-10
- **Brand:** Kenmore
- **Capacity:** 1.1 Cu.Ft.
- **Power Output:** 1000 Watts

- **Voltage:** 120 Volts / 60Hz
- **Product Dimensions (W x D x H):** 21.02" x 15.43" x 11.14"
- **Item Weight:** 31.8 pounds
- **Material:** Stainless Steel
- **Installation Type:** Countertop
- **Included Components:** Roller Ring, Glass Turntable



Image: The compact dimensions of the Kenmore microwave, ideal for saving countertop space.

WARRANTY

The Kenmore KMCMWP11S2-10 Countertop Microwave comes with a **1 Year Limited Warranty**. Please refer to the warranty card included with your product for full terms and conditions. Keep your purchase receipt as proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please visit the official Kenmore website or contact their customer service line. Refer to the product packaging or the Kenmore website for the most current contact information.

You can also visit the [Kenmore Store on Amazon](#) for product information and support resources.

© 2025 Kenmore. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CKX6CW11>

More documents and user manuals: <https://manuals.plus/>