

[manuals.plus](#) /

› [ALLIMITY](#) /

› [ALLIMITY HJ20180113 Replacement Remote Control User Manual for Konka Group Smart LED TVs](#)

ALLIMITY HJ20180113

ALLIMITY HJ20180113 Replacement Remote Control User Manual

For Konka Group Smart LED TVs

1. INTRODUCTION

This manual provides instructions for the ALLIMITY HJ20180113 Replacement Remote Control. This remote is designed to function as a direct replacement for your original Konka Group Smart LED TV remote control, specifically compatible with models such as KDG50JT628A.

No programming or setup is required for this replacement remote. Simply insert batteries, and it is ready for use.

2. SETUP

2.1 Battery Installation

To begin using your remote control, you must install two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



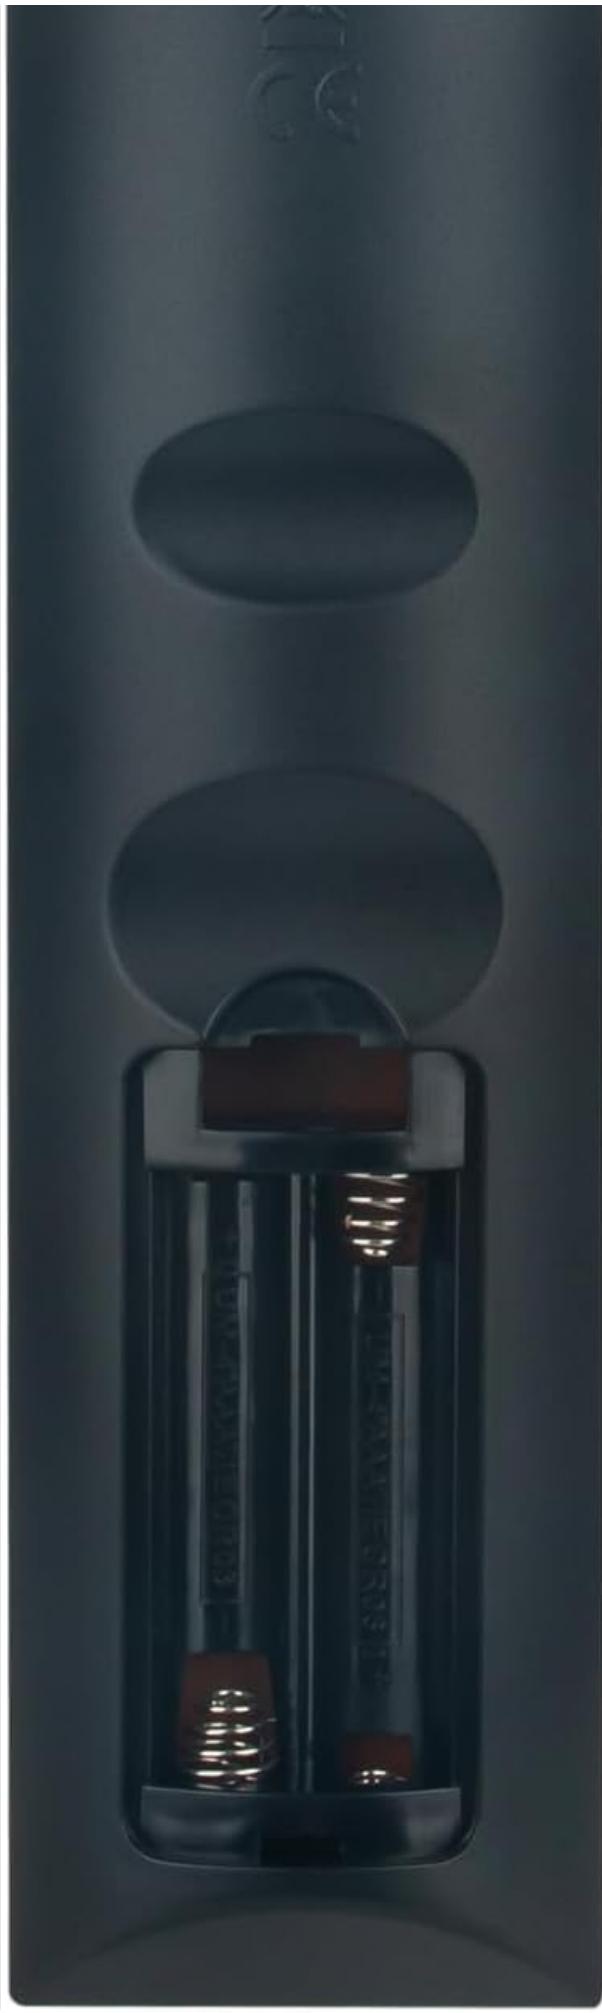


Image: Back view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery

3. OPERATING INSTRUCTIONS

3.1 Basic Functions

Once batteries are installed, the remote control is ready to operate your compatible Konka Group Smart LED TV. Point the remote directly at the TV's infrared receiver.

3.2 Button Overview

The following table describes the primary functions of the buttons on your remote control.





Image: Front view of the remote control, displaying the layout of all buttons.

Button	Function
POWER	Turns the TV on or off.
INPUT	Selects the input source (e.g., HDMI, AV).
0-9 (Number Buttons)	Direct channel selection.
-/-	Switches between single and double-digit channel input.
RECALL	Returns to the previously viewed channel.
VOL +/-	Adjusts the volume level.
CH ^/v	Changes the channel up or down.
MUTE	Mutes or unmutes the TV audio.
FAV	Accesses favorite channels list.
DISPLAY	Displays current channel information.
ASPECT	Changes the screen aspect ratio.
P.MODE	Selects picture modes.
S.MODE	Selects sound modes.
 MENU	Opens the TV's main menu.

Button	Function
Navigation (Up, Down, Left, Right)	Navigates through menus and options.
ENTER	Confirms selections in menus.
EXIT	Exits the current menu or function.
SLEEP	Sets the sleep timer.
EPG	Accesses the Electronic Program Guide.
FREEZE	Pauses the current image.
TV/RADIO	Switches between TV and Radio modes.
SUBTITLE	Activates or deactivates subtitles.
AUDIO	Selects audio language or mode.
T.SHIFT (Time Shift)	Activates or controls time shift function.
TTX (Teletext)	Accesses Teletext services.
AUTO	Automatic function (e.g., auto-tuning).
REC (Record)	Initiates recording (if supported by TV).
PVR SIZE	Adjusts PVR display size.
HOLD	Holds current screen.
INDEX	Accesses index page in Teletext.
REVEAL	Reveals hidden text in Teletext.
NICAM/A2	Selects NICAM/A2 stereo sound.
S.PAGE	Accesses sub-pages in Teletext.
Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Skip)	Controls media playback functions (e.g., for USB content or PVR).

4. MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** If the remote control becomes unresponsive or its range decreases, replace the batteries with new ones. Remove batteries if the remote will not be used for an extended period to

prevent leakage.

5. TROUBLESHOOTING

If you experience issues with your remote control, try the following solutions:

- **Remote not responding:**

- Ensure the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new 1.5V AAA alkaline batteries.
- Make sure there are no obstructions between the remote control and the TV's infrared sensor.
- Confirm you are within the effective operating range of the TV.

- **Specific buttons not working:**

- Check if the button is stuck or dirty. Gently clean around the button.
- If only certain buttons fail, it might indicate a fault with the remote. Consider replacing the remote.

6. SPECIFICATIONS

Feature	Detail
Model Number	HJ20180113 (Compatible with CV-HJ20180113-SH)
Brand	ALLIMITY
Compatible Devices	Konka Group Smart LED TVs (e.g., KDG50JT628A)
Power Supply	2 x 1.5V AAA Batteries (not included)
Color	Black
Dimensions	6.5 x 1.38 x 0.72 inches (16.5 x 3.5 x 1.8 cm)
Item Weight	1.59 ounces (45 grams)
Special Feature	No Programming Required

7. WARRANTY AND SUPPORT

As a replacement product, specific warranty details may vary. For any questions regarding product functionality, compatibility, or to inquire about returns or replacements, please contact the seller directly through your purchase platform. Ensure you have your order details available for faster assistance.

