



Manuals.plus /

- › TASVAC /
- › TASVAC V50 Cordless Vacuum Cleaner User Manual

TASVAC V50-CA12

TASVAC V50 Cordless Vacuum Cleaner User Manual

Model: V50-CA12 | Brand: TASVAC

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store the appliance indoors. Put away after use to prevent accidents.
- Use only the charger supplied by the manufacturer to recharge.

- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.

2. PRODUCT OVERVIEW

The TASVAC V50 is a versatile cordless vacuum cleaner designed for efficient cleaning of various surfaces. It features a powerful motor, multi-stage filtration, and a lightweight design for ease of use.



Figure 2.1: Main components of the TASVAC V50 Cordless Vacuum Cleaner, including the main unit, extension wand, floor brush, and various attachments like the crevice tool and brush tool. Two spare filters are also shown.

2.1 Components

- **Main Unit:** Contains the motor, dustbin, and filtration system.
- **Extension Wand:** Connects the main unit to the floor brush for upright cleaning.
- **Motorized Floor Brush:** Equipped with LED lights for illuminating dark areas and a flexible head for easy maneuverability.
- **Crevice Tool:** Ideal for narrow gaps and corners.

- **2-in-1 Brush Tool:** For upholstery, curtains, and other delicate surfaces.
- **Wall Mount (Optional):** For convenient storage and charging.
- **Charger:** For recharging the battery.

2.2 Key Features

- **Powerful Suction:** Efficiently picks up various types of debris.
- **Multi-stage Filtration:** Advanced system to capture fine dust and allergens.
- **Long Battery Life:** Provides extended cleaning time on a single charge.
- **Versatile Cleaning:** Easily converts to a handheld vacuum for different cleaning needs.
- **Self-Standing Design:** Allows the vacuum to stand upright on its own for convenient storage.

3. SETUP AND CHARGING

3.1 Assembly

1. **Attach the Extension Wand:** Insert the extension wand into the main unit until it clicks into place.
2. **Attach the Floor Brush:** Connect the motorized floor brush to the other end of the extension wand, ensuring it clicks securely.
3. **Install Accessories:** For handheld use, attach the crevice tool or 2-in-1 brush tool directly to the main unit.

3.2 Initial Charging

Before first use, fully charge the vacuum cleaner. The battery is partially charged upon delivery.

2 Modes de Charge



Figure 3.1: The TASVAC V50 offers two charging methods: direct charging by plugging the adapter into the main unit while it's mounted on the wall, or by removing the battery and charging it separately.

- **Direct Charging:** Plug the charger into a power outlet and connect the charging cable to the charging port on the main unit. The charging indicator lights will illuminate.
- **Separate Battery Charging:** The battery can be detached from the main unit and charged independently using the provided charger.
- A full charge typically takes approximately 4.5 hours.

Grande Capacité Batterie

6 cellules | 2200mAh | 4.5H Charge

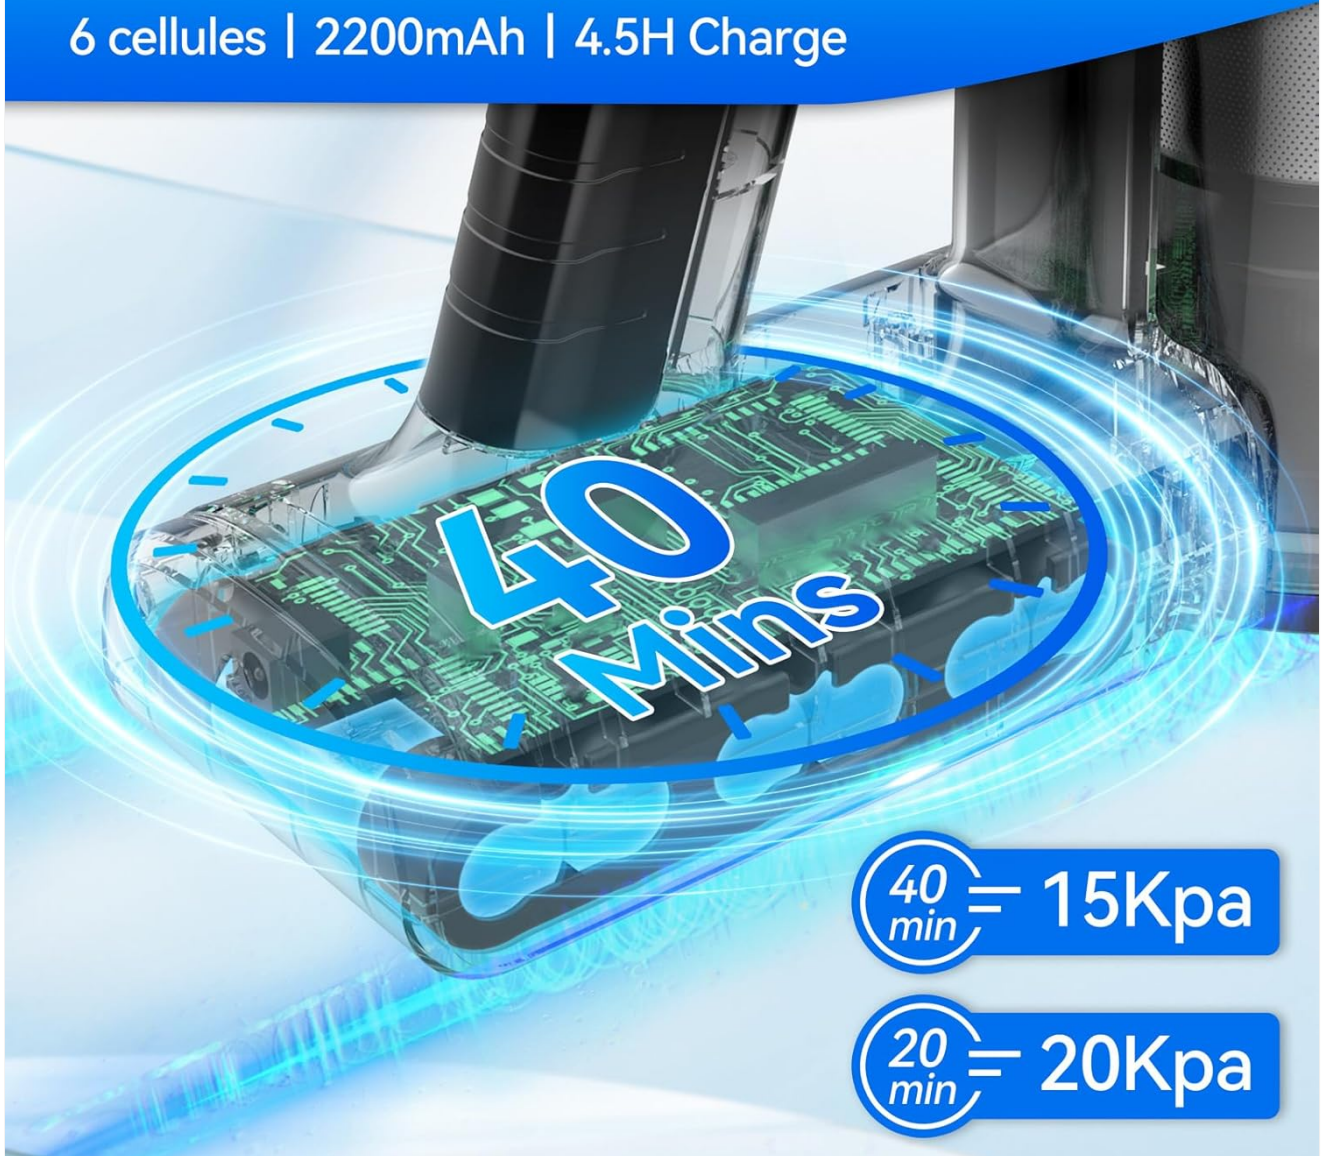


Figure 3.2: The TASVAC V50 is equipped with a 2200mAh battery (6 cells) providing up to 40 minutes of runtime at 15KPa suction and 20 minutes at 20KPa suction after a 4.5-hour charge.

4. OPERATING INSTRUCTIONS

4.1 Starting and Stopping

- Press the power button on the main unit to turn the vacuum cleaner ON.
- Press the power button again to turn the vacuum cleaner OFF.

4.2 Suction Modes

The TASVAC V50 offers multiple suction modes for different cleaning needs.

- **Standard Mode:** For everyday cleaning and lighter debris.
- **Max Mode:** Provides stronger suction for stubborn dirt and deep cleaning.

4.3 Versatile Cleaning



Figure 4.1: The TASVAC V50 can be used in various configurations: as an upright stick vacuum, a handheld vacuum for furniture and car interiors, and with the extension wand for high-reach areas.

The vacuum can be easily converted for different cleaning tasks:

- **Stick Vacuum:** Use with the extension wand and floor brush for floors and carpets.
- **Handheld Vacuum:** Detach the main unit and attach accessories directly for cleaning upholstery, car interiors, and tight spaces.
- **High-Reach Cleaning:** Use the main unit with the extension wand and a smaller attachment for cleaning ceilings or high shelves.

20Kpa Aspiration Puissante | Polyvalent | Léger



Figure 4.2: The TASVAC V50 is effective at picking up various types of debris, including beans, crumbs, hair, and fine dust, while operating at a low noise level of 60dB.

Brosse Flexible avec LED phare



Figure 4.3: The flexible floor brush of the TASVAC V50 features LED headlights to illuminate dust in dark areas and offers 180-degree swivel and 90-degree tilt for easy maneuverability across various floor types including tile, marble, hardwood, and low-pile carpets.

4.4 Self-Standing Feature

Conception Autoportante

Facile à Tenir & Ranger
où vous voulez



Mains Libres
Pas Besoin de Fixation Murale

Figure 4.4: The TASVAC V50 features a self-standing design, allowing it to stand upright on its own without the need for a wall mount, providing convenient storage anywhere.

The TASVAC V50 is designed to stand upright on its own, providing convenient temporary storage during cleaning breaks or for compact storage without a wall mount.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1 Emptying the Dustbin

1L COLLECTEUR DE POUSSIÈRE



Figure 5.1: The TASVAC V50 features a 1L dust collector that can be emptied with a single click. The HEPA filter and other washable filters can be easily removed and rinsed under running water for cleaning.

- The dustbin has a 1L capacity. Empty it regularly, especially when the MAX line is reached.
- To empty, press the dustbin release button and tip the contents into a trash can.

5.2 Cleaning Filters

5 étapes Système de Filtration



Figure 5.2: The TASVAC V50 utilizes a 5-stage filtration system, including a cyclonic system, mesh filter, HEPA filter, sound-insulating filter layer, and air outlet filtration, all designed to capture fine dust and allergens effectively.

- The vacuum features a multi-stage filtration system, including a washable HEPA filter.
- Remove the filters from the dustbin.
- Rinse the filters under cold running water until the water runs clear.
- Allow filters to air dry completely for at least 24 hours before reinserting them into the vacuum. Do not use a dryer or other heating device.
- Replace filters every 3-6 months, or as needed, depending on usage.

5.3 Cleaning the Brush Roll

- Periodically check the brush roll for tangled hair or debris.
- To remove the brush roll, follow the instructions in the diagram (if applicable, otherwise describe).
- Use scissors to cut away any tangled hair or threads.
- Reinsert the brush roll securely.

6. TROUBLESHOOTING

If you encounter issues with your TASVAC V50, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged. Battery not properly installed.	Charge the battery fully. Ensure battery is securely clicked into place.
Low suction power.	Dustbin is full. Filters are clogged. Obstruction in nozzle or hose.	Empty the dustbin. Clean or replace filters. Remove any obstructions.
Brush roll not spinning.	Hair or debris tangled in brush roll. Brush roll not properly installed.	Clean the brush roll. Reinstall the brush roll correctly.
Vacuum stops suddenly during use.	Battery is depleted. Overheating protection activated.	Recharge the battery. Turn off the vacuum, allow it to cool down for 30 minutes, then restart.

7. SPECIFICATIONS

Feature	Detail
Brand	TASVAC
Model Number	V50-CA12
Color	Blue
Product Dimensions (L x W x H)	40 x 30 x 18 cm (15.7 x 11.8 x 7.1 inches)
Item Weight	3 Kilograms (6.6 lbs)
Power	200 Watts
Noise Level	60 dB
Battery Type	1 Lithium-ion (included)
Dust Collector Capacity	1 Liter
Cordless Operation	Yes
Date First Available on Amazon.com.be	July 18, 2023

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact TASVAC customer service directly. Specific warranty terms may vary by region and retailer.

Please retain your proof of purchase for any warranty claims.

