

LODADRA d27e6111-9ede-4fb6-98cc-60f94b4216bd

LODADRA RGB Ceiling Fan Remote Control Instruction Manual

Model: d27e6111-9ede-4fb6-98cc-60f94b4216bd

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective operation of your LODADRA RGB Ceiling Fan Remote Control. Please read this manual thoroughly before using the product and retain it for future reference. This remote control is designed to operate compatible RGB ceiling fans, managing fan speeds, light functions, and color settings.

2. SAFETY INFORMATION

- Keep the remote control away from water and high humidity.
- Do not expose the remote to direct sunlight or extreme temperatures.
- Do not attempt to disassemble or repair the remote control. This may void the warranty and cause damage.
- Dispose of used batteries responsibly according to local regulations.
- Ensure the remote control is compatible with your specific ceiling fan model before use.

3. PACKAGE CONTENTS

- 1 x LODADRA RGB Ceiling Fan Remote Control

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover open.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and -).
4. Close the battery compartment cover securely.

4.2 Pairing the Remote Control

This remote control is typically pre-paired with compatible LODADRA RGB ceiling fans. If the remote does not respond to your fan, follow these steps to pair it:

1. Ensure the ceiling fan's main power supply is turned OFF at the wall switch or circuit breaker.
2. Turn the main power supply to the ceiling fan ON.
3. Within 30 seconds of turning on the power, press and hold the 'ALL' button on the remote control for 3-5 seconds.
4. The fan light should blink or the fan should briefly activate, indicating successful pairing.
5. If pairing fails, repeat the steps. Ensure the remote is within range of the fan.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control. Refer to the image below for button identification and their corresponding functions.



Image 1: LODADRA RGB Ceiling Fan Remote Control. This image displays the white remote control with clearly labeled buttons for fan operation, light control, and timer settings.

5.1 General Power Control

- **ALL (Power Button):** Press to turn both the fan and light ON or OFF simultaneously.
- **ON OFF (Light Button):** Press to turn the fan light ON or OFF independently.

5.2 Fan Speed and Direction Control

- **FAN ON/OFF (Center Button):** Press to turn the fan ON or OFF.
- **Speed Buttons (1-6):** Select desired fan speed from 1 (lowest) to 6 (highest).
- **Fan Mode/Direction (Wavy Lines Icon):** Press to cycle through different fan modes or reverse fan

direction (if supported by the fan).

5.3 Light Control

- **Brightness Control (Sun Icon with Up/Down Arrows):** Press the up arrow to increase light brightness, and the down arrow to decrease it.
- **Color Temperature Control (K Icon with Up/Down Arrows):** Press the up arrow to increase color temperature (cooler white), and the down arrow to decrease it (warmer white).
- **RGB Color Control (RGB Icon with Up/Down Arrows):** Press the up or down arrow to cycle through various RGB color options or adjust RGB intensity.
- **RGB Cycle (RGB Icon with Arrows):** Press to activate an automatic RGB color cycling mode.

5.4 Timer Functions

- **1H (1 Hour Timer):** Press to set the fan and/or light to turn off automatically after 1 hour.
- **4H (4 Hour Timer):** Press to set the fan and/or light to turn off automatically after 4 hours.

6. MAINTENANCE

6.1 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the surface.

6.2 Battery Replacement

If the remote control's range decreases or it becomes unresponsive, replace the batteries. Follow the battery installation steps in Section 4.1.

7. TROUBLESHOOTING

- **Remote not responding:**
 - Check battery polarity and ensure batteries are not depleted. Replace if necessary.
 - Ensure the remote is within effective range of the ceiling fan.
 - Re-pair the remote control with the fan (refer to Section 4.2).
 - Verify the ceiling fan has power.
- **Fan or light not turning on:**
 - Confirm the main power switch for the fan is ON.
 - Ensure the remote is paired correctly.
- **Inconsistent light or fan behavior:**
 - Interference from other electronic devices might be present. Try operating the remote from a different position.

- Re-pair the remote.

8. SPECIFICATIONS



Brand	LODADRA
Model Number	d27e6111-9ede-4fb6-98cc-60f94b4216bd
Compatible Devices	Ceiling Fan with Light
Max Number of Supported Devices	1
Color	White
Special Feature	Remote Control
Item Weight	7 ounces
Package Dimensions	5.74 x 4.64 x 1.06 inches

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your LODADRA RGB Ceiling Fan or contact LODADRA customer service directly. Keep your purchase receipt as proof of purchase.

© 2023 LODADRA. All rights reserved.

Related Documents - d27e6111-9ede-4fb6-98cc-60f94b4216bd

 	Ironton 1800 Watt Portable Gasoline Generator Owner's Manual Comprehensive owner's manual for the Ironton 1800 Watt Portable Gasoline Generator (Item #57599), providing detailed assembly, operation, safety, maintenance, and troubleshooting instructions. Includes technical specifications, grounding procedures, and fueling guidelines to ensure safe and efficient use.
--	--

[illegible]

Pulsar PG2000 2000W Gasoline Generator Specifications and Information