

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [mollie](#) /
- › [mollie Robot Vacuum Cleaner User Manual](#)

mollie mollie A03-RV-001-18W

mollie Robot Vacuum Cleaner User Manual

Model: A03-RV-001-18W

[Safety Instructions](#) [Package Contents](#) [Product](#)

[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the mollie Robot Vacuum Cleaner. Keep this manual for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate the vacuum cleaner in areas with open flames, flammable or explosive materials.
- Do not allow the vacuum cleaner to pick up large objects, liquids, or burning/smoking materials.
- Ensure the charging dock is placed against a wall on a level surface and is not obstructed.
- Only use the original AC adapter and charging dock provided by the manufacturer.
- Do not immerse the vacuum cleaner or its electronic components in water.
- Regularly clean the dustbin and filter to maintain optimal performance.
- The product is certified safe and reliable with CE, FCC, and RoHS certifications.

2. PACKAGE CONTENTS

Verify that all components are present in the package:

- mollie Robot Vacuum Cleaner
- Remote Control
- AC Adapter

- Charging Dock
 - Side Brushes (2 pairs)
 - User Manual
 - Dry Mop
-

3. PRODUCT OVERVIEW

The mollie Robot Vacuum Cleaner is designed for efficient and hassle-free cleaning across various floor types.

Key Features:

- **Enhanced Brushless Suction System:** Delivers powerful cleaning without hair entanglement.
- **High-Efficiency Filtration:** Equipped with a 310ml dustbin and HEPA filter for cleaner air.
- **Slim Design:** At just 2.8 inches (7.1 cm) in height, it easily cleans under furniture.
- **Intelligent Navigation:** Uses a 'Bow-Shaped' trajectory and anti-falling technology.
- **Whisper-Quiet Operation:** Operates at approximately 68 dB, similar to a casual conversation.
- **Automatic Recharging:** Returns to the charging dock when battery is low or cleaning is complete.

NAVIGATES CONFINED SPACES EFFECTIVELY



Image 3.1: The mollie Robot Vacuum's slim design allows it to effectively navigate and clean under furniture.

2 IN 1 VACUUMING AND MOPPING

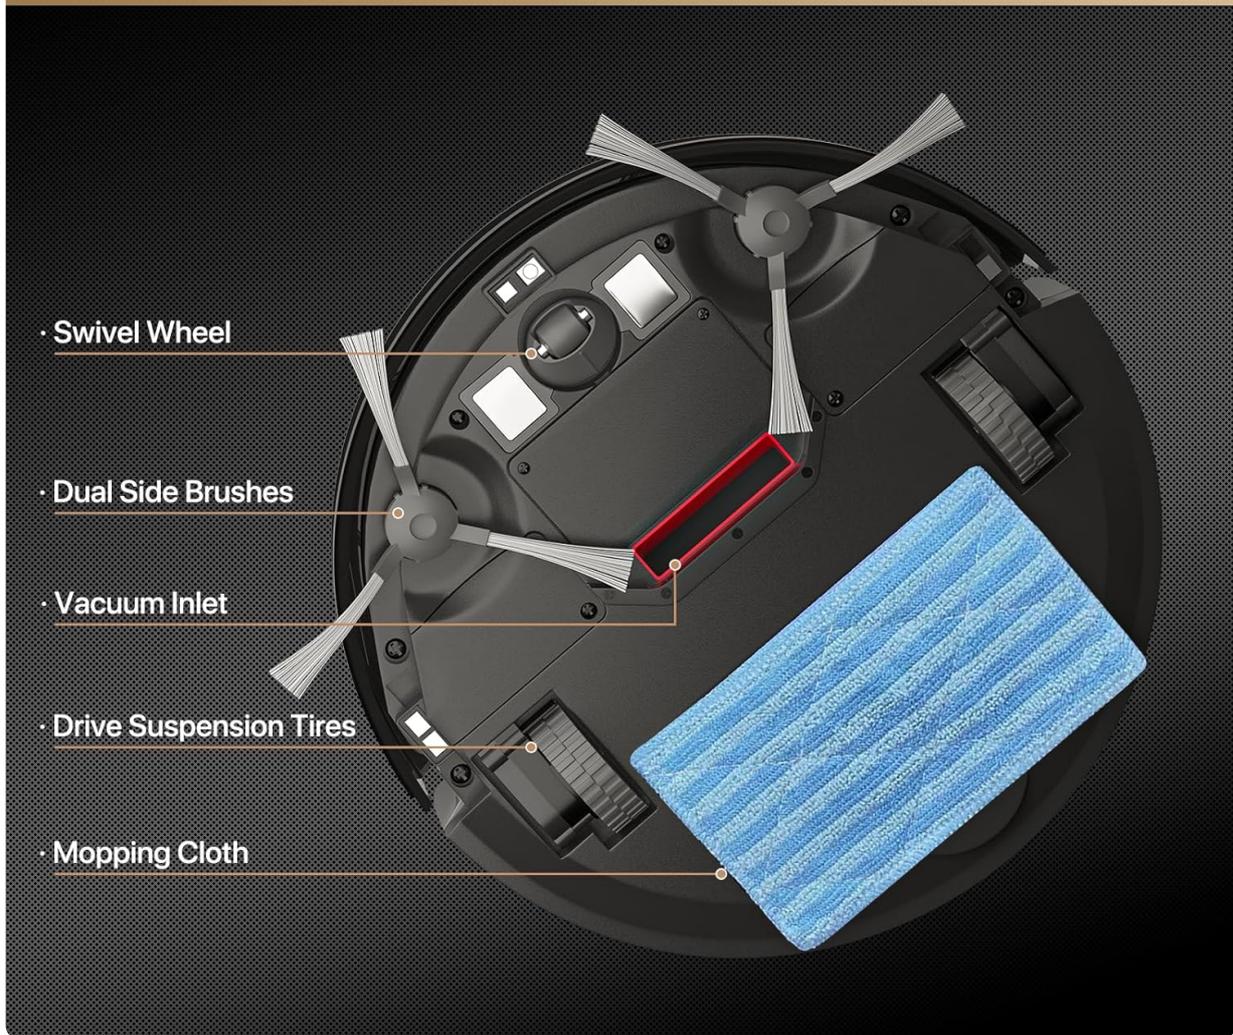


Image 3.2: Underside view illustrating the swivel wheel, dual side brushes, vacuum inlet, drive suspension tires, and mopping cloth for 2-in-1 functionality.

1300PA POWERFUL SUCTION

For thorough cleaning and efficiency



Image 3.3: The robot vacuum effectively picks up debris with its 1300Pa powerful suction for thorough cleaning.

A SPACIOUS 310 ML DUSTBIN

The robot vacuum captures and retains more debris



Image 3.4: The robot vacuum features a spacious 310ml dustbin designed to capture and retain more debris during cleaning cycles.

DEEP CARPET & FLOOR CLEANING

Suitable for Hardwood / Marbles / Ceramic / Tile / Low-medium Pile Carpet



Image 3.5: The mollie Robot Vacuum is suitable for deep cleaning on various surfaces including hardwood, marble, ceramic tile, and low-to-medium pile carpets.

| OPERATES SILENTLY

Providing noise-free cleaning performance



Image 3.6: The robot vacuum operates silently, providing noise-free cleaning performance that won't disrupt daily activities.

4. SETUP

4.1 Unpacking and Initial Preparation

1. Remove the robot vacuum and all accessories from the packaging.
2. Remove any protective films or stickers from the robot and charging dock.
3. Attach the side brushes by pressing them into their respective slots on the underside of the vacuum until they click into place.

4.2 Placing the Charging Dock

- Place the charging dock against a wall on a hard, level surface.
- Ensure there is at least 1 meter (3 feet) of clear space on both sides of the dock and 2 meters (6 feet) in front of it.
- Plug the AC adapter into the charging dock and then into a wall outlet.
- Ensure the power indicator on the charging dock illuminates.

4.3 Initial Charging

1. Place the robot vacuum onto the charging dock, ensuring the charging contacts on the robot align with those on the dock.
2. The robot will begin charging automatically. Allow 3-5 hours for a full charge before first use.
3. The indicator light on the robot will change to indicate charging status (refer to the robot's specific indicator light guide in the manual for details).



Image 4.1: The robot vacuum automatically returns to its charging dock for recharging, ensuring uninterrupted cleaning sessions.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

- **Power On:** Press and hold the power button on the robot for a few seconds until the indicator light illuminates.
- **Power Off:** Press and hold the power button on the robot for a few seconds until the indicator light

turns off.

5.2 Starting a Cleaning Cycle

- Press the power button on the robot once, or the 'Start/Pause' button on the remote control, to begin cleaning in Auto mode.
- The robot will automatically navigate and clean your space using its intelligent 'Bow-Shaped' trajectory.

5.3 Cleaning Modes

Use the remote control to select different cleaning modes:

- **Auto Mode:** The default cleaning mode, suitable for general cleaning. The robot intelligently plans its path.
- **Focus Mode:** The robot will clean a specific area more intensely, moving in a spiral pattern.
- **Edge Mode:** The robot will clean along walls and furniture edges.

5.4 Using the Remote Control

The remote control provides convenient access to all functions:

- **Start/Pause:** Start or pause the cleaning cycle.
- **Directional Buttons:** Manually control the robot's movement.
- **Return:** Send the robot back to the charging dock.
- **Mode Selection:** Buttons for Auto, Focus, and Edge cleaning modes.

PROVIDES CONVENIENCE WITH REMOTE CONTROL ACCESSIBILITY



Image 5.1: The remote control offers convenient accessibility for managing the robot vacuum's functions and cleaning modes.

5.5 Anti-Falling Technology

The robot is equipped with sensors to detect drops and ledges, preventing it from falling down stairs or off elevated surfaces.

6. CLEANING AND MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your robot vacuum.

6.1 Emptying the Dustbin

1. Press the dustbin release button and pull out the dustbin.
2. Open the dustbin cover and empty its contents into a trash bin.
3. Rinse the dustbin with water if necessary, ensuring it is completely dry before reinserting.

6.2 Cleaning the HEPA Filter

1. Remove the HEPA filter from the dustbin.
2. Tap the filter gently to remove dust and debris. Do not wash the HEPA filter with water.
3. Replace the HEPA filter every 3-6 months, depending on usage.

6.3 Cleaning Side Brushes

- Periodically check the side brushes for tangled hair or debris.
- Carefully remove any obstructions. If brushes are damaged, replace them with new ones.

6.4 Cleaning Sensors and Charging Contacts

- Wipe the anti-drop sensors, bumper sensors, and charging contacts on both the robot and the charging dock with a clean, dry cloth.
- Ensure these components are free of dust and debris for proper operation.

7. TROUBLESHOOTING

If you encounter issues with your mollie Robot Vacuum, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Robot does not power on	Low battery; Power button not pressed long enough	Charge the robot fully; Press and hold the power button for several seconds.
Robot does not charge	Charging contacts dirty; Charging dock not powered; Robot not properly aligned	Clean charging contacts; Ensure dock is plugged in; Realign robot on dock.
Poor suction or leaves debris	Dustbin full; Filter clogged; Side brushes tangled	Empty dustbin; Clean/replace filter; Clean side brushes.
Robot gets stuck frequently	Obstacles in path; Too many cables/rug fringes	Clear obstacles; Tidy up cables and loose rug fringes before cleaning.
Robot falls down stairs	Anti-drop sensors dirty or blocked	Clean the anti-drop sensors on the underside of the robot.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model Name	mollie A03-RV-001-18W

Feature	Specification
Form Factor	Robotic
Product Dimensions (L x W x H)	27.9L x 27.9W x 7.1H Centimetres (2.8" height)
Colour	Black
Controller Type	Remote Control
Filter Type	HEPA Filter
Dustbin Capacity	310 ml
Battery Life	Up to 90 minutes
Charging Time	3-5 hours
Cleaning Area	Up to 1290 ft ²
Sound Output	68 dB
Surface Recommendation	Low Pile Carpet, Hard Floors, Wood Floor, Tile Floor
Special Feature	Cordless, Anti-falling Technology
Certifications	CE, FCC, RoHS
ASIN	B0CKYH32SL

9. WARRANTY & SUPPORT

The mollie Robot Vacuum Cleaner comes with a standard manufacturer's warranty. For detailed warranty information, including terms and conditions, please refer to the warranty card included in your package or contact mollie customer support.

If you have any questions, require technical assistance, or need to report an issue, please contact our customer support team through the contact information provided on the mollie official website or your purchase platform.