

OhO sunshine 628 4K

OhO sunshine Ultra 4K Camera Glasses Instruction Manual

Brand: OhO sunshine | Model: 628 4K

INTRODUCTION

The OhO sunshine Ultra 4K Camera Glasses are designed for capturing high-quality video and photos during outdoor activities. Featuring a built-in 4K camera, 512GB internal memory, and UV400 polarized lenses, these smart glasses offer a convenient way to record your experiences from a first-person perspective. The durable TR90 flexible frame and IP33 water protection make them suitable for various environments.



Image: OhO sunshine Ultra 4K Camera Glasses, showcasing the main unit and included interchangeable lenses (clear, yellow, blue, black).

SETUP

1. Initial Charging

Before first use, fully charge the camera glasses. Connect the included USB cable to the charging port on the glasses and to a power source (e.g., computer USB port or USB wall adapter). The LED indicator will show charging status. A full charge provides approximately 60 minutes of recording time.

2. Memory

The glasses come with a built-in 512GB memory, capable of storing approximately 55 hours of 4K video. No external memory card is required.

3. Lens Care

The lenses are impact-resistant and provide 100% UV400 protection. Handle lenses by the edges to avoid fingerprints. Clean with a soft, lint-free cloth. Avoid abrasive materials or harsh chemicals.

OPERATING INSTRUCTIONS

1. Power On/Off

To power on, press and hold the power button located on the side of the frame until the LED indicator lights up. To power

off, press and hold the power button again until the LED indicator turns off.

2. Video Recording

With the glasses powered on, a single press of the record button will start video recording. The glasses will vibrate and the LED indicator will change to confirm recording has begun. Press the record button again to stop recording. The glasses will vibrate again, and the LED will change back to standby mode.



Image: Detailed view of the camera lens and control buttons on the side of the glasses frame.

Video: Demonstrates the use of OhO sunshine camera sunglasses for sporting activities, highlighting the ease of recording.

Video: Showcases the full 4K camera capabilities of the sunglasses, including first-person view recording during outdoor activities like fishing.

3. Photo Capture

While in standby mode, a quick double-press of the record button will capture a photo. The glasses will vibrate and the LED indicator will flash to confirm the photo has been taken.

4. Charging During Recording

The OhO sunshine camera glasses support recording while being charged. You can connect a power bank to the glasses via the USB cable to extend recording time, which is useful for longer sessions.



Image: The camera glasses connected to a portable power bank, illustrating the "charge on the go" feature.

5. Playback and Data Transfer

To view recorded content or transfer files, connect the glasses to a computer or TV using the included USB cable. The glasses will appear as a removable storage device, allowing you to access and manage your video and photo files.

MAINTENANCE

1. Water Protection

The glasses feature IP33 level water protection, meaning they are resistant to water spray. They are not designed to be submerged in water. Avoid prolonged exposure to heavy rain or direct water jets.

2. Lens and Frame Care

The TR90 flexible material frame is designed for comfort and durability. The lenses meet US Safety Lens Standard ANSI/ISEA Z87.1-2015 for impact resistance. To clean, gently wipe lenses with a microfiber cloth. For stubborn smudges,

use a lens cleaning solution specifically designed for eyewear. Do not use paper towels or clothing, as they can scratch the lenses.



Image: Visual comparison demonstrating the effectiveness of UV400 protection provided by the lenses.

TROUBLESHOOTING

- **Device Not Powering On:** Ensure the battery is fully charged. Connect to a power source and check the charging indicator.
- **Recording Issues:** Verify that the device is powered on and has sufficient battery. Check the LED indicator and vibration alerts for confirmation of recording status.
- **Cannot Access Files on Computer:** Ensure the USB cable is securely connected to both the glasses and the computer. Try a different USB port or cable. The glasses should appear as a removable drive.
- **Poor Video/Photo Quality:** Ensure lenses are clean and free from smudges. Record in well-lit conditions for optimal results.

SPECIFICATIONS

Feature	Detail
Model Number	628 4K
Video Resolution	4K Ultra HD
Photo Resolution	24MP
Built-in Memory	512GB (approx. 55 hours video storage)
Battery Life (Recording)	Approx. 60 minutes per charge
Water Protection	IP33 Level (Water Spray Resistant)
Lens Protection	100% UV400, ANSI/ISEA Z87.1-2015 Impact Resistant
Frame Material	TR90 Flexible Material
Item Weight	1.73 ounces

WARRANTY AND SUPPORT

For warranty information or technical support, please contact the manufacturer, OhO sunshine. Refer to the product packaging or the official OhO sunshine website for contact details and specific warranty terms.

You can visit the [OhO sunshine Store on Amazon](#) for more product information and support resources.