

[Manuals.plus](#) /

› [HOFSTEIN](#) /

› HOFSTEIN Safari Modern Ceiling Light H3695319 User Manual

HOFSTEIN H3695319

HOFSTEIN Safari Modern Ceiling Light (Model H3695319) User Manual

INTRODUCTION

This manual provides comprehensive instructions for the safe installation, operation, and maintenance of your HOFSTEIN Safari Modern Ceiling Light, model H3695319. Please read this manual thoroughly before beginning installation and retain it for future reference. Proper installation and use will ensure optimal performance and safety.

SAFETY INFORMATION

Always adhere to the following safety precautions to prevent injury or damage:

- **Disconnect Power:** Always switch off the main power supply at the circuit breaker or fuse box before attempting any installation, maintenance, or bulb replacement.
- **Qualified Installation:** If you are unsure about electrical installations, consult a qualified electrician. All wiring must comply with local electrical codes.
- **Secure Mounting:** Ensure the mounting surface is structurally sound and capable of supporting the weight of the light fixture.
- **Correct Bulbs:** Use only GU10 bulbs with a maximum wattage of 50 Watts per bulb. Do not exceed the specified wattage.
- **Indoor Use Only:** This fixture has an IP20 rating, meaning it is protected against solid objects larger than 12.5mm but has no protection against water. It is designed for indoor use in dry locations only.
- **Avoid Contact:** Do not touch bulbs immediately after they have been on, as they may be hot. Allow them to cool before handling.

PACKAGE CONTENTS

Carefully unpack the box and ensure all components are present and undamaged. If any parts are missing or damaged, do not proceed with installation and contact customer support.

- 1 x HOFSTEIN Safari Modern Ceiling Light Fixture (wooden beam with 6 spotlights)
- 1 x Mounting Hardware Kit (screws, wall plugs, connectors)
- 1 x User Manual

Note: GU10 bulbs are not included and must be purchased separately.

PRODUCT OVERVIEW AND DIMENSIONS

The HOFSTEIN Safari Modern Ceiling Light features a robust design combining natural wood and black metal. It includes six independently adjustable spotlights for versatile lighting.



An overview of the ceiling light installed in a room, showcasing its industrial and modern design.

Key dimensions of the fixture are:

- **Length:** 94 cm
- **Width:** 6 cm
- **Height:** 19 cm (maximum, including spotlights)
- **Spotlight Diameter:** 8 cm



A diagram illustrating the key dimensions of the ceiling light, including length, width, and height.

INSTALLATION INSTRUCTIONS

Follow these steps carefully for safe and correct installation.

1. Preparation

- **Turn off Power:** Before starting, ensure the power supply to the installation area is completely disconnected at the main circuit breaker.
- **Gather Tools:** You will need a drill, screwdriver, wire strippers, and potentially a voltage tester.

2. Mounting the Fixture

1. Position the light fixture against the ceiling at the desired location. Mark the drilling points for the mounting screws.
2. Drill holes at the marked points. Insert appropriate wall plugs if mounting into drywall or plaster.
3. Secure the fixture to the ceiling using the provided screws. Ensure it is firmly attached.



This image displays the internal wiring connections on the underside of the wooden beam, crucial for electrical installation.

3. Electrical Connection

- Connect the household electrical wires to the corresponding wires on the light fixture. Typically:
 - Live (L) to Live (L)
 - Neutral (N) to Neutral (N)
 - Ground (E) to Ground (E)
- Use appropriate wire connectors and ensure all connections are secure.

4. Bulb Installation

- Insert GU10 bulbs into each of the six spotlight sockets. Gently push and twist to secure.
- Ensure bulbs are correctly seated.

5. Final Check

- Once all connections are made and the fixture is securely mounted, restore power at the main circuit breaker.
- Test the light fixture to ensure it functions correctly.

OPERATING INSTRUCTIONS

The HOFSTEIN Safari Modern Ceiling Light is designed for straightforward operation.

- **Turning On/Off:** The light is operated via a standard wall switch connected to your household electrical circuit.
- **Adjusting Spotlights:** Each of the six spotlights can be independently pivoted and rotated to direct light as desired. Gently adjust the spotlight heads to achieve your preferred lighting angle.



A detailed view of one of the adjustable spotlights, illustrating how it pivots and rotates for directional lighting.

- **Dimming Functionality:** This fixture is dimmable, but requires an external dimmer switch (not included) to be installed in your electrical circuit. Ensure any dimmer used is compatible with GU10 LED or halogen bulbs.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your ceiling light.

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, dry, lint-free cloth. Do not use abrasive cleaners, solvents, or polishes, as these can damage the finish.
- **Bulb Replacement:** Disconnect power and allow bulbs to cool completely before attempting to replace them. Gently twist and pull out the old GU10 bulb, then insert and twist the new bulb into place.
- **Inspection:** Periodically check all connections and mounting hardware to ensure they remain secure.

TROUBLESHOOTING

If you encounter issues with your ceiling light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Faulty bulb. Loose wiring connection.	Check circuit breaker/fuse. Replace bulb. Verify wiring connections (ensure power is off).
Light flickers.	Loose bulb. Incompatible dimmer switch. Faulty bulb.	Ensure bulb is securely seated. Verify dimmer compatibility with GU10 bulbs. Replace bulb.
Light is too dim/bright.	Incorrect bulb wattage. No dimmer installed (if desired).	Ensure bulbs are 50W max. For dimming, install an external dimmer switch.

SPECIFICATIONS

Detailed technical specifications for the HOFSTEIN Safari Modern Ceiling Light:

Feature	Detail
Model Number	H3695319
Type	Ceiling Light
Dimensions (L x W x H)	94 cm x 6 cm x 19 cm
Materials	Wood, Metal
Color	Ecru (wood), Black (metal)
Bulb Socket Type	GU10
Number of Lights	6
Max Wattage per Bulb	50 Watt
Bulbs Included	No

Feature	Detail
Dimmable	Yes (with external dimmer, not included)
Power Supply	230 Volt
IP Rating	IP20 (Indoor use only)
Style	Industrial, Retro, Scandinavian, Vintage
Installation Type	Ceiling Mount / Semi-flush Mount

WARRANTY AND SUPPORT

HOFSTEIN is committed to customer satisfaction. While specific warranty details are not provided in this manual, we strive to ensure the quality of our products.

If you have any questions, require assistance with installation, or experience any issues with your HOFSTEIN Safari Modern Ceiling Light, please do not hesitate to contact HOFSTEIN customer support. Our team is ready to assist you with inquiries, returns, or exchanges.

For more information or to explore other HOFSTEIN products, please visit our official brand store[HOFSTEIN Brand Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CKZ1RMTD>

More documents and user manuals: <https://manuals.plus/>