

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Vicco](#) /

› Vicco Gloria Midischrank Bathroom Cabinet Instruction Manual

Vicco 16174

Vicco Gloria Midischrank Bathroom Cabinet Instruction Manual

Model: 16174

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Vicco Gloria Midischrank Bathroom Cabinet. Please read this manual thoroughly before beginning assembly or use to ensure safe and correct installation and to maximize the lifespan of your product.



Image 1.1: Front view of the Vicco Gloria Midischränk Bathroom Cabinet. This cabinet features a clean white finish with Sonoma accents, a top drawer, and a lower cabinet with a door.

2. SAFETY INFORMATION

Please observe the following safety precautions during assembly and use:

- **Read all instructions:** Ensure you understand all assembly steps before proceeding.
- **Keep children away:** Small parts can be a choking hazard. Keep children and pets away from the assembly area.
- **Use appropriate tools:** Only use the tools specified or recommended in the assembly instructions.
- **Assemble on a soft surface:** To prevent scratches, assemble the cabinet on a clean, soft surface like a carpet or blanket.
- **Secure to wall (if applicable):** If wall-mounting hardware is provided, it is crucial to secure the cabinet to a solid wall to prevent tipping. Consult a professional if unsure about wall types or suitable fasteners.
- **Do not overload:** Adhere to the maximum weight capacity of 8 kg to prevent damage or injury.
- **Handle with care:** Engineered wood can be damaged by excessive force or impact.

3. PACKAGE CONTENTS

Before starting assembly, verify that all components are present and undamaged. Refer to the included assembly diagram for a complete list of parts and hardware.

- Cabinet panels (sides, top, bottom, back, shelves)
- Drawer components (front, sides, back, bottom)
- Door panel
- Assembly hardware (screws, dowels, cam locks, hinges, drawer slides)
- Instruction manual

Note: Specific hardware quantities will be detailed in the separate assembly instructions provided in the package.

4. SETUP & ASSEMBLY

Assembly of the Vicco Gloria Midischrank requires basic tools and careful attention to the provided assembly diagram. It is recommended that two people assemble this unit.

4.1 Tools Required (Not Included)

- Phillips head screwdriver
- Hammer (for dowels)
- Measuring tape
- Level (for wall mounting, if applicable)

4.2 Assembly Steps

1. **Prepare the Area:** Clear a spacious, clean, and soft area for assembly to prevent damage to the cabinet parts.
2. **Identify Components:** Lay out all panels and hardware. Match them with the parts list and diagrams in the separate assembly instructions.
3. **Assemble the Main Frame:** Connect the side panels to the bottom and top panels using dowels and cam locks as indicated. Ensure all connections are secure.
4. **Install Back Panel:** Slide or nail the back panel into place. This adds stability to the cabinet.
5. **Assemble the Drawer:** Connect the drawer sides, front, and back. Insert the drawer bottom. Attach the drawer slides to the drawer and the cabinet interior.
6. **Attach the Door:** Secure the hinges to the door and the cabinet frame. Adjust hinges for proper door alignment and smooth operation. The door can be mounted to open left or right depending on hinge placement.
7. **Insert Shelves:** Place the adjustable shelves into the desired positions using the shelf pins.
8. **Final Checks:** Ensure all screws are tightened and the cabinet is stable.



Image 4.1: Detailed view of the cabinet's internal structure and key dimensions, including the drawer height (15.4 cm), door height (49.6 cm), overall height (75.5 cm), width (33 cm), and depth (35 cm).

5. OPERATING INSTRUCTIONS

The Vicco Gloria Midischrank is designed for convenient storage in your bathroom.

- **Drawer Use:** The top drawer operates on smooth slides. Pull gently to open and push to close. Avoid forcing the drawer.
- **Cabinet Door:** The lower cabinet features a hinged door. Open and close the door by gently pulling or pushing the edge. The door can be adjusted for optimal alignment using the hinge screws.
- **Adjustable Shelves:** The internal shelves can be repositioned to accommodate items of various heights. To adjust, remove items, lift the shelf, remove the pins, reposition the pins to desired holes, and then place the shelf back on the pins.
- **Weight Distribution:** Distribute weight evenly across shelves and within the drawer. Do not exceed the maximum weight capacity of 8 kg for the entire unit.



Image 5.1: The cabinet with its top drawer partially open and the lower door fully open, revealing neatly folded towels on the internal shelf, demonstrating its storage capacity.

6. CARE & MAINTENANCE

Proper care will help maintain the appearance and longevity of your cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Use mild soap if necessary. Avoid abrasive cleaners, solvents, or harsh chemicals, as these can damage the melamine coating.
- **Spills:** Immediately wipe up any spills, especially water, to prevent moisture damage to the engineered wood.
- **Dusting:** Regularly dust with a dry, soft cloth to prevent buildup. The cabinet is designed to be dust-resistant.
- **Hardware Check:** Periodically check all screws and fittings to ensure they remain tight. Retighten if necessary.

- **Avoid Direct Sunlight/Heat:** Prolonged exposure to direct sunlight or excessive heat can cause fading or warping.

7. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Cabinet is wobbly/unstable.	Loose connections; uneven floor.	Ensure all screws and cam locks are fully tightened. If on an uneven floor, use shims under the base.
Drawer does not slide smoothly.	Drawer slides misaligned; obstruction; loose screws.	Check that drawer slides are correctly installed and aligned. Ensure all screws on the slides are tight. Remove any obstructions.
Door is misaligned or does not close properly.	Hinges are loose or improperly adjusted.	Adjust the screws on the hinges to align the door. Refer to the assembly instructions for hinge adjustment details.
Missing parts or damaged components.	Manufacturing error or shipping damage.	Contact Vicco customer support with your purchase details and a description of the issue.

8. SPECIFICATIONS

Brand	Vicco
Model Number	16174
Color	White / Sonoma accents
Material	Engineered Wood (16 mm particle board with melamine coating)
Dimensions (L x W x H)	35 cm (Depth) x 33 cm (Width) x 75.5 cm (Height)
Item Weight	14.3 Kilograms
Maximum Weight Capacity	8 Kilograms
Special Feature	Dust-resistant
Recommended Use	Indoor

9. WARRANTY & SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact the retailer where the product was purchased. Vicco aims to provide quality products and support. If you have questions regarding assembly, missing parts, or product defects, please have your model number (16174) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CKZ8VXFH>

More documents and user manuals: <https://manuals.plus/>