

[Manuals.plus](#) /

› [RadioShack](#) /

› RadioShack Cordless Phone RS6114 User Manual

RadioShack RS6114

RadioShack Cordless Phone RS6114 User Manual

Model: RS6114 | Brand: RadioShack

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your RadioShack Cordless Phone, Model RS6114. This device features caller ID, a backlit keypad, multiple ringtones, and DECT 6.0 technology for clear, interference-free communication. Please read this manual thoroughly before using your phone to ensure proper functionality and to familiarize yourself with all its features.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Cordless Handset
- Base Unit
- Phone Adapter (Power Supply)
- Rechargeable Battery Pack
- Telephone Line Cord (Coaxial Cable)
- User Manual (this document)



Image: All components included in the RadioShack Cordless Phone package, laid out for inspection. This includes the red handset, the matching red base unit, the power adapter, the rechargeable battery pack, and the telephone line cord.

SETUP GUIDE

1. Battery Installation

1. Locate the battery compartment cover on the back of the cordless handset.
2. Slide the cover downwards to open it.
3. Connect the rechargeable battery pack connector to the jack inside the compartment, ensuring correct polarity.
4. Place the battery pack into the compartment.
5. Slide the battery compartment cover back into place until it clicks securely.

2. Base Unit Connection

1. Connect one end of the telephone line cord (coaxial cable) to the **LINE** jack on the back of the base unit.
2. Connect the other end of the telephone line cord to a standard telephone wall jack.
3. Plug the small end of the phone adapter into the **POWER** jack on the back of the base unit.
4. Plug the larger end of the phone adapter into a standard electrical outlet.
5. Place the handset on the base unit to charge. The **CHARGE** indicator on the base unit should illuminate. Allow the handset to charge for at least 12-16 hours before initial use.



Image: The RadioShack Cordless Phone handset resting in its red base unit, indicating it is charging. The base unit is connected to power and a telephone line.

OPERATING INSTRUCTIONS

Making a Call

1. Press the **TALK** button to get a dial tone.
2. Dial the desired phone number using the numeric keypad.

3. To end the call, press the **OFF** button or place the handset back on the base unit.

Receiving a Call

1. When the phone rings, press the **TALK** button to answer.
2. To end the call, press the **OFF** button or place the handset back on the base unit.

Adjusting Volume

During a call, press the **VOL+** or **VOL-** buttons to adjust the earpiece volume. The phone also features control for ringer volume.

Caller ID

When a call comes in, the caller's number and name (if available and stored in your phonebook) will be displayed on the backlit screen. The phone supports caller ID for one call at a time and can store up to 30 contacts.

Ringtones

Your phone offers 4 different ringtones. Refer to the on-screen menu options to select your preferred ringtone. Use the **MENU/SELECT** button to navigate and confirm selections.



Image: A detailed view of the RadioShack Cordless Phone handset, highlighting its backlit digital display and illuminated

numeric keypad, essential for operation in various lighting conditions.

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the handset and base unit. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** For optimal battery life, keep the handset on the base unit when not in use. If the phone will be unused for an extended period, remove the battery.
- **Environment:** Avoid exposing the phone to extreme temperatures, direct sunlight, or moisture.

TROUBLESHOOTING

Problem	Solution
No dial tone	Ensure the telephone line cord is securely connected to both the base unit and the wall jack. Check if the power adapter is properly connected to the base unit and a working electrical outlet. Verify the handset battery is charged.
Handset not charging	Ensure the handset is correctly seated on the base unit. Check the power adapter connection. Clean the charging contacts on both the handset and base unit with a dry cloth.
Poor call quality or interference	Move the handset closer to the base unit. Avoid placing the base unit near other electronic devices (e.g., microwaves, Wi-Fi routers) that may cause interference. Ensure the DECT 6.0 technology is operating within its optimal range.
Caller ID not displaying	Ensure you have subscribed to Caller ID service from your telephone service provider. Check if the caller has blocked their number.

PRODUCT SPECIFICATIONS

Brand	RadioShack
Model Number	RS6114
Phone Type	Cordless
Color	Red
Technology	DECT 6.0 (1.92 GHz to 1.93 GHz)
Caller ID	Yes (single line operation)
Keypad	Backlit Numeric Keypad
Display	Illuminated Digital Display
Phonebook Capacity	Up to 30 contacts

Ringtones	4 different types
Power Source	Corded Electric, Battery Powered
Batteries	2 AA rechargeable batteries (included)
Material	Plastic
Item Weight	1 Kilogram
UPC	040293998912

WARRANTY INFORMATION

This RadioShack Cordless Phone, Model RS6114, comes with a limited warranty of **1 month** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for any warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or natural disasters.

CUSTOMER SUPPORT

For technical assistance, troubleshooting, or warranty inquiries regarding your RadioShack Cordless Phone RS6114, please contact RadioShack customer support. Refer to the official RadioShack website or product packaging for the most current contact information.

You can also visit the [RadioShack Mexico website](#) for additional resources and support.