

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Kenmore](#) /

> [Kenmore 30" Top Mount Refrigerator with Freezer Instruction Manual](#)

Kenmore 4662315

Kenmore 30" Top Mount Refrigerator with Freezer

Model: 4662315

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Kenmore 30" Top Mount Refrigerator with Freezer. Please read this manual thoroughly before using your appliance and retain it for future reference.



Image: The Kenmore 30-inch Top Mount Refrigerator, model 4662315, positioned within a contemporary kitchen environment, showcasing its fingerprint-resistant stainless steel finish and compact design.

SAFETY INFORMATION

Your safety and the safety of others are very important. This manual and the appliance itself provide important safety messages. Always read and obey all safety messages.

- **Electrical Safety:** Ensure the refrigerator is connected to a grounded electrical outlet. Do not use extension cords.

- **Ventilation:** Allow adequate space around the refrigerator for proper ventilation.
- **Flammable Materials:** Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **Child Safety:** Supervise children when they are near the appliance. Old refrigerators are a dangerous attraction for children.
- **Disposal:** Dispose of the refrigerator according to local regulations due to flammable refrigerant and insulation gas.

SETUP

Unpacking

Remove all packaging materials, tape, and protective film from the refrigerator. Clean the interior with a mild detergent and warm water before initial use.

Location Requirements

Place the refrigerator on a level, sturdy floor. Ensure there is sufficient space for the doors to open completely and for proper air circulation around the unit. Refer to the specifications section for exact dimensions.



Image: A diagram illustrating the external dimensions of the Kenmore 30-inch Top Mount Refrigerator, indicating a depth of 30.75 inches, width of 29.53 inches, and height of 66.38 inches.

Electrical Connection

Connect the refrigerator to a dedicated, grounded 115 Volt, 60 Hz, AC only electrical outlet with a 15 or 20 amp fuse or circuit breaker. Do not use an adapter plug or extension cord.

Door Reversal

The refrigerator doors are reversible, allowing for left or right-hand opening. Consult the detailed instructions provided in the separate installation guide for door reversal procedures.

Initial Cleaning

Before placing food inside, clean the interior and exterior surfaces of the refrigerator. Use a soft cloth with a solution of mild soap and warm water. Rinse and dry thoroughly.



Image: An interior view of the Kenmore refrigerator with both the refrigerator and freezer doors open, showing the empty glass shelves and clear crispers, ready for initial cleaning or loading.

OPERATING

Temperature Control

The refrigerator and freezer compartments have independent temperature controls. Adjust the settings to achieve desired cooling performance. The recommended setting for the refrigerator is 'Recommended' or 'Cold', and for the freezer, 'Recommended'.



Image: A close-up view of the refrigerator's internal temperature control panel, featuring buttons for temperature setting, a 'Standby' option, and indicators for 'Cold' and 'Coldest' settings.



Image: A close-up view of the freezer's temperature control dial, marked with 'Cold' and 'Coldest' settings and a 'Recommended' indicator for optimal freezing.

Adjustable Shelving

The refrigerator features full-width, adjustable tempered glass shelves. These shelves can be repositioned to accommodate items of various heights, such as tall bottles or large platters.



Image: The interior of the Kenmore refrigerator, showcasing various food items neatly organized on the adjustable glass shelves and within the clear door bins and crisper drawers.

Humidity-Controlled Crispers

Two clear humidity-controlled crispers are located at the bottom of the refrigerator compartment. Adjust the humidity level using the slider to keep fruits and vegetables fresh for longer periods.



Image: A detailed view of the humidity-controlled crisper drawers inside the Kenmore refrigerator, filled with fresh fruits and vegetables, demonstrating their capacity and design.

Door Bins

The refrigerator door includes three clear bins, with one designed to hold gallon-sized containers. The freezer door has two full-width bins for organizing smaller frozen items.



Image: A close-up of the covered dairy compartment located on the refrigerator door, containing butter and other spreads, designed to maintain an ideal temperature for these items.



Image: The interior of the freezer door, showing two clear bins filled with various frozen food items, illustrating the organized storage capacity.

LED Lighting

The interior of the refrigerator is illuminated by long-lasting, energy-efficient LED lighting, providing clear visibility of contents.

Optional Icemaker

This model is compatible with an optional icemaker (sold separately) that can produce up to 3 pounds of crescent-shaped ice per day. Refer to the icemaker's installation guide for details.

MAINTENANCE

Cleaning

- **Interior:** Clean the interior regularly with a solution of 2 tablespoons baking soda to 1 quart warm water. Rinse and dry thoroughly.
- **Exterior:** Wipe the fingerprint-resistant stainless steel exterior with a clean, soft cloth and a mild, non-abrasive cleaner.
- **Door Gaskets:** Clean door gaskets with mild soap and water to ensure a proper seal.

Automatic Defrost

This refrigerator features an automatic defrost system, eliminating the need for manual defrosting of the freezer compartment.

Power Outages

In case of a power outage, keep the refrigerator and freezer doors closed to maintain internal temperatures for as long as possible. Food should remain frozen for approximately 24 hours if the freezer is full.

Vacation Care

For short vacations, leave the refrigerator operating normally. For long vacations, empty the refrigerator and freezer, turn off the appliance, clean it, and leave the doors ajar to prevent odors.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Refrigerator does not operate	No power to the refrigerator; Power cord unplugged; Blown fuse or tripped circuit breaker.	Check power supply; Ensure cord is securely plugged in; Replace fuse or reset circuit breaker.
Temperature is too warm	Temperature control set too high; Door left open; Large amount of warm food added; Poor air circulation.	Adjust temperature setting lower; Ensure door is closed properly; Allow time for new food to cool; Rearrange items for better airflow.
Excessive noise	Refrigerator not level; Items vibrating inside; Compressor noise.	Level the refrigerator using the leveling legs; Secure loose items; Compressor noise is normal during operation.
Moisture buildup inside	High humidity; Door left open; Door gasket not sealing properly.	Ensure doors are closed; Check and clean door gaskets; Reduce frequency of door openings.

SPECIFICATIONS

Feature	Detail
Brand	Kenmore
Model Number	4662315
Capacity	18.2 Cubic Feet (Total)

Feature	Detail
Refrigerator Fresh Food Capacity	13.88 Cubic Feet
Freezer Capacity	4.27 Cubic Feet
Dimensions (D x W x H)	30.75 x 29.53 x 66.38 inches
Item Weight	163 Pounds
Color	Fingerprint Resistant Stainless Steel
Installation Type	Freestanding
Defrost System	Automatic
Shelves	4 (Glass)
Crispers/Drawers	2 (Humidity-Controlled)
Door Hinges	Reversible
Voltage	115 Volts
Annual Energy Consumption	365 Kilowatt Hours Per Year
Certification	ENERGY STAR Certified

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your appliance or visit the official Kenmore website. You can also find additional resources and contact information at the [Kenmore Store on Amazon](#).