

[Manuals.plus](#) /

› [Kenmore](#) /

› Kenmore 33 in. 20.5 cu. ft. Capacity Refrigerator/Freezer with Full-Width Adjustable Glass Shelving, Humidity Control Crispers, ENERGY STAR Certified, Fingerprint Resistant Stainless Steel 20.5 cu ft Fingerprint Resistant Stainless Steel

Kenmore 4661335

Kenmore 33 in. 20.5 cu. ft. Capacity Refrigerator/Freezer Instruction Manual

Model: 4661335 | Brand: Kenmore

PRODUCT OVERVIEW

This Kenmore 33-inch refrigerator and freezer offers 20.5 cu. ft. of storage within a space-saving footprint. Its traditional standard-depth design provides ample room for groceries, while the fingerprint-resistant stainless steel finish ensures a sleek appearance with minimal maintenance. The unit is ENERGY STAR Certified for energy efficiency.



Front view of the Kenmore 33-inch refrigerator in fingerprint-resistant stainless steel.

Key features include adjustable, full-width glass shelves for customizable storage, clear humidity-controlled crispers to keep produce fresh, and clear door bins, including two gallon-sized bins in the refrigerator and two in the freezer for organized storage.

Official product video showcasing the Kenmore Refrigerator and Freezer features.

SETUP

1. Placement

Choose a location with a grounded electrical outlet. Ensure adequate clearance around the refrigerator for

proper air circulation and door opening. The dimensions are approximately 30.75"D x 32.68"W x 66.38"H.



Product dimensions for proper placement.

2. Leveling

Use the adjustable leveling legs to ensure the refrigerator is stable and level. This prevents vibrations and ensures proper door sealing.

3. Initial Cleaning

Before first use, clean the interior and exterior surfaces with a mild detergent and warm water. Wipe dry thoroughly.

4. Power Connection

Plug the refrigerator into a dedicated, grounded 115 Volt AC outlet. Allow the unit to stand upright for at least 4 hours before plugging it in to allow refrigerants to settle. Allow 24 hours for the refrigerator to reach optimal temperature before loading with food.



The Kenmore refrigerator seamlessly integrated into a kitchen environment.

OPERATING INSTRUCTIONS

Temperature Control

The refrigerator features separate temperature controls for the fresh food and freezer compartments. Adjust the settings as needed to maintain desired cooling levels. The fresh food compartment has settings from 'Cold' to 'Coldest', and a 'Standby' option. The freezer has a dial from 'Cold' to 'Coldest' with a 'Recommended' setting.



Refrigerator temperature control panel.



Freezer temperature control dial.

Adjustable Shelving

The full-width glass shelves in the fresh food compartment can be adjusted to accommodate items of various heights. Simply lift and slide the shelves into the desired slots.



Adjustable glass shelves in the refrigerator compartment.

Humidity Control Crispers

Two clear crisper drawers are located at the bottom of the fresh food compartment. Use the humidity control sliders on each crisper to set the ideal humidity level for fruits (lower humidity) and vegetables (higher humidity) to extend their freshness.



Humidity-controlled crisper drawers.

Door Bins

The refrigerator and freezer doors are equipped with clear bins for additional storage. The refrigerator door bins are designed to hold gallon-sized containers, while the freezer door bins are suitable for smaller frozen items.



Refrigerator door bins for convenient storage.

Optional Icemaker

An optional icemaker can be installed in the freezer compartment, capable of producing up to 3 lbs. of crescent-shaped ice per day. Refer to the icemaker installation guide for detailed instructions.

MAINTENANCE

Cleaning

Regular cleaning helps maintain the appearance and efficiency of your refrigerator. For the fingerprint-resistant stainless steel exterior, use a soft cloth and a mild, non-abrasive cleaner. For the interior, use a solution of mild

soap and water. Avoid harsh chemicals or abrasive pads.



Interior view of the refrigerator and freezer compartments.

Automatic Defrost

This refrigerator features an automatic defrost system for both the fresh food and freezer compartments, eliminating the need for manual defrosting.

General Care

Periodically check the door gaskets for proper seal. Clean the condenser coils at the back or bottom of the refrigerator annually to ensure efficient operation. Ensure the refrigerator is not overloaded, which can impede air circulation and cooling efficiency.

TROUBLESHOOTING

- **Refrigerator not cooling:** Check if the power cord is securely plugged in. Ensure the temperature controls are set correctly. Verify that the door is fully closed and not obstructed.
- **Unusual noises:** Some operational noises are normal (e.g., hum of the compressor, gurgling of refrigerant). If noises are excessive or unusual, ensure the refrigerator is level and not touching walls or cabinets.
- **Excessive frost in freezer:** While the unit has automatic defrost, excessive frost can indicate a faulty door seal or frequent/prolonged door openings.
- **Water on floor:** Check the drain pan and drain tube for clogs. Ensure the refrigerator is level.

For persistent issues, refer to the full troubleshooting guide in your comprehensive user manual or contact customer support.

SPECIFICATIONS

Feature	Detail
Brand Name	Kenmore
Model Info	33 in.
Item Weight	176 pounds
Product Dimensions	30.75 x 32.68 x 66.38 inches
Capacity	20.5 Cubic Feet
Annual Energy Consumption	385 Kilowatt Hours Per Year
Refrigerator Fresh Food Capacity	15.63 Cubic Feet
Freezer Capacity	4.88 Cubic Feet
Installation Type	Freestanding
Form Factor	Freezer Top
Special Features	Energy Efficient, Automatic Defrost, Adjustable Shelves
Color	Fingerprint Resistant Stainless Steel
Voltage	115 Volts
Racks	2
Crispers/Drawers	2
Defrost	Automatic

Door Hinges	Reversible
Shelf Type	Glass
Shelves	4
Certification	Energy Star
Number Of Doors	2

WARRANTY AND SUPPORT

This Kenmore appliance comes with a standard manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For customer support, service, or to inquire about parts, please visit the official Kenmore website or contact their customer service line. You can also find more information via the [Customer Support](#) link on the product page.