

PHILIPS EP2339

Philips EP2339 OneTouch LatteGo Automatic Coffee Machine

User Instruction Manual

Model: EP2339

1. INTRODUCTION

Welcome to the user manual for your Philips EP2339 OneTouch LatteGo Automatic Coffee Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and keep it for future reference.

Your Philips EP2339 machine is designed to deliver a variety of coffee and milk-based beverages with ease, featuring a OneTouch LatteGo milk system for creamy froth and an AquaClean filter for improved water quality.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then

remove plug from wall outlet.

- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Philips EP2339 coffee machine.



Figure 1: Front view of the Philips EP2339 coffee machine with a cup of latte.



Figure 2: Close-up of the intuitive touch display for beverage selection and machine settings.

Key Components:

- **Control Panel:** Intuitive display for selecting beverages and settings.
- **Coffee Spout:** Dispenses coffee.
- **LatteGo Milk System:** Detachable milk carafe for frothing milk.
- **Drip Tray:** Collects excess liquid.
- **Water Tank:** For filling with fresh water.
- **Bean Hopper:** For whole coffee beans.
- **Ground Coffee Chute:** For pre-ground coffee.
- **AquaClean Filter:** Improves water quality and reduces descaling frequency.

4. SETUP AND FIRST USE

4.1 Unpacking

Carefully remove all packaging materials. Ensure all components are present and undamaged. Keep packaging for future transport if needed.

4.2 Initial Setup

1. **Placement:** Place the machine on a stable, level surface, away from heat sources and direct sunlight.
2. **Water Tank:** Remove the water tank, rinse it, and fill it with fresh tap water up to the MAX indication. Insert the AquaClean filter if desired (refer to filter instructions). Reinsert the water tank into the machine.
3. **Bean Hopper:** Open the bean hopper lid and fill it with fresh coffee beans. Do not overfill.
4. **Power Connection:** Plug the power cord into the machine and then into a grounded wall outlet.
5. **First Rinse Cycle:** The machine will prompt you to perform a first rinse cycle. Follow the on-screen instructions. This primes the system and cleans the internal circuits.

5. OPERATING INSTRUCTIONS

5.1 Making Coffee

1. Ensure the water tank is filled and the bean hopper contains beans.
2. Place a cup under the coffee spout.
3. On the control panel, select your desired coffee beverage (e.g., Espresso, Coffee).
4. Adjust the strength and volume if prompted or desired.
5. Press the start button to begin brewing.

5.2 Using the LatteGo Milk System



Figure 3: The LatteGo milk system attached to the machine, ready for use.

1. Fill the LatteGo milk carafe with fresh milk up to the desired level.
2. Attach the LatteGo system to the machine by inserting the top hook under the spout and pressing the bottom part until it clicks into place.
3. Place a cup under the milk spout and coffee spout.
4. Select a milk-based beverage (e.g., Cappuccino, Latte Macchiato).
5. Press the start button. The machine will first froth and dispense milk, then brew coffee.

5.3 Hot Water Dispensing

1. Place a cup under the coffee spout.

- 2. Select the "Hot Water" option on the display.
- 3. Press the start button to dispense hot water.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure optimal performance and longevity of your machine.

6.1 Daily Cleaning

- **LatteGo System:** After each use, detach the LatteGo system and rinse it under running water. It can also be cleaned in a dishwasher.
- **Drip Tray and Coffee Grounds Container:** Empty and rinse daily.
- **Coffee Spout:** Wipe with a damp cloth.

6.2 Weekly Cleaning

- **Brew Group:** Remove the brew group (refer to the manual for specific instructions), rinse it thoroughly under lukewarm running water. Allow it to air dry before reinserting.
- **Water Tank:** Rinse the water tank and wipe it dry.

6.3 Descaling

The machine will indicate when descaling is required. Use only Philips descaling solution. Follow the on-screen instructions for the descaling procedure. Regular descaling is crucial for machine performance and warranty validity.

6.4 AquaClean Filter

Replace the AquaClean filter when prompted by the machine, or approximately every three months, to maintain water quality and reduce descaling frequency. Refer to the filter packaging for detailed replacement instructions.

7. TROUBLESHOOTING

This section addresses common issues you might encounter. For more complex problems, contact Philips Customer Support.

Problem	Possible Cause	Solution
No coffee is dispensed.	Water tank empty, brew group clogged, coffee spout blocked.	Fill water tank, clean brew group, clean coffee spout.
Milk is not frothed properly.	LatteGo system dirty, milk type unsuitable, milk too warm.	Clean LatteGo system thoroughly, use cold fresh milk (preferably semi-skimmed), ensure all parts are correctly assembled.
Machine displays "Descaling required".	Machine needs descaling.	Perform the descaling procedure as instructed in section 6.3.
Coffee tastes weak.	Grind setting too coarse, insufficient coffee dose, old beans.	Adjust grind setting finer, increase coffee strength setting, use fresh coffee beans.

8. SPECIFICATIONS

Feature	Detail
Brand	PHILIPS
Model Number	EP2339/40
Dimensions (L x W x H)	17.5P x 32l x 45H centimeters (approx. 10 x 10 x 10 cm as per some specs)
Water Tank Capacity	1.8 Litres
Voltage	230 Volts (approx. 2.3E+2 Volts)
Material	Plastic
Special Features	Milk Frother (LatteGo System)
Coffee Type	Espresso Machine (Bean-to-Cup)
Filter Type	Reusable (AquaClean compatible)

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Your Philips EP2339 coffee machine comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, spare parts, or service, please visit the official Philips support website or contact their customer service line. You can find contact details on the Philips website or in your product documentation.

Online Support: www.philips.com/support

When contacting support, please have your product model number (EP2339) and serial number ready.

© 2024 Philips. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question