

Kenmore 4671332

Kenmore 33 in. 20.4 cu. ft Capacity Refrigerator/Freezer User Manual

Model: 4671332

	Safety Information	Product Overview	Setup	Operating
Instructions	Maintenance	Troubleshooting	Specifications	Warranty & Support

1. SAFETY INFORMATION

Read all instructions before using this appliance to reduce the risk of fire, electric shock, or injury to persons. This manual provides important safety messages that must be followed.

- Always unplug the refrigerator before cleaning or performing any maintenance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

2. PRODUCT OVERVIEW

The Kenmore 33-inch Top-Freezer Refrigerator is designed to maximize kitchen space while providing ample storage for fresh and frozen essentials. Its standard-depth design and flush-front appearance offer a modern, clean look suitable for various kitchen styles. This model is ENERGY STAR certified for energy efficiency.



Figure 2.1: Kenmore 33-inch Top-Freezer Refrigerator in a kitchen setting, showcasing its white finish and compact design next to other kitchen appliances.

Key Features:

- **Full Size Capacity:** 20.4 cu. ft. total storage space, ideal for family use.
- **Adjustable Full-Width Glass Shelves:** Tempered glass shelves provide flexible storage for various item sizes.
- **Gallon Door Storage + Freezer Bins:** Multiple clear bins for organized storage of large and small items.
- **Humidity-Controlled Crispers and Dairy Drawer:** Designed to keep produce fresh and dairy products at optimal temperatures.
- **ENERGY STAR Certified:** Ensures energy efficiency and helps reduce utility costs.
- **Factory Installed Icemaker:** Produces up to 3 lbs. of crescent-shaped ice per day.
- **Long-lasting LED Lighting:** Illuminates the refrigerator interior for clear visibility.
- **Recessed Pocket Handle and Flush-Front Design:** Contributes to a sleek, modern aesthetic and easy cleaning.

3. SETUP

3.1 Unpacking and Placement

1. Remove all packaging materials, including foam and adhesive tape.
2. Clean the interior of the refrigerator with a soft cloth and mild detergent.
3. Place the refrigerator on a level surface, ensuring adequate clearance around the unit for proper ventilation. Allow at least 2 inches (5 cm) of space at the back and sides, and 12 inches (30 cm) at the top.
4. Ensure the refrigerator is not exposed to direct sunlight or heat sources.



Figure 3.1: Refrigerator dimensions for proper placement. Dimensions are approximately 30.75 inches deep, 32.68 inches wide, and 66.38 inches high.

3.2 Electrical Connection

- Plug the refrigerator into a dedicated 115 Volt, 60 Hz, 15 Amp grounded electrical outlet.
- Do not use an extension cord or adapter.
- Allow the refrigerator to stand upright for at least 4 hours before plugging it in to allow refrigerants to settle.

3.3 Initial Cooling

- After plugging in, allow the refrigerator to cool for at least 24 hours before loading it with food.
- The factory-installed icemaker will begin producing ice once the freezer reaches optimal temperature and the water

line is connected (if applicable).

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The refrigerator and freezer compartments have separate temperature controls. Adjust settings as needed based on ambient temperature and food load.



Figure 4.1: Refrigerator temperature control dial, typically located at the top of the fresh food compartment. Settings range from Cold to Coldest.



Figure 4.2: Freezer temperature control dial, located inside the freezer compartment. Adjust to achieve desired freezing temperature.

- **Refrigerator:** Turn the dial to adjust from "Cold" to "Coldest". "Recommended" is the standard setting.
- **Freezer:** Turn the dial to adjust from "Cold" to "Coldest".

4.2 Adjustable Shelving

The full-width glass shelves in the refrigerator compartment can be adjusted to accommodate items of varying heights.



Figure 4.3: Interior view of the refrigerator, showing adjustable wire shelves and various food items. The shelves can be easily slid out for access or adjustment.

- To adjust a shelf, lift the front edge slightly and pull it out.
- Reinsert the shelf into the desired slot, ensuring it is level and securely seated.

4.3 Humidity-Controlled Crispers

Two clear crispers drawers are located at the bottom of the refrigerator, each with an individual humidity control slider.



Figure 4.4: Close-up view of the humidity-controlled crisper drawers, filled with fruits and vegetables. Each drawer has a slider to adjust humidity levels.

- **High Humidity:** Slide the control to the "High" setting for leafy greens and vegetables to retain moisture.
- **Low Humidity:** Slide the control to the "Low" setting for fruits and items that require less moisture.

4.4 Dairy Compartment

A dedicated covered dairy compartment is provided for storing butter, cheese, and other dairy products at an optimal temperature.



Figure 4.5: The covered dairy compartment, located on the inside of the refrigerator door, designed for optimal storage of butter and similar items.

5. MAINTENANCE

5.1 Cleaning the Interior

- Unplug the refrigerator before cleaning.
- Wash interior surfaces with a solution of 2 tablespoons (30 ml) baking soda to 1 quart (1 liter) warm water.
- Rinse and dry thoroughly.
- For removable parts like shelves and bins, wash them with mild soap and warm water, then rinse and dry.

5.2 Cleaning the Exterior

- Wipe the exterior with a clean cloth dampened with mild soap and water.
- For white finishes, avoid abrasive cleaners or scouring pads.
- For fingerprint-resistant stainless steel models (if applicable), use a clean microfiber cloth and a stainless steel

cleaner.

5.3 Defrosting

This refrigerator features an automatic defrost system, eliminating the need for manual defrosting.

5.4 Power Outages

- Keep the refrigerator and freezer doors closed as much as possible during a power outage to maintain internal temperatures.
- Food can remain frozen for approximately 24 hours if the freezer is full and the door is kept closed.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; temperature control set to "Off" or "Standby".	Ensure plug is securely in outlet; reset circuit breaker; adjust temperature control.
Temperature is too warm.	Door left open too long; warm food added recently; temperature control set too high; poor ventilation.	Close door completely; allow time for new food to cool; lower temperature setting; ensure proper clearance around unit.
Unusual noises.	Refrigerator not level; items rattling inside; normal operating sounds (e.g., refrigerant flow, defrost cycle).	Level the refrigerator; rearrange items; normal sounds are expected.
Excessive frost buildup in freezer.	Freezer door not sealed properly; frequent door openings.	Check door gasket for proper seal; reduce frequency of door openings.

7. SPECIFICATIONS

Brand: Kenmore

Model Number: 4671332

Capacity: 20.4 Cubic Feet (Total)

Refrigerator Fresh Food Capacity: 15.63 Cubic Feet

Freezer Capacity: 4.81 Cubic Feet

Dimensions (D x W x H): 30.75" x 32.68" x 66.38"

Item Weight: 179 Pounds

Color: White

Installation Type: Freestanding

Form Factor: Freezer Top

Voltage: 115 Volts

Annual Energy Consumption: 469 Kilowatt Hours Per Year

Certification: ENERGY STAR

Defrost System: Automatic

Number of Doors: 2

Shelf Type: Glass

Number of Shelves: 4

Crispers/Drawers: 2

Door Hinges: Reversible

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Kenmore website. You may also contact customer service for assistance with product inquiries or service requests.

- **Return Policy:** 30-day easy returns (as per Amazon's policy).
- **Protection Plans:** Optional 2-Year and 3-Year protection plans are available for purchase.
- **Customer Support:** Refer to your purchase documentation for contact details.

© 2025 Kenmore. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CL1C64QB>

More documents and user manuals: <https://manuals.plus/>