

[Manuals.plus](#) /

> [JBL](#) /

> JBL Boombox 3 WiFi Wireless Bluetooth Streaming Portable Speaker, Black - IP67 Dustproof and Waterproof Airplay Alexa PartyProof HD 3D Sound (Renewed) User Manual

## JBL Boombox 3 Wi-Fi

# JBL Boombox 3 Wi-Fi Portable Speaker User Manual

Model: Boombox 3 Wi-Fi

## INTRODUCTION

This user manual provides essential information for the safe and effective operation of your JBL Boombox 3 Wi-Fi Portable Speaker. Please read this manual thoroughly before using the product to ensure optimal performance and longevity. The JBL Boombox 3 Wi-Fi delivers massive JBL Original Pro Sound with deep, powerful bass, designed to provide an immersive audio experience.

## PRODUCT OVERVIEW

### Key Features

- **JBL Original Pro Sound:** Experience powerful audio with deep bass from a built-in subwoofer, two mid-range drivers, and dual tweeters, forming a best-in-class 3-way speaker design.
- **IP67 Dustproof and Waterproof:** Designed for outdoor use, the speaker is protected against dust ingress and can withstand immersion in water up to 1 meter for 30 minutes.
- **Wireless Connectivity:** Supports both Bluetooth and Wi-Fi for versatile audio streaming.
- **Voice Assistant Integration:** Compatible with Alexa and Google Home for smart home control and hands-free operation.
- **JBL One App:** Utilize the dedicated mobile application for enhanced control over audio settings and features.
- **Long Battery Life:** Provides extended playback time on a single charge.

### What's in the Box

- JBL Boombox 3 Wi-Fi Portable Speaker
- Power cable
- User manual (this document)

## Speaker Components and Controls



**Figure 1:** Front view of the JBL Boombox 3 Wi-Fi speaker, showcasing the JBL logo and speaker grille.



**Figure 2:** Top panel controls including Power, Bluetooth pairing, Volume Up/Down, and a Moment button. Battery indicator lights are also visible.



**Figure 3:** Rear panel with the charging port (AC connector) and a USB port, protected by a waterproof flap.



**Figure 4:** Side view of the JBL Boombox 3 Wi-Fi speaker, highlighting the passive radiator which enhances bass output.

## SETUP

1. **Initial Charge:** Before first use, fully charge the speaker using the provided power cable. Connect the power cable to the AC connector on the rear of the speaker and plug it into a power outlet. The battery indicator lights on the top panel will show charging progress.
2. **Power On:** Press the Power button on the top panel to turn on the speaker.
3. **Bluetooth Pairing:**
  - Press the Bluetooth button on the top panel. The Bluetooth indicator will flash, indicating pairing mode.

- On your device (smartphone, tablet, etc.), go to Bluetooth settings and select "JBL Boombox 3 Wi-Fi" from the list of available devices.
- Once connected, the Bluetooth indicator will remain solid.

#### 4. Wi-Fi Setup (JBL One App):

- Download the JBL One app from your device's app store.
- Open the app and follow the on-screen instructions to connect your JBL Boombox 3 Wi-Fi to your home Wi-Fi network. This enables features like AirPlay, Alexa, and Google Home integration, and allows for higher fidelity audio streaming.

## OPERATING INSTRUCTIONS

- **Volume Control:** Use the Volume Up (+) and Volume Down (-) buttons on the top panel to adjust the playback volume.
- **Music Playback:**
  - Press the Play/Pause button (often integrated with the Bluetooth button or a dedicated button) to play or pause audio.
  - Use the skip button (often an arrow icon) to skip tracks.
- **Voice Assistant:** Once configured through the JBL One app, activate your preferred voice assistant (Alexa or Google Home) by pressing the dedicated voice assistant button or by voice command, depending on setup.
- **JBL One App Features:** The app allows for advanced audio customization, including equalizer settings, firmware updates, and multi-speaker pairing for a wider soundstage.

## MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Waterproof/Dustproof Care:**
  - Ensure the rear port cover is securely closed before exposing the speaker to water or dust.
  - While IP67 rated, avoid prolonged submersion or exposure to saltwater/chlorinated water. If exposed, rinse with fresh water and dry thoroughly before charging.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

## TROUBLESHOOTING

| Problem                    | Possible Cause  | Solution   |
|----------------------------|---|--|
| Speaker does not power on. | Low battery; Power cable not connected.                       | Charge the speaker fully; Ensure power cable is securely connected.                |
| No sound from speaker.     | Volume too low; Device not connected; Incorrect input source. | Increase volume on speaker and device; Repair Bluetooth/Wi-Fi; Check app settings. |

| Problem                        | Possible Cause   | Solution  |
|--------------------------------|--|---|
| Bluetooth connection unstable. | Device too far; Interference; Low battery.                     | Move device closer to speaker; Avoid obstacles; Charge speaker.                         |
| Wi-Fi connection issues.       | Incorrect Wi-Fi password; Router issues; Speaker out of range. | Verify Wi-Fi credentials in JBL One app; Restart router; Move speaker closer to router. |

## SPECIFICATIONS

| Feature                              | Detail                          |
|--------------------------------------|---------------------------------|
| Model Name                           | Boombox 3 Wi-Fi                 |
| Speaker Type                         | Portable Bluetooth Speaker      |
| Compatible Devices                   | Television, Tablet, Smartphone  |
| Subwoofer Diameter                   | 7.5 Inches                      |
| Surround Sound Channel Configuration | 2.1                             |
| Waterproof Rating                    | IP67 (Dustproof and Waterproof) |
| Control Method                       | Voice, Buttons                  |
| Wireless Communication Technology    | Bluetooth, Wi-Fi                |
| Speaker Size                         | 10.1 Inches                     |
| Power Source                         | Battery Powered                 |
| Audio Driver Type                    | Dynamic Driver                  |
| Bluetooth Range                      | 10 Meters                       |
| Connectivity Protocol                | Bluetooth, Wi-Fi                |
| UPC                                  | 723592740290                    |
| Manufacturer                         | JBL                             |
| Speaker Maximum Output Power         | 80 Watts                        |
| Audio Output Mode                    | 3D Dolby Atmos                  |
| Mounting Type                        | Tabletop Mount                  |

## WARRANTY AND SUPPORT

The JBL Boombox 3 Wi-Fi Portable Speaker comes with a limited warranty. For detailed warranty information, product registration, and technical support, please visit the official JBL website or contact their customer service. Keep your proof of purchase for warranty claims.

