



[Manuals.plus](#) /

› [Sokany](#) /

› Sokany SK-2404 13L 1600W Electric Pressure Cooker User Manual

Sokany SK-2404

Sokany SK-2404 13L 1600W Electric Pressure Cooker User Manual

1. INTRODUCTION

Thank you for choosing the Sokany SK-2404 13L 1600W Electric Pressure Cooker. This appliance is designed to provide efficient and convenient cooking for a variety of dishes, especially suitable for large families or gatherings. Its 1600W power ensures fast and even cooking results. To ensure safe and optimal performance, please read this manual thoroughly before first use and keep it for future reference.



Image 1.1: Sokany SK-2404 Electric Pressure Cooker highlighting 13L capacity and 1600W power.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the main unit in water or other liquid.

- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating. See 'Operating Instructions'.
- Never force open the pressure cooker. Do not open until the unit has cooled and internal pressure has been released. See 'Operating Instructions'.
- Do not fill the unit over 2/3 full. When cooking foods that expand during cooking, such as rice or dehydrated vegetables, do not fill the unit over 1/2 full. Overfilling may cause a risk of clogging the vent pipe and developing excess pressure.
- Be aware that certain foods, such as applesauce, cranberries, pearl barley, oatmeal or other cereals, split peas, noodles, macaroni, rhubarb, or spaghetti can foam, froth, and sputter, and clog the pressure release device. These foods should not be cooked in a pressure cooker.
- Always check the pressure release device for clogging before use.
- This appliance is NOT dishwasher safe.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Sokany Electric Pressure Cooker:

- **Main Unit:** The base of the cooker containing the heating element and control panel.
- **Inner Pot:** Removable non-stick pot for cooking.
- **Lid:** Features a lid lock mechanism for safety.
- **Pressure Release Valve:** Regulates and releases internal pressure.
- **Safety Valve:** An additional safety feature to prevent excessive pressure buildup.
- **Control Panel:** Touch-sensitive interface for selecting cooking programs and settings.
- **Handles:** For safe handling and transport of the cooker.

SOKANY-EG[®]

SK-2404

PRESSURE COOKER



Capacity: 13L

⚡ 1600W



Image 3.1: Detailed view of the control panel, showing function buttons like RICE, SOUP, MEAT, STEAM, STEW, and TIMER.

4. SETUP AND FIRST USE

4.1 Unpacking

- Remove all packaging materials, stickers, and labels from the cooker.
- Retain packaging for future storage or transport if needed.

4.2 Initial Cleaning

- Wash the inner pot, lid, and sealing gasket with warm, soapy water. Rinse thoroughly and dry completely.
- Wipe the exterior of the main unit with a damp cloth. Never immerse the main unit in water.
- Ensure all parts are dry before assembly.

4.3 Placement

- Place the pressure cooker on a stable, level, and heat-resistant surface.
- Ensure there is adequate space around the cooker for proper ventilation, especially above the pressure release valve.
- Keep the appliance away from water sources and flammable materials.

4.4 Power Connection

- Plug the power cord into a grounded electrical outlet. The display will illuminate, indicating the cooker is in standby mode.

5. OPERATING INSTRUCTIONS

5.1 Opening and Closing the Lid

- **To Open:** Hold the lid handle, turn it counter-clockwise until it aligns with the unlock symbol, then lift the lid.
- **To Close:** Place the lid on the cooker, aligning the lid handle with the unlock symbol. Press down gently and turn clockwise until it aligns with the lock symbol. Ensure the lid is securely locked before starting any cooking program. The cooker features a lid lock for safety.

5.2 Adding Ingredients

- Place the inner pot into the main unit.
- Add your ingredients and liquid to the inner pot. Do not exceed the MAX fill line (2/3 full for most foods, 1/2 full for expanding foods like rice).

5.3 Selecting a Cooking Program

The control panel is touch-sensitive and offers various preset programs:

1. Ensure the lid is closed and locked, and the pressure release valve is in the 'Sealing' position (if applicable, or follow specific model instructions for valve position).
2. Press the desired function button on the control panel (e.g., RICE, SOUP, MEAT, STEAM, STEW).
3. The display will show a default cooking time. Use the '+' and '-' buttons to adjust the cooking time if needed.
4. The cooker will automatically begin the preheating process, then build pressure, and finally start the cooking countdown.

5.4 Using the Timer Function

- After selecting a cooking program and adjusting the time, you can press the 'TIMER' button to set a delayed start time.
- Use the '+' and '-' buttons to set the delay time. The cooker will start cooking after the set delay.

5.5 Pressure Release

Once cooking is complete, the cooker will beep and may switch to a 'Keep Warm' mode. There are two methods for releasing pressure:

- **Natural Release:** Allow the pressure to dissipate naturally. This can take 10-30 minutes or more, depending on the food and liquid volume. The float valve will drop when pressure is fully released.
- **Quick Release:** Carefully turn the pressure release valve to the 'Venting' position. Steam will rapidly escape. Keep hands and face away from the steam. Only use quick release for recipes that specify it, or for foods that are not prone to foaming.

Never attempt to open the lid until the float valve has dropped, indicating all internal pressure has been released.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance ensure the longevity and safe operation of your pressure cooker.

6.1 General Cleaning

- Always unplug the cooker and allow it to cool completely before cleaning.
- **Inner Pot:** Wash with warm, soapy water and a non-abrasive sponge. Rinse and dry thoroughly.

- **Lid:** Wash the lid, including the sealing gasket and pressure release valve assembly, with warm, soapy water. Ensure no food particles are lodged in the valves. Rinse and dry.
- **Main Unit:** Wipe the exterior with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Note:** This appliance is not dishwasher safe. Hand wash all removable parts.

6.2 Gasket Maintenance

- Regularly inspect the sealing gasket for cracks, deformation, or damage. Replace if necessary to maintain proper pressure sealing.

6.3 Storage

- Store the clean and dry pressure cooker in a cool, dry place.
- For best results, store the lid inverted on the inner pot to prevent the gasket from compressing and losing its shape.

7. TROUBLESHOOTING

If you encounter issues with your pressure cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooker not building pressure	Lid not properly closed/locked; Sealing gasket damaged or improperly seated; Pressure release valve in 'Venting' position; Insufficient liquid.	Ensure lid is locked; Check and reposition/replace gasket; Turn valve to 'Sealing'; Add more liquid as per recipe.
Steam leaking from lid	Sealing gasket dirty or damaged; Food debris on rim; Lid not properly closed.	Clean or replace gasket; Clean lid and pot rim; Ensure lid is securely locked.
Food undercooked	Insufficient cooking time; Pressure not reached/maintained.	Increase cooking time; Check for pressure issues (see above).
Display shows error code	Specific internal malfunction.	Unplug, wait a few minutes, then plug back in. If error persists, contact customer support.

8. SPECIFICATIONS

Detailed technical specifications for the Sokany SK-2404 Electric Pressure Cooker:

Feature	Specification
Brand Name	Sokany
Capacity	13 Liters
Material	Stainless Steel
Color	Silver
Product Dimensions (DxWxH)	25 x 25 x 25 cm

Feature	Specification
Special Features	Lid Lock, Programmable, Touch Control
Power	1600 Watts
Item Weight	500 Grams
Control Method	Touch
Operation Mode	Manual
Controller Type	Manual Control
Closure Type	Outer Lid
Dishwasher Safe	No
Model Number	SK-2404
Country of Origin	China

9. WARRANTY AND SUPPORT

The Sokany SK-2404 Electric Pressure Cooker comes with an International Warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your product or contact the retailer where you purchased the item.

For technical support, service, or inquiries, please contact Sokany customer service or visit the official Sokany store online. You can find more information and contact details by visiting the [Sokany Brand Store](#).

