

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ORIGBELIE](#) /

› [ORIGBELIE External CD DVD Drive User Manual](#)

ORIGBELIE TP888

ORIGBELIE External CD/DVD Drive User Manual

Model: TP888

1. INTRODUCTION

The ORIGBELIE External CD/DVD Drive is a versatile 8-in-1 device designed to provide optical drive functionality and expanded connectivity for modern computers lacking built-in CD/DVD drives. It supports reading and writing various disc formats, features high-speed USB 3.0 data transfer, and includes a multi-port USB hub with card reader slots. This manual provides essential information for setup, operation, maintenance, and troubleshooting.

2. WHAT'S IN THE BOX

- ORIGBELIE External CD/DVD Drive x 1
- USB A to DC Power Supply Cable x 1
- Drive Storage Bag x 1
- Carrying Case x 1
- User Manual x 1



Figure 2.1: Package Contents

3. KEY FEATURES

- **External CD/DVD Drive:** Plug and Play functionality for reading and writing CDs and DVDs.
- **USB 3.0 High-Speed:** Offers data transfer rates up to 5 Gbps, backward compatible with USB 2.0/1.0.
- **CD/DVD Burner and Reader:** Supports CD±R/RW, CD-ROM, DVD±R/RW, DVD-ROM, DVD-RAM, VCD, and SVCD.
- **6-in-1 USB 3.0 Hub:** Includes 1x USB A 3.0 port, 1x USB A 2.0 port, 2x USB C ports, 1x TF card slot, and 1x SD card slot.
- **2-in-1 USB 3.0 Data Cable:** Built-in Type-A and Type-C connectors for broad compatibility without adapters.
- **Compact and Portable:** Ultra-thin design with integrated cable, storage bag, and carrying case for easy transport.
- **RGB LED Color Gradient Light:** Cool LED indicator light that cycles through colors.

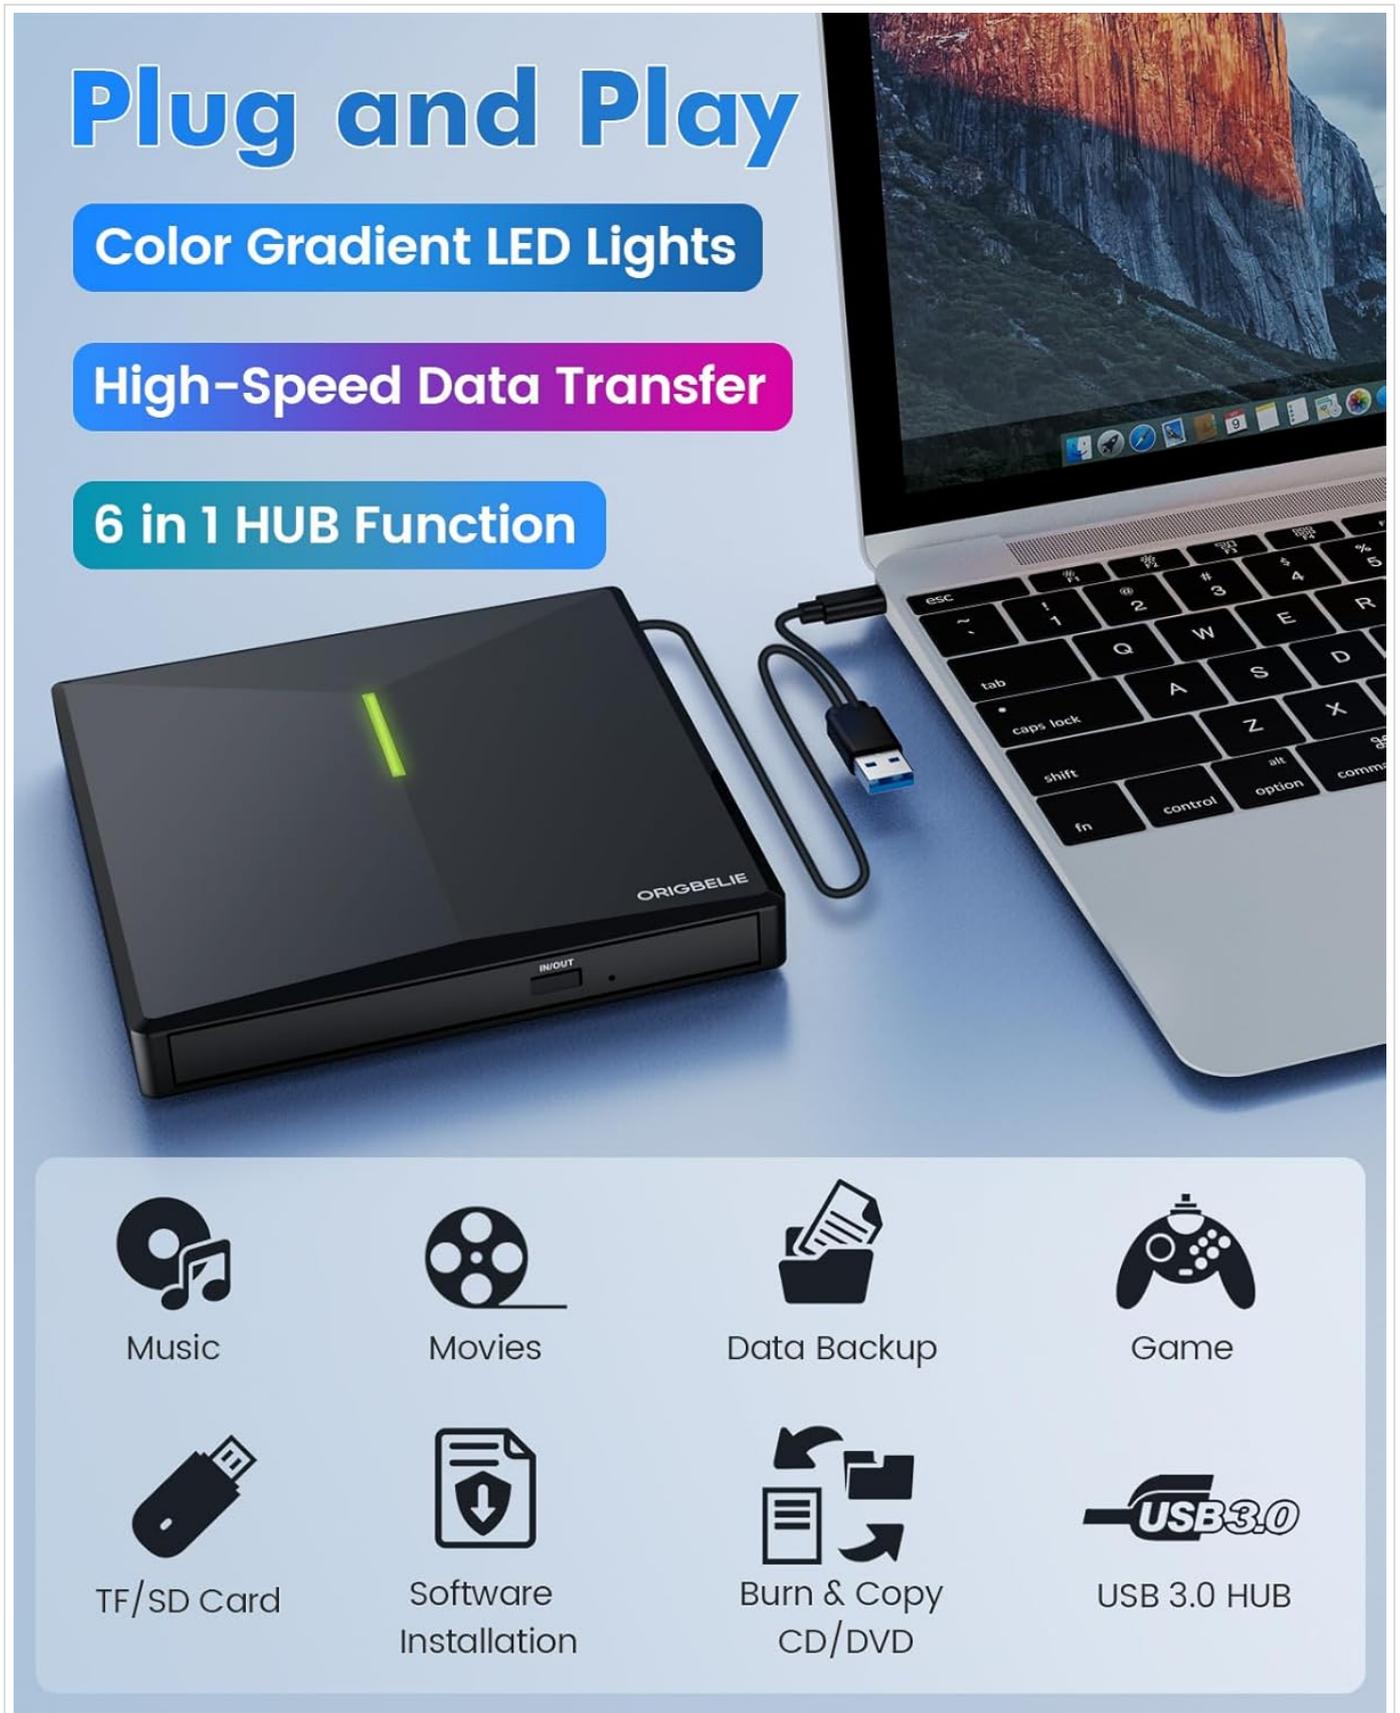


Figure 3.1: Product Features Overview

4. SETUP GUIDE

- 1. Unpack the Device:** Carefully remove the external CD/DVD drive and all accessories from the carrying case.
- 2. Connect to Computer:**
 - Locate the built-in 2-in-1 USB 3.0 data cable on the back of the drive.

- Connect the appropriate connector (USB-A or USB-C) to an available USB 3.0 port on your laptop or desktop PC.
- *Note: For optimal performance and to prevent power issues, connect the drive directly to a USB 3.0 port on your computer, not through a USB hub unless the hub is powered.*

3. **Power Supply (Optional but Recommended):** If your computer's USB port does not provide sufficient power (e.g., older laptops, some desktop configurations), connect the provided USB A to DC Power Supply Cable to the DC 5V port on the drive and plug the USB-A end into a separate power source (e.g., a 5V USB adapter, not included).
4. **Automatic Recognition:** The drive is Plug and Play. Your operating system (Windows, Mac OS, Linux) should automatically detect and install the necessary drivers. No manual driver installation is typically required.
5. **Ready for Use:** Once recognized, the RGB LED indicator light will illuminate, and the drive will appear in your computer's file explorer or Finder.

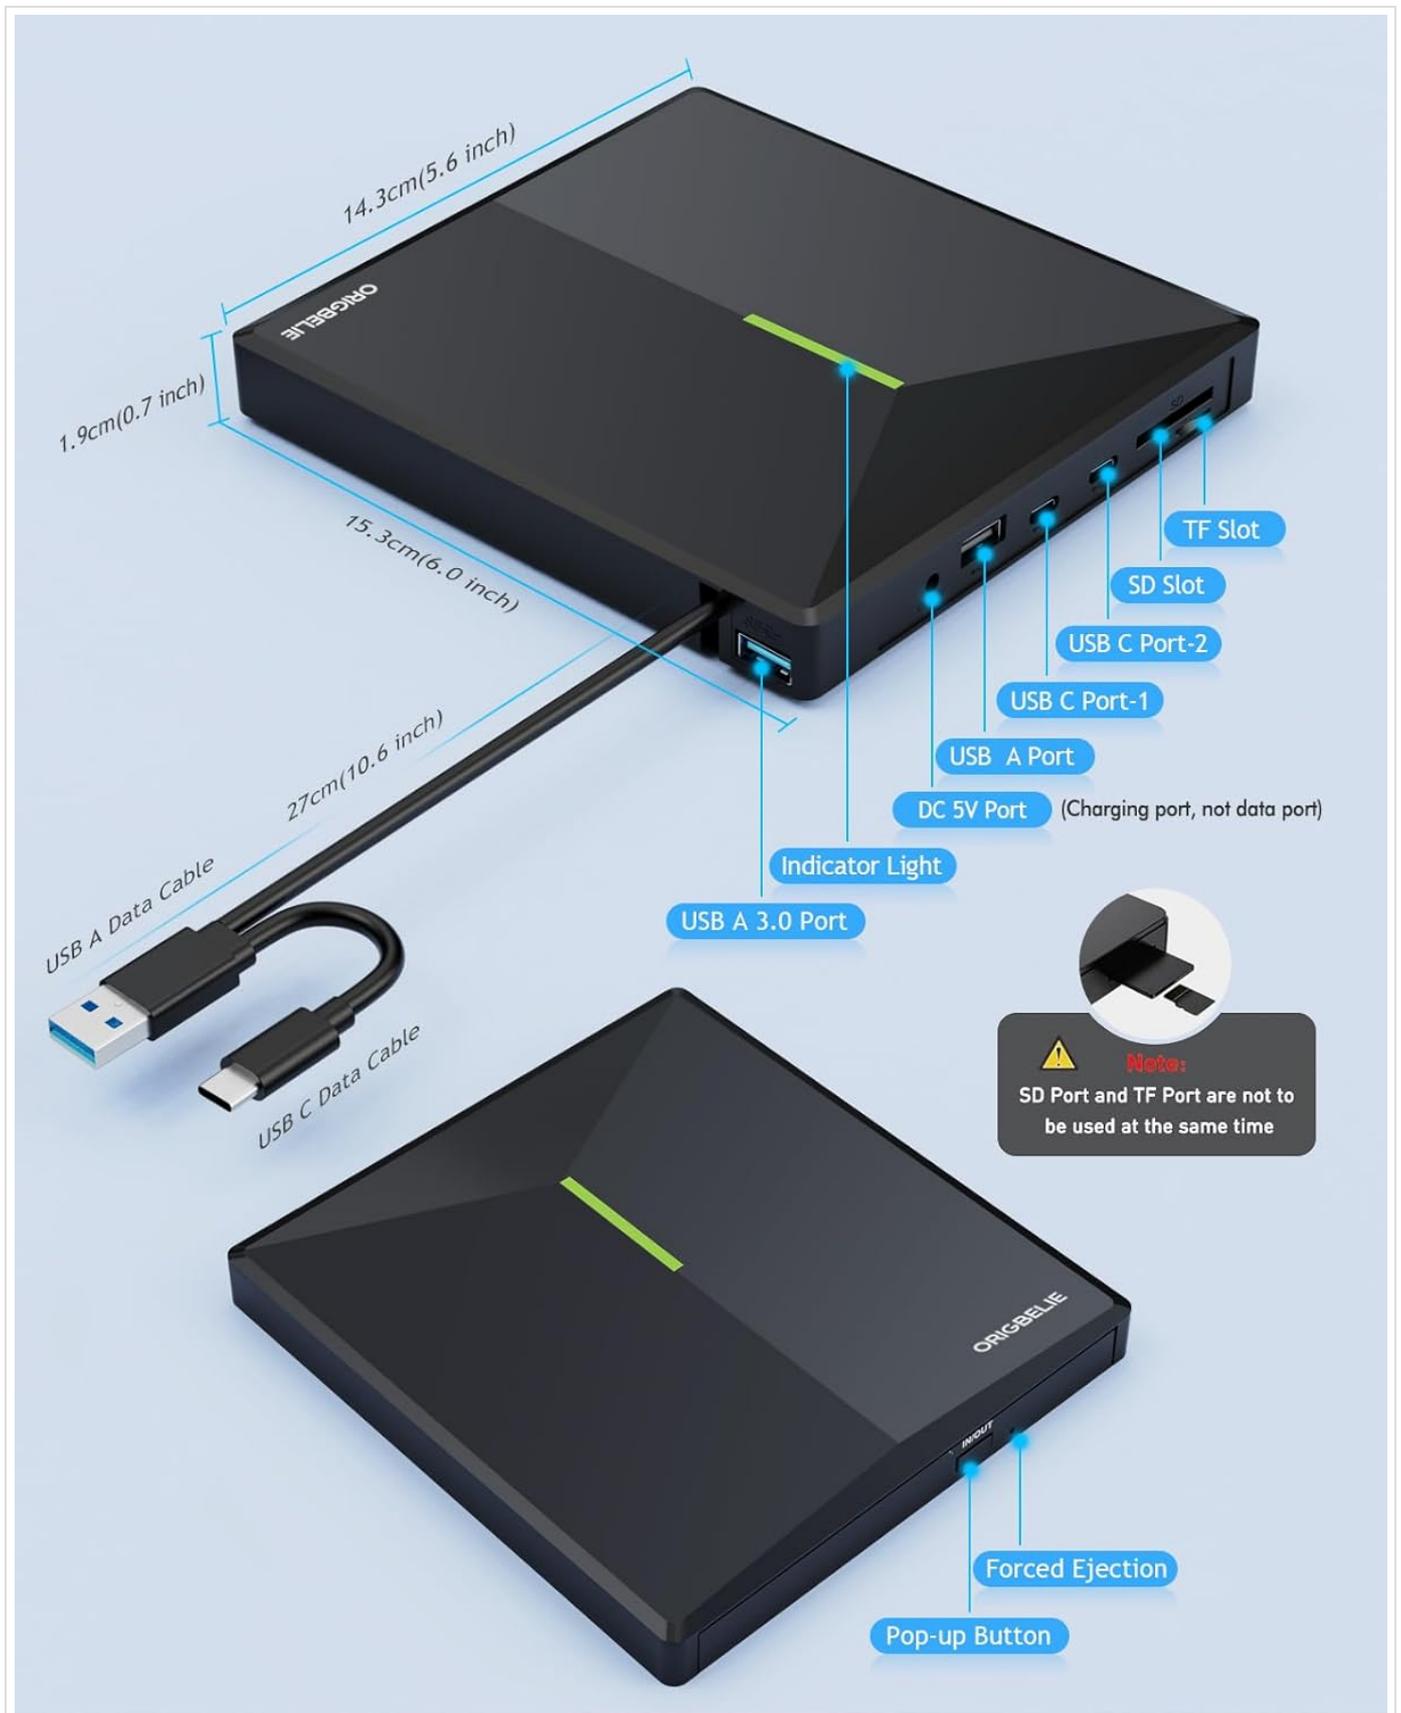


Figure 4.1: Connecting the Drive to a Laptop

5. OPERATING INSTRUCTIONS

5.1. Inserting and Ejecting Discs

1. **Open Disc Tray:** Press the "IN/OUT" button on the front of the drive to open the disc tray.
2. **Insert Disc:** Gently place a CD or DVD onto the tray, ensuring it is centered on the spindle.

3. **Close Disc Tray:** Gently push the tray back into the drive until it clicks shut.
4. **Access Disc Content:** Your computer's operating system should prompt you to choose an action (e.g., play movie, open files) or you can navigate to the drive in File Explorer/Finder.
5. **Eject Disc:** Press the "IN/OUT" button again to eject the disc. Alternatively, you can right-click the drive icon in your computer's file system and select "Eject".
6. **Forced Ejection:** In case of power loss or if the eject button does not respond, locate the small pinhole next to the "IN/OUT" button. Insert a straightened paperclip into the hole and push gently to manually open the tray.

Color Gradient LED Lights

LED indicators gradually cycle through color



Figure 5.1: Disc Tray Open

5.2. Using the USB Hub and Card Slots

The drive features multiple ports for expanded connectivity:

- **USB A 3.0 Port (x1):** For high-speed data transfer with USB 3.0 compatible devices.
- **USB A 2.0 Port (x1):** For standard USB 2.0 devices.
- **USB C Ports (x2):** For connecting USB-C devices.
- **TF Card Slot (x1) & SD Card Slot (x1):** For reading and writing data from TF (MicroSD) and SD cards. **Note: The SD and TF card slots cannot be used simultaneously.**



Figure 5.2: USB Hub and Card Slots

5.3. Playing Media and Burning Discs

- **Playing Media:** Insert a movie DVD or music CD. Your operating system may automatically launch a media player. If not, open your preferred media player (e.g., VLC, Windows Media Player) and select the drive.
- **Burning Discs:** Use compatible burning software (not included) on your computer to write data, music, or video files to blank CD-R/RW or DVD±R/RW discs. Follow the software's instructions for the burning process.

- **Data Backup:** Utilize the drive to back up important files to discs for secure storage.

Your browser does not support the video tag.

Video 5.1: Demonstration of playing media and burning discs with the ORIGBELIE External CD/DVD Drive.

6. COMPATIBILITY

The ORIGBELIE External CD/DVD Drive is broadly compatible with various operating systems and devices:

- **Operating Systems:** Windows 11/10/8/7/XP, Vista 7/8, Linux, Mac OS 10.6 or above.
- **Supported Devices:** Macbook, iMac, Notebook, Desktop PC, Laptop.

6.1. Incompatible Devices and Scenarios

Please note the following limitations:

- **Not Compatible With:** Cars, TVs, Tablets, Phones, Projectors, PS4/5, Xbox, Nintendo Switch, Chromebook, Surface, Blu-ray discs.
- **Power Requirement:** The drive requires a stable power supply from a connected computer. It cannot function independently.
- **Windows 11:** Requires a media player and network connection for certain functionalities.

8-in-1 External CD/DVD Drive

Can also be used as a 4-port USB hub for laptops



Figure 6.1: Compatibility Overview

7. MAINTENANCE

- **Keep Clean:** Regularly wipe the exterior of the drive with a soft, dry cloth. Avoid using liquid cleaners.
- **Protect Lens:** Keep the disc tray clean and free of dust or debris to ensure optimal reading/writing performance. Do not touch the optical lens.

- **Proper Storage:** When not in use, store the drive in its provided storage bag and carrying case to protect it from dust, scratches, and impacts.
- **Avoid Extreme Conditions:** Do not expose the drive to extreme temperatures, humidity, or direct sunlight.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Drive not recognized by computer.	Insufficient power supply; Loose connection; Driver issue.	1. Ensure direct connection to a USB 3.0 port. 2. Use the auxiliary power cable. 3. Try a different USB port. 4. Restart your computer.
Disc not reading/writing properly.	Dirty or scratched disc; Incompatible disc format; Dirty optical lens.	1. Clean the disc. 2. Try a different disc. 3. Ensure disc format is supported. 4. Gently clean the optical lens with a specialized cleaner.
Disc tray stuck/won't open.	Power issue; Mechanical jam.	1. Ensure adequate power. 2. Use the forced ejection pinhole with a straightened paperclip.
SD/TF card slots not working.	Both slots used simultaneously; Card not inserted correctly; Card issue.	1. Ensure only one card is inserted at a time. 2. Reinsert the card. 3. Try a different card.

9. SPECIFICATIONS

- **Brand:** ORIGBELIE
- **Model Number:** TP888
- **Hardware Platform:** Laptop, PC, Mac
- **Operating System:** Linux, Windows, Mac OS
- **Item Weight:** 11.5 ounces
- **Product Dimensions:** 6 x 5.6 x 0.7 inches
- **Color:** Black
- **Special Feature:** Portable, Quiet, CD Burner, DVD Plug and Play, USB 3.0 Hub, Data Cable with USB-A USB-C connectors
- **Hardware Interface:** USB 3.0
- **Optical Storage Write Speed:** Max 24xCD / 8xDVD

Know Before You Buy

The following may cause the optical drive can't read the CD/DVD

Incompatible



Blu-ray



Phones



Tablets



Cars



TVs



Projectors



Chromes



PS4/5



Surface



Xbox



Nintendo Switch

Insufficient current supply



Note: 5V power bank and adapter are not included



Figure 9.1: Product Dimensions and Port Layout

10. WARRANTY AND SUPPORT

ORIGBELIE provides comprehensive after-sales support for your external CD/DVD drive:

- **Warranty:** Up to 24-month after-sales service.
- **Customer Service:** 7-day/24-hour friendly customer service.

- **Contact:** If you encounter any problems or have questions, please refer to the contact information provided in the included User Manual or visit the official ORIGBELIE website for support.