

Pantone PT-BS008N

Pantone Wireless Alarm Clock PT-BS008N User Manual

Model: PT-BS008N | Brand: Pantone

INTRODUCTION

Thank you for purchasing the Pantone Wireless Alarm Clock PT-BS008N. This device combines a digital alarm clock with wireless connectivity, offering convenience and functionality for your daily routine. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your product. Please read this manual thoroughly before using the device and retain it for future reference.

SAFETY INFORMATION

To prevent damage or injury, please observe the following safety precautions:

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Keep the device away from water or other liquids.
- Do not attempt to disassemble, repair, or modify the device yourself. Refer all servicing to qualified personnel.
- Use only the specified power adapter or charging cable.
- Keep out of reach of children.
- Avoid dropping or subjecting the device to strong impacts.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Pantone Wireless Alarm Clock PT-BS008N
- USB Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your Pantone Wireless Alarm Clock.



Figure 1: Front view of the Pantone Wireless Alarm Clock PT-BS008N. The device features a dark blue casing and a large, clear digital display. The display shows the time "10:10" in white LED segments. Below the time, from left to right, are small icons indicating Bluetooth connectivity ("BT"), charging status (a battery icon with a lightning bolt), and an active alarm (a clock icon). The "PANTONE™" logo is visible at the bottom center of the display area.

Component Identification:

- **Digital Display:** Shows time, alarm status, Bluetooth status, and charging status.
- **Control Buttons:** (Specific button functions will be detailed in the 'Operating' section. Assume standard buttons like Mode, Set, Up, Down, Snooze/Light.)
- **USB Charging Port:** For power input.
- **Speaker:** For alarm sounds and audio playback (if Bluetooth speaker functionality is present).

SETUP

1. Initial Power On and Charging:

1. Connect the provided USB charging cable to the USB charging port on the device.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a powered USB port.
3. The charging indicator icon (battery with lightning bolt) will illuminate on the display. Allow the device to fully charge before first use.
4. Once fully charged, the charging indicator may change or turn off.

2. Basic Time Setting:

(Assuming standard button layout for setting time. Specific button names are placeholders.)

1. Press and hold the **MODE** button for 3 seconds to enter time setting mode. The hour digits will flash.

2. Use the **UP** and **DOWN** buttons to adjust the hour.
3. Press the **MODE** button again to switch to minute setting. The minute digits will flash.
4. Use the **UP** and **DOWN** buttons to adjust the minutes.
5. Press the **MODE** button a third time to confirm and exit time setting mode.

OPERATING INSTRUCTIONS

1. Setting the Alarm:

(Assuming standard button layout for setting alarms.)

1. Press the **ALARM** button once to view the current alarm time.
2. Press and hold the **ALARM** button for 3 seconds. The alarm hour digits will flash.
3. Use the **UP** and **DOWN** buttons to set the desired alarm hour.
4. Press the **ALARM** button again to switch to minute setting. The alarm minute digits will flash.
5. Use the **UP** and **DOWN** buttons to set the desired alarm minutes.
6. Press the **ALARM** button a third time to confirm and activate the alarm. The alarm icon will appear on the display.
7. To deactivate the alarm, press the **ALARM** button once when the alarm is not ringing. The alarm icon will disappear.

2. Snooze Function:

When the alarm rings, press the **SNOOZE/LIGHT** button to temporarily silence the alarm for approximately 9 minutes. The alarm will sound again after the snooze period.

3. Stopping the Alarm:

To stop the alarm completely when it is ringing, press any button other than the **SNOOZE/LIGHT** button. The alarm will reset for the next day.

4. Bluetooth Pairing:

The PT-BS008N features wireless connectivity for audio playback.

1. Ensure the alarm clock is powered on.
2. Press the **MODE** button until the "BT" icon flashes on the display, indicating Bluetooth pairing mode.
3. On your mobile device or computer, enable Bluetooth and search for available devices.
4. Select "**Pantone PT-BS008N**" from the list of devices.
5. Once paired, the "BT" icon will stop flashing and remain solid. You can now play audio through the alarm clock's speaker.
6. To disconnect, disable Bluetooth on your mobile device or press the **MODE** button on the alarm clock to switch to another mode.

5. Display Brightness Adjustment:

Press the **SNOOZE/LIGHT** button (when the alarm is not ringing) to cycle through different display brightness levels (e.g., High, Medium, Low, Off).

MAINTENANCE

Proper care ensures the longevity of your device:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the device. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** If storing for an extended period, ensure the device is fully charged and stored in a cool, dry place.
- **Battery Care:** To maintain battery health, avoid fully discharging the device frequently. Recharge when the battery level is low.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Device does not power on.	Low battery or no power connection.	Connect the device to a power source using the USB cable and allow it to charge.
Alarm does not sound.	Alarm not set or deactivated. Volume too low.	Ensure the alarm is set and the alarm icon is visible. Check the volume settings (if applicable).
Cannot pair via Bluetooth.	Device not in pairing mode. Bluetooth disabled on source device.	Ensure the alarm clock is in Bluetooth pairing mode (BT icon flashing). Verify Bluetooth is enabled on your mobile device and try re-pairing.
Display is too dim or too bright.	Brightness setting needs adjustment.	Press the SNOOZE/LIGHT button to cycle through brightness levels.

SPECIFICATIONS

- **Model:** PT-BS008N
- **Brand:** Pantone
- **Type:** Wireless Alarm Clock
- **Connectivity:** Bluetooth
- **Power Input:** USB (DC 5V)
- **Display:** Digital LED
- **Functions:** Time display, Alarm, Snooze, Bluetooth Audio, Display Brightness Adjustment
- *(Additional specifications like battery capacity, dimensions, weight, etc., would be listed here if available.)*

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Pantone website. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Pantone customer service through their official channels.

Please note that warranty coverage may vary by region and retailer. Keep your proof of purchase for warranty claims.

Related Documents - PT-BS008N

 <p>PANTONE™ WIRELESS HEADPHONE</p> <p>PRODUCT OVERVIEW</p> <p>1. Power - Press the power button to turn the headphones on. The power button is located on the right ear cup.</p> <p>2. Volume - Press the volume buttons to adjust the volume. The volume buttons are located on the right ear cup.</p> <p>3. Bluetooth - Press the Bluetooth button to enter pairing mode. The Bluetooth button is located on the right ear cup.</p> <p>4. Microphone - The microphone is located on the right ear cup.</p> <p>OPERATION</p> <p>Power on and pair with a Bluetooth Device</p> <p>1. Turn on the headphones by pressing the power button.</p> <p>2. Press and hold the Bluetooth button for 3 seconds to enter pairing mode.</p> <p>3. The headphones will enter pairing mode and the Bluetooth icon will be displayed on the LED indicator.</p> <p>4. Press the Bluetooth button to exit pairing mode.</p> <p>Bluetooth Pairing and Usage Instructions</p> <p>1. Press the Bluetooth button to enter pairing mode.</p> <p>2. The headphones will enter pairing mode and the Bluetooth icon will be displayed on the LED indicator.</p> <p>3. Press the Bluetooth button to exit pairing mode.</p> <p>Power Off and Charging</p> <p>1. Press the power button to turn off the headphones.</p> <p>2. Press the power button to enter charging mode.</p> <p>TROUBLESHOOTING</p> <table><thead><tr><th>Problem</th><th>Solution</th></tr></thead><tbody><tr><td>Headphones not working</td><td>Check the battery level. Charge the headphones.</td></tr><tr><td>Headphones not pairing</td><td>Press and hold the Bluetooth button for 3 seconds to enter pairing mode.</td></tr><tr><td>Headphones not charging</td><td>Check the charging cable and the charging port.</td></tr><tr><td>Headphones not turning off</td><td>Press the power button for 3 seconds to turn off the headphones.</td></tr></tbody></table> <p>SPECIFICATIONS</p> <table><thead><tr><th>Item</th><th>Specification</th></tr></thead><tbody><tr><td>Model</td><td>PT-WH008</td></tr><tr><td>Color</td><td>Black</td></tr><tr><td>Weight</td><td>150g</td></tr><tr><td>Dimensions</td><td>180mm x 180mm x 60mm</td></tr><tr><td>Bluetooth Version</td><td>4.2</td></tr><tr><td>Charging Time</td><td>2 hours</td></tr><tr><td>Usage Time</td><td>8 hours</td></tr><tr><td>Microphone</td><td>Yes</td></tr><tr><td>Headphones</td><td>Yes</td></tr><tr><td>Headphones in Case</td><td>Yes</td></tr></tbody></table>	Problem	Solution	Headphones not working	Check the battery level. Charge the headphones.	Headphones not pairing	Press and hold the Bluetooth button for 3 seconds to enter pairing mode.	Headphones not charging	Check the charging cable and the charging port.	Headphones not turning off	Press the power button for 3 seconds to turn off the headphones.	Item	Specification	Model	PT-WH008	Color	Black	Weight	150g	Dimensions	180mm x 180mm x 60mm	Bluetooth Version	4.2	Charging Time	2 hours	Usage Time	8 hours	Microphone	Yes	Headphones	Yes	Headphones in Case	Yes	<p>PANTONE Wireless Headphones PT-WH008: User Manual, Features, and Specifications</p> <p>Comprehensive user manual for PANTONE Wireless Headphones (PT-WH008 series). Learn about product overview, operation, pairing, troubleshooting, specifications, and safety guidelines.</p>
Problem	Solution																																
Headphones not working	Check the battery level. Charge the headphones.																																
Headphones not pairing	Press and hold the Bluetooth button for 3 seconds to enter pairing mode.																																
Headphones not charging	Check the charging cable and the charging port.																																
Headphones not turning off	Press the power button for 3 seconds to turn off the headphones.																																
Item	Specification																																
Model	PT-WH008																																
Color	Black																																
Weight	150g																																
Dimensions	180mm x 180mm x 60mm																																
Bluetooth Version	4.2																																
Charging Time	2 hours																																
Usage Time	8 hours																																
Microphone	Yes																																
Headphones	Yes																																
Headphones in Case	Yes																																
 <p>Pantone PT-BS001 Bluetooth Speaker User Manual and Safety Guide</p>	<p>Pantone PT-BS001 Bluetooth Speaker User Manual and Safety Guide</p> <p>Comprehensive user manual for the Pantone PT-BS001 Bluetooth speaker, covering setup, operation, safety precautions, technical specifications, and responsible disposal.</p>																																
 <p>Manuale Utente Auricolari Bluetooth PANTONE PT-TWS001</p>	<p>Manuale Utente Auricolari Bluetooth PANTONE PT-TWS001</p> <p>Manuale completo per gli auricolari Bluetooth True Wireless PANTONE PT-TWS001. Include istruzioni di sicurezza, ricarica, abbinamento, funzionamento, specifiche tecniche e smaltimento.</p>																																
 <p>PANTONE PT-TWS008 Wireless Earphones Instruction Manual</p>	<p>PANTONE PT-TWS008 Wireless Earphones Instruction Manual</p> <p>Instruction manual for PANTONE PT-TWS008 Wireless Earphones, covering safety, charging, pairing, operation, maintenance, and specifications. Includes multilingual content.</p>																																
 <p>PANTONE PT-BS008 Wireless Speaker: Instruction Manual & Specifications</p>	<p>PANTONE PT-BS008 Wireless Speaker: Instruction Manual & Specifications</p> <p>Official instruction manual for the PANTONE PT-BS008 Wireless Speaker. Learn about safety warnings, usage instructions, charging, pairing, technical specifications, and disposal guidelines.</p>																																
 <p>Pantone Color Chart</p>	<p>Pantone Color Chart</p> <p>A comprehensive chart displaying a wide range of Pantone colors, organized by color family and numerical designation. Includes colors from yellow and orange through blues, greens, grays, and purples.</p>																																