

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GAOMON](#) /

› [GAOMON Rattan Shoe Storage Cabinet with 3 Flip Door and 1 Drawer \(Model 2305697\) User Manual](#)

GAOMON 2305697

GAOMON Rattan Shoe Storage Cabinet User Manual

Model: 2305697

INTRODUCTION

Thank you for choosing the GAOMON Rattan Shoe Storage Cabinet. This manual provides essential information for the safe assembly, proper use, and maintenance of your new shoe organizer. Please read these instructions carefully before assembly and retain them for future reference.



Image: The GAOMON Rattan Shoe Storage Cabinet in an entryway, showcasing its elegant design and closed flip doors.

SAFETY INFORMATION

Always follow the provided assembly instructions. Ensure the cabinet is assembled on a stable, level surface. Do not overload the cabinet, as this may cause it to tip over. Keep the cabinet away from heat sources and do not place heavy objects on top of it.

PACKAGE CONTENTS

Before beginning assembly, please verify that all components listed below are present and undamaged:

- Installation Manual
- All necessary Installation Tools
- All furniture panels and hardware as specified in the manual

PRODUCT SPECIFICATIONS

Brand	GAOMON
Model Name	Rattan Shoe Storage Cabinet
Product Dimensions	9.4"D x 24"W x 53.7"H
Item Weight	52 Pounds
Color	Oak
Material	Engineered Wood, Rattan, Metal (legs)
Number of Shelves	3 (adjustable)
Special Features	3-Tier Adjustable Shelves, Top Drawer, Rattan Design, Anti-tilt mechanism



Image: Detailed diagram showing the dimensions of the GAOMON Rattan Shoe Storage Cabinet.

SETUP AND ASSEMBLY

Assembly is required for this product. Please refer to the detailed installation manual included in your package for step-by-step instructions. Ensure you have adequate space and the necessary tools (provided) before starting. It is recommended to assemble the cabinet on a soft, clean surface to prevent scratches.

Key Assembly Points:

- **Secure Connections:** Ensure all screws and fasteners are tightened securely to maintain stability.
- **Anti-Tilt Mechanism:** Install the anti-tilt device as instructed to prevent accidental tipping, especially in households with children or pets.
- **Leg Attachment:** The metal supporting legs provide stability. Ensure they are firmly attached to the base of the cabinet.



Image: Close-up view of the sturdy metal legs providing support for the cabinet.

OPERATING INSTRUCTIONS

Flip-Down Shoe Compartments

The cabinet features three flip-down compartments for shoe storage. Gently pull the handle to open each compartment. The design allows for easy access and keeps shoes neatly concealed and protected from dust.



Image: The shoe cabinet with all three flip-down doors open, revealing stored footwear.

Adjustable Shelves

Each flip-down compartment includes an adjustable shelf. The middle shelf can be removed or adjusted to three different positions to accommodate various shoe sizes and types, including larger shoes or boots.



Three-position Adjusted and Removable Shelf

Suitable for various types of shoes



High Heels



Slipper



Sneakers



Martin Boots

Image: Close-up of the three-position adjustable and removable shelf mechanism within a compartment.



Image: Comparison showing shoes stored with the shelf in place versus larger boots stored after the shelf has been removed.

Top Storage Drawer

The cabinet features a convenient top drawer, ideal for storing small items such as keys, wallets, or umbrellas, keeping them organized and easily accessible.



Image: The top drawer of the cabinet open, showing space for small personal items.

MAINTENANCE

To ensure the longevity and appearance of your GAOMON Rattan Shoe Storage Cabinet, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish or rattan.
- **Rattan Care:** The natural rattan is designed to be waterproof, scratch-resistant, and dust-proof. Regular dusting will help maintain its appearance.
- **Spills:** Promptly clean any spills to prevent staining or damage to the wood and rattan components.
- **Inspection:** Periodically check all fasteners and connections to ensure they remain tight. Re-tighten if necessary.

TROUBLESHOOTING

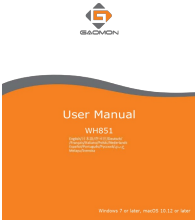
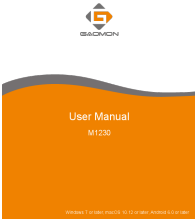

Common Issues and Solutions:




- **Cabinet feels unstable:** Ensure the cabinet is placed on a flat, level surface. Verify that all metal legs are securely attached and that the anti-tilt device is properly installed and anchored to the wall.
- **Difficulty during assembly:** Double-check the installation manual for the correct orientation of parts and sequence of steps. Ensure all hardware is used as specified. If a part seems difficult to fit, re-examine the instructions.
- **Flip doors or drawer not operating smoothly:** Check for any obstructions within the mechanism or tracks. Ensure all screws related to the door hinges and drawer slides are tightened correctly.
- **Missing parts:** If any parts are missing from your package, please contact GAOMON customer support immediately for assistance.

WARRANTY AND SUPPORT

For warranty information or if you encounter any issues not covered in this manual, please contact GAOMON customer support. Have your model number (2305697) and purchase details ready when contacting support to facilitate a quicker resolution. GAOMON is committed to providing quality products and customer satisfaction. We are here to assist you with any questions or concerns.

Related Documents - 2305697

	<p>GAOMON WH851 Graphics Tablet User Manual - Setup, Features, and Troubleshooting</p> <p>Comprehensive user manual for the GAOMON WH851 graphics tablet. Learn how to connect, install drivers, use features like pressure sensitivity and shortcut keys, and find troubleshooting tips. Ideal for digital artists.</p>
	<p>GAOMON M1230 User Manual</p> <p>Explore the GAOMON M1230 drawing tablet with this comprehensive user manual. Learn about setup, features, and troubleshooting for digital art creation. Compatible with Windows, macOS, and Android.</p>
	<p>GAOMON Driver Installation Guide for Windows and Mac</p> <p>A comprehensive guide to installing GAOMON drivers on both Windows and Mac operating systems, ensuring proper setup for GAOMON graphics tablets.</p>

 <p>GAOMON PD1161 Pen Display Installation -Windows & Mac-</p> <p>For Windows User:</p> <ol style="list-style-type: none">1. Make sure the pen display is connected well.2. Download the GAOMON PD1161 Pen Display Driver from the GAOMON website and install it on your computer.3. After the installation, the GAOMON PD1161 Pen Display will be recognized by the system.4. Please refer to the GAOMON PD1161 Pen Display User Manual for more details. <p>For Mac User:</p> <ol style="list-style-type: none">1. Make sure the pen display is connected well.2. Download the GAOMON PD1161 Pen Display Driver from the GAOMON website and install it on your computer.3. After the installation, the GAOMON PD1161 Pen Display will be recognized by the system.4. Please refer to the GAOMON PD1161 Pen Display User Manual for more details.	<p>GAOMON PD1161 Pen Display Installation Guide for Windows and Mac</p> <p>A comprehensive guide for installing the GAOMON PD1161 Pen Display on both Windows and Mac operating systems, covering driver downloads, installation steps, and troubleshooting.</p>
 <p>GAOMON PD1161 Pen Display Installation -Windows & Mac-</p> <p>For Windows User:</p> <ol style="list-style-type: none">1. Make sure the pen display is connected well.2. Download the GAOMON PD1161 Pen Display Driver from the GAOMON website and install it on your computer.3. After the installation, the GAOMON PD1161 Pen Display will be recognized by the system.4. Please refer to the GAOMON PD1161 Pen Display User Manual for more details. <p>For Mac User:</p> <ol style="list-style-type: none">1. Make sure the pen display is connected well.2. Download the GAOMON PD1161 Pen Display Driver from the GAOMON website and install it on your computer.3. After the installation, the GAOMON PD1161 Pen Display will be recognized by the system.4. Please refer to the GAOMON PD1161 Pen Display User Manual for more details.	<p>GAOMON PD1161 Pen Display Installation Guide</p> <p>Comprehensive installation guide for the GAOMON PD1161 Pen Display on Windows and macOS. Covers driver download, installation steps, and system permission settings.</p>
 <p>GAOMON Driver Installation -Windows & Mac-</p> <p>For Windows User:</p> <ol style="list-style-type: none">1. Make sure the pen display is connected well.2. Download the GAOMON Driver from the GAOMON website and install it on your computer.3. After the installation, the GAOMON Driver will be recognized by the system.4. Please refer to the GAOMON Driver User Manual for more details. <p>For Mac User:</p> <ol style="list-style-type: none">1. Make sure the pen display is connected well.2. Download the GAOMON Driver from the GAOMON website and install it on your computer.3. After the installation, the GAOMON Driver will be recognized by the system.4. Please refer to the GAOMON Driver User Manual for more details.	<p>GAOMON Driver Installation Guide for Windows and Mac</p> <p>A comprehensive guide to installing GAOMON drivers for Windows and Mac operating systems, ensuring proper functionality of GAOMON graphics tablets and displays.</p>