

M90 PRO

M90 PRO Wireless Gaming Earbuds User Manual

Model: M90 PRO

Brand: Generic

INTRODUCTION

Welcome to the user manual for your M90 PRO Wireless Gaming Earbuds. These earbuds are designed for an immersive audio experience, featuring advanced noise cancellation, a high-quality microphone, and a durable, waterproof design. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance.

KEY FEATURES

- **Gaming Monster:** Charging box with LED screen and Type-C input. The charging box can also charge your mobile phone.
- **Extended Battery Life:** Earbuds provide 4-5 hours of use (50 mAh battery). The charging box (800mAh) offers approximately 3 full charges.
- **Water Resistance:** IPX-4 water resistant (do not submerge). Designed to withstand minor impacts while maintaining audio quality.
- **Gaming Optimized:** Attractive LED design with minimal audio delay.
- **Broad Compatibility:** Bluetooth connection supports Android, iOS, and PC.
- **Complete Package:** Includes M90 PRO headphones, gaming design LED screen charging box, Type-C cable (without head), and 4 different sized ear pads.

PRODUCT OVERVIEW



Image: M90 PRO Earbuds resting in their open charging case, showcasing the LED display with battery percentages for both earbuds and the case. The case features a distinctive red V-shaped LED light.



Image: The M90 PRO Earbuds and their charging case displayed on a dark, textured surface. The case is open, revealing the earbuds and the LED battery indicator. Text on the image highlights "Good sound quality | Low latency | '0' to break even | Long life".



Image: A close-up of the M90 PRO charging case, illustrating its magnetic dual-track sliding mechanism. An orange arrow indicates the sliding motion to open the case. Text on the image describes "The traditional Return to magnetic dual-track slide" and "A new upgrade sliding charging tank, push gently open decompression slide a slide to work, dynamic listening to relieve the mood".



Image: The M90 PRO charging case with a Type-C charging cable inserted into its port. The LED display is visible, showing battery status. Text on the image states "Type-c interface It is more convenient to blind plug" and "Optimize the charging socket Type-c, charging more efficient, delivery charge line, carrying more convenient".



Image: A diagram highlighting the three true power display on the M90 PRO charging case. It shows separate battery indicators for the left earbud, the charging tank (case), and the right earbud. Text on the image describes "Contracted modelling Three true power display" and "Innovation LEDE screen digital display design, appearance vogue is novel, but also look into three screen, precision intuitive display, do not need to open the internal and external visual".



Image: The M90 PRO Earbuds and charging case positioned next to a smartphone and a laptop keyboard, illustrating their multi-device compatibility. Text on the image states "devices are compatible Switch phones more calmly" and "Compatible with IOS and ANDROID system also supports PC a headset walked all over the world".

SETUP

Initial Charging

Before first use, fully charge the M90 PRO charging case and earbuds.

1. Place both earbuds into the charging case.
2. Connect the provided Type-C cable to the charging port on the case and a compatible USB power source.
3. The LED screen on the case will display the charging status for both the case and individual earbuds.
4. Once fully charged, disconnect the cable.

Pairing with a Device

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, PC), enable Bluetooth.
3. Search for "M90 PRO" in the list of available Bluetooth devices.
4. Select "M90 PRO" to connect. A voice prompt will confirm successful pairing.
5. If pairing fails, place the earbuds back in the case, close it, and repeat the steps.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Open the charging case, or long-press the touch area on both earbuds for 3 seconds.
- **Power Off:** Place earbuds back into the charging case and close the lid, or long-press the touch area on both earbuds for 5 seconds.

Music Playback

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap the right earbud.
- **Previous Track:** Double tap the left earbud.
- **Volume Up:** Triple tap the right earbud.
- **Volume Down:** Triple tap the left earbud.

Call Management

- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Long-press the touch area on either earbud for 2 seconds.

Voice Assistant

- **Activate Voice Assistant:** Long-press the touch area on either earbud for 3 seconds (when not on a call).

Gaming Mode

The earbuds feature a low-latency gaming mode.

- To activate/deactivate gaming mode, refer to the specific instructions provided with your product

packaging or the manufacturer's website, as this feature often has a dedicated gesture or app control.

MAINTENANCE

Cleaning

Regularly clean your earbuds and charging case with a soft, dry, lint-free cloth.

Do not use harsh chemicals or abrasive materials.

Water Resistance

The M90 PRO earbuds are IPX-4 water resistant, meaning they are protected against splashing water from any direction.

Important: Do not submerge the earbuds in water or expose them to running water. Avoid using them in saunas, steam rooms, or during water sports.

Storage

When not in use, store the earbuds in their charging case to protect them and ensure they remain charged.

Store in a cool, dry place away from extreme temperatures.

TROUBLESHOOTING

Earbuds not pairing or connecting

- Ensure both earbuds are charged.
- Turn off Bluetooth on your device and turn it back on.
- Forget "M90 PRO" from your device's Bluetooth settings and try pairing again.
- Place both earbuds back in the charging case, close the lid, wait a few seconds, then open it again to reset.

Only one earbud working

- Ensure both earbuds are charged.
- Place both earbuds back in the charging case, close the lid, wait a few seconds, then open it again. This often re-syncs them.
- Check your device's audio settings to ensure stereo output is selected.

Charging issues

- Verify the Type-C cable is securely connected to both the case and the power source.
- Try a different Type-C cable and/or power adapter.
- Ensure the charging contacts on the earbuds and inside the case are clean and free of debris.

Poor audio quality or low volume

- Ensure the earbuds are properly seated in your ears and you are using the correct ear tip size for a good seal.
- Clean the earbud mesh to remove any wax or debris.
- Adjust the volume on both your device and the earbuds.
- Move closer to your connected device to avoid interference.

SPECIFICATIONS

Feature	Detail
Model Name	M90 PRO
Connectivity Technology	Wireless (Bluetooth 4.2)
Earbud Battery Capacity	50 mAh
Charging Case Battery Capacity	800 mAh
Usage Time (Earbuds)	4-5 Hours
Wireless Range	10 Meters
Water Resistance Level	IPX-4 (Water Resistant)
Noise Control	Active Noise Cancellation
Included Components	Carrying Case, Ear Pads (4 sizes)
Dimensions (Package)	4.53 x 3.74 x 1.57 inches
Item Weight	4.2 ounces

WHAT'S IN THE BOX

- 1 Pair of M90 PRO Wireless Gaming Earbuds
- 1 Charging Case with LED Display
- 1 Type-C Charging Cable (without power adapter)
- 4 Pairs of Ear Pads (different sizes)

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video showcasing the M90 PRO Wireless Gaming Earbuds, highlighting their key features, design, and compatibility. This video provides a visual overview of the product's capabilities and benefits.

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, support, or service inquiries, please refer to the product packaging or contact the seller directly.

Manufacturer: Shenzhen LiTian Digital Technology Co.

This user manual is for informational purposes only. Specifications are subject to change without notice.