

LEADZM sèche-linge 0065

LEADZM Compact 6KG 1500W Exhaust Dryer Model 0065 User Manual

Your guide to safe and efficient operation

1. INTRODUCTION AND IMPORTANT SAFETY INSTRUCTIONS

Thank you for choosing the LEADZM Compact 6KG 1500W Exhaust Dryer Model 0065. This manual provides essential information for the safe and efficient use of your appliance. Please read all instructions carefully before installation, operation, and maintenance, and retain this manual for future reference.

1.1 General Safety Warnings

- **Risk of Fire:** Always clean the lint filter before or after each load. Failure to do so can lead to a fire hazard.
- Do not dry items that have been soiled with cooking oil, gasoline, dry-cleaning solvents, or other flammable substances.
- Ensure the dryer is properly grounded and connected to a suitable power supply as indicated on the rating label.
- Keep the area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust, and dirt.
- Do not block the ventilation openings.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not install or store the dryer where it will be exposed to the weather.
- Always unplug the dryer from the power outlet before attempting any service or cleaning.

LEADZM Sèche-linge Compact

Votre propre lessive à la maison



Image 1.1: The LEADZM Compact Dryer in a home environment, illustrating its compact design and suitability for various living spaces.

2. PRODUCT OVERVIEW

The LEADZM Compact Dryer Model 0065 is designed for efficient and convenient clothes drying in smaller living spaces. Its 6KG capacity and 1500W power ensure effective drying for various fabric types.

2.1 Key Features


- **Compact Design:** Ideal for apartments, dorms, and small homes.
- **6KG Capacity:** Suitable for small to medium loads, including baby clothes, underwear, and T-shirts.
- **1500W Power:** Provides efficient drying performance.
- **LED Display:** For easy selection of drying modes and monitoring.
- **Reverse Tumble Action:** Helps prevent tangling and reduces wrinkles, ensuring proper rotation for even drying.
- **Removable Lint Filter:** Easy to access and clean for optimal performance and safety.



Image 2.1: Front view of the LEADZM Compact Dryer, showcasing the control panel and drum door.



control panel

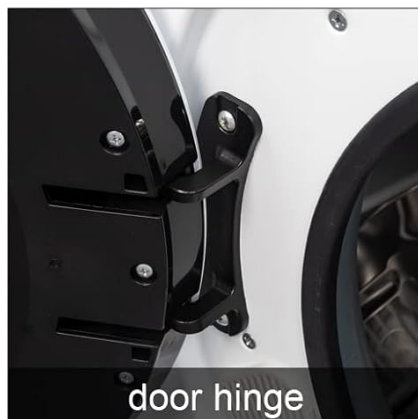

door hinge



air intake

Image 2.2: Detailed view of the dryer's control panel, robust door hinge, and the air intake filter, highlighting key functional parts.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove the dryer from its packaging. Inspect for any shipping damage. Ensure all accessories, including the exhaust hose and mounting brackets (if applicable), are present.

3.2 Placement Options

The LEADZM dryer offers flexible installation to suit your space:

- **Freestanding:** Place on a stable, level surface.
- **Stacking/Rack:** Can be placed on a compatible rack or stacked on top of a washing machine (ensure stability and proper ventilation).
- **Wall-Mounted:** Use the provided mounting brackets to securely attach the dryer to a sturdy wall.



Image 3.1: Illustration of the multi-mode installation options: stacking on a rack, wall-mounted, and freestanding on the floor.

Installation Multimode



Sur pied



Empilage



Mural

Image 3.2: Visual guide demonstrating the various installation methods for the compact dryer.

3.3 Ventilation Requirements

As an exhaust dryer, proper ventilation is crucial. Connect the exhaust hose to the dryer's outlet and direct it to an external vent or a suitable collection system. Ensure the exhaust path is clear and unobstructed to prevent lint buildup and maintain drying efficiency.

3.4 Electrical Connection

Connect the dryer to a dedicated 220 Volt, 1500 Watt power outlet. Do not use extension cords or adapters. Ensure the electrical supply meets the specifications of the appliance.

4. OPERATING INSTRUCTIONS

4.1 Loading Clothes

- Open the dryer door.
- Load clothes loosely into the drum. Do not overload. The maximum dry textile load is 6 kg. Overloading can reduce drying efficiency and cause excessive wear.
- Close the door firmly.

Forward and reverse tumble action
tangle free, shorter drying time
energy saving extend product life



Image 4.1: A user enjoying the fresh scent of laundry, demonstrating the dryer's effectiveness in a home setting.

4.2 Control Panel and Drying Modes

The dryer features an intuitive control panel with an LED display.

- **Power Button:** Press to turn the dryer on/off.
- **Mode Button:** Select desired drying mode (e.g., Standard, Smart).
- **Timer/Temperature Adjustment:** Use the timer control to set the desired drying duration or temperature, depending on the selected mode.
- **Start/Pause Button:** Press to start or pause the drying cycle.

4.3 Drying Cycles

- **Standard Mode:** Allows manual setting of drying time.
- **Smart Mode:** The dryer automatically detects the moisture level and adjusts the drying time for optimal results.

For quick drying of smaller loads, a 30-minute to 1-hour cycle may suffice. Larger loads may require up to 2 hours for complete drying.

Reverse Tumble Action:

Natural drying keeps clothing fluffy and wrinkle free

Ensures proper rotation



Image 4.2: Visual representation of the reverse tumble action, which helps prevent clothes from tangling and ensures even drying.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and efficient operation of your dryer.

5.1 Cleaning the Lint Filter

The lint filter is located inside the dryer drum, near the door opening. It is crucial to clean the lint filter before or after every load to maintain drying efficiency and prevent fire hazards.

1. Open the dryer door.
2. Remove the lint filter by pulling it upwards.
3. Peel off any accumulated lint.
4. Rinse the filter under running water if necessary, and ensure it is completely dry before reinserting.
5. Reinsert the lint filter securely into its slot.

5.2 Cleaning the Exterior

Wipe the exterior of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.3 Cleaning the Drum

Occasionally, wipe the interior of the drum with a damp cloth to remove any residue. For stubborn stains, a mild detergent can be used, followed by a thorough wipe with a clean, damp cloth.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dryer does not start	Power cord unplugged Door not closed properly Circuit breaker tripped	Ensure power cord is securely plugged in Close the door firmly until it latches Check and reset the circuit breaker
Clothes not drying completely	Lint filter clogged Overloaded dryer Improper drying mode/time selected Blocked exhaust vent	Clean the lint filter Reduce load size Select appropriate drying mode or extend drying time Check and clear the exhaust hose/vent
Unusual noise during operation	Foreign objects in drum Dryer not level	Check drum for loose items (coins, buttons) Ensure dryer is on a level surface
Dryer stops mid-cycle	Overheating Power interruption	Clean lint filter and ensure proper ventilation. Allow dryer to cool. Check power supply.

7. SPECIFICATIONS

Feature	Specification
Brand	LEADZM
Model Number	sèche-linge 0065
Dimensions (L x W x H)	59 x 51 x 68 cm
Weight	27 Kilograms
Capacity	6 Kilograms
Voltage	220 Volts
Wattage	1500 Watts
Energy Efficiency Rating	C (A+++ to D scale)

Feature	Specification
Material	Metal
Loading Type	Front Load
Door Orientation	Left

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official LEADZM website. Keep your proof of purchase for warranty claims.

