

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Momcozy](#) /

› [Momcozy Electric Baby Nail File User Manual](#)

Momcozy Electric Nail Trimmer

Momcozy Electric Baby Nail File User Manual

Model: Electric Nail Trimmer

Brand: Momcozy

1. INTRODUCTION

The Momcozy Electric Baby Nail File is designed to provide a safe, gentle, and efficient solution for trimming and polishing baby's nails. Its thoughtful design ensures a stress-free experience for both parents and infants, making nail care simple and worry-free.

- **Rechargeable:** Built-in battery, charges with a common Type-C cable, eliminating the need for frequent battery changes.
- **For Whole Family:** Includes 4 replacement pads for babies and 3 pads for adult grooming, suitable for newborns, babies 0-36 months, and adults.
- **Safe for Baby:** Features a 3500 lowest RPM for gentle grooming and a touch-and-stop function to prevent accidental finger injuries.
- **Gentle Lighting:** Equipped with a 360° fog LED light source for effective nail grooming at night without glare, gentle on baby's eyes.
- **Low Noise:** Operates below 35dB in gear 1, ensuring a quiet grooming experience that won't frighten the baby, suitable for use while the baby is asleep.

2. WHAT'S INCLUDED



Image: Overview of the Momcozy Electric Baby Nail File Kit, showing the main unit, protective case, and various grinding heads.

Your Momcozy Electric Baby Nail File Kit includes:

- 1 x Electric Nail File Main Unit
- 1 x Protective Storage Case
- 7 x Grinding Head Replacement Pads (4 for baby, 3 for adult)
- 1 x Type-C Charging Cable (located under the organizer in the case)
- 1 x User Manual

3. SETUP

3.1 Charging the Device

Charge Once Use for Months



800mAh
internal battery



Universal Type-C
charging port



Image: The Momcozy Electric Baby Nail File being charged with a Type-C cable connected to a wall adapter.

Before first use, fully charge the nail file. The Type-C charging cable is conveniently stored under the organizer tray within the protective case.

1. Open the protective storage case and lift the organizer tray to access the Type-C charging cable.
2. Connect the Type-C cable to the charging port on the bottom of the nail file unit.
3. Plug the other end of the cable into a compatible USB power source (e.g., wall adapter, computer USB port).
4. The indicator lights on the unit will show charging progress. Once fully charged, the lights will indicate completion.

3.2 Attaching a Grinding Head

Lower than 35dB Noise Doesn't make the baby panic



Image: A hand demonstrating how to attach a grinding head onto the spindle of the electric nail file.

Select the appropriate grinding head based on the user's age and nail hardness (refer to Section 4.2 for guidance).

1. Gently pull the current grinding head (if any) straight off the spindle.
2. Align the new grinding head with the spindle and push it firmly until it clicks into place.

4. OPERATING INSTRUCTIONS

4.1 Power On and Speed Adjustment

Special 3500RPM Ultra-low Gear

Safe for finely polishing



*Typical minimum speed for others is 5000~6000RPM

Image: The electric nail file displaying its four speed indicator lights, demonstrating adjustable speed settings.

The device features 4 grinding speed gears to suit different needs:

- Press the power button once to turn on the device at the lowest speed (Gear 1, 3500 RPM).
- Press the power button repeatedly to cycle through the speeds (Gear 1 → Gear 2 → Gear 3 → Gear 4).
- To turn off the device, continue pressing the power button until all indicator lights are off, or hold the button down for a few seconds.

4.2 Grinding Head Selection and Usage

4 Different Speeds

Other family members can also use

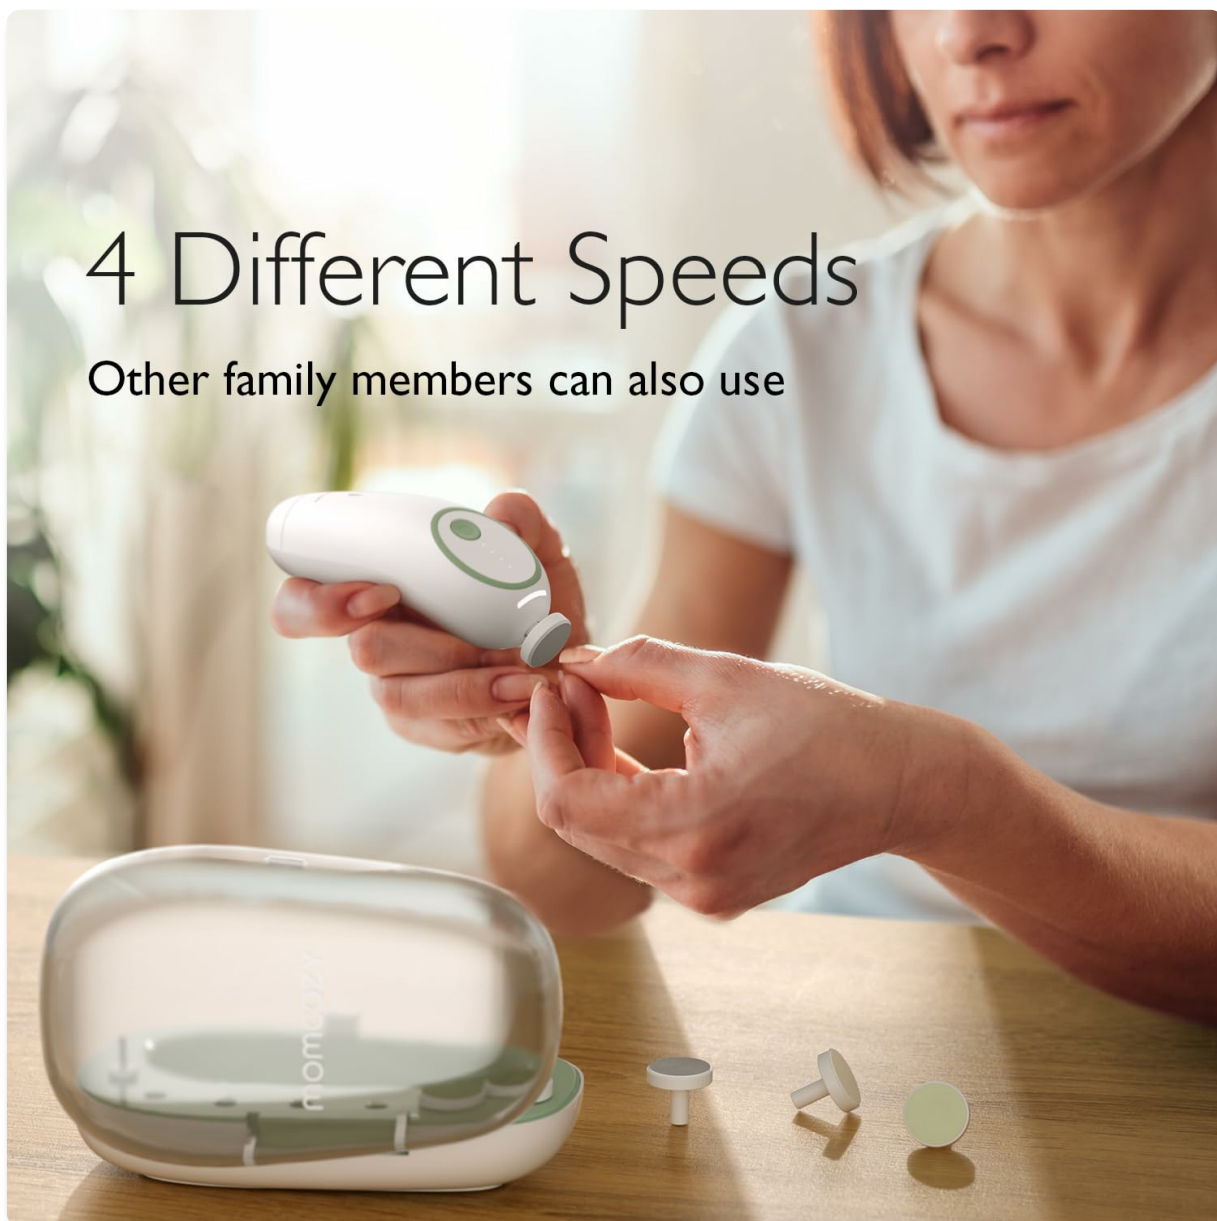


Image: A close-up of the electric nail file gently trimming a baby's fingernail, highlighting its safe operation.

The kit includes 7 grinding heads, color-coded for different age groups and purposes:

Head Type	Recommended Age/Use	Description
Baby Pads (4 types)	Newborn to 36 months	Varying levels of softness for delicate baby nails, from ultra-fine for newborns to slightly coarser for toddlers.
Adult Pads (3 types)	Adults	Coarser grits for effective trimming and polishing of adult fingernails and toenails.

To use:

1. Choose the appropriate grinding head and attach it to the unit.
2. Select a low speed setting, especially for infants.
3. Gently hold the baby's hand or foot and lightly press the grinding head against the nail.
4. Move the file in a circular motion around the nail tip. The touch-and-stop function will prevent over-grinding if too much pressure is applied.
5. Utilize the 360° fog LED light for clear visibility, especially in low-light conditions or when the baby is

asleep.

4.3 Official Product Video

Your browser does not support the video tag.

Video: An official product video from Momcozy Official Store demonstrating the features and usage of the Electric Baby Nail File, including the different grinding heads and quiet operation.

5. MAINTENANCE

- **Cleaning:** After each use, gently wipe the grinding heads and the main unit with a soft, dry cloth. Do not immerse the unit in water.
- **Storage:** Store the nail file and all accessories in the provided protective case in a cool, dry place, away from direct sunlight and moisture.
- **Grinding Head Replacement:** Replace grinding heads when they show signs of wear or become less effective.

6. TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. If the battery is low, connect it to the Type-C charging cable.
- **Grinding head not spinning:** Check if the grinding head is securely attached to the spindle. Ensure no debris is obstructing the mechanism.
- **Ineffective grinding:** Replace the grinding head if it appears worn. Ensure you are using the correct grit for the nail type. Increase the speed setting if necessary, but always start with the lowest for babies.
- **Device stops during use:** This may be due to the touch-and-stop safety feature. Reduce pressure on the nail. If the issue persists, check battery level.

7. SPECIFICATIONS

Feature	Detail
Brand	Momcozy
Model	Electric Nail Trimmer
Material Type	Plastic
Power Source	Rechargeable Lithium Polymer Batteries (2 included)
Item Weight	9.1 ounces
Package Dimensions	6.38 x 3.98 x 2.48 inches
Noise Level	Below 35dB (Gear 1)
Grinding Speeds	4 (lowest 3500 RPM)
Grinding Heads	7 (4 for baby, 3 for adult)

8. SAFETY INFORMATION

- Always supervise children when using the device.
- Keep the device and all accessories out of reach of children when not in use.
- Do not use the device on damaged, infected, or irritated skin/nails.
- Avoid excessive pressure on the nail to prevent injury. The device has a safety stop feature.
- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.
- Ensure the charging port is dry before connecting the charging cable.

9. WARRANTY AND SUPPORT

Momcozy offers a standard warranty for this product. For detailed warranty information, product support, or to purchase replacement parts, please visit the official Momcozy website or contact their customer service team. Contact information can typically be found in the packaging or on the brand's official online store.

Thank you for choosing Momcozy!