

## **KLIM KLIM Nomad**

# **KLIM Journey Portable CD Player User Manual**

Model: KLIM Nomad | Brand: KLIM

## **INTRODUCTION**

The KLIM Journey Portable CD Player is a versatile audio device designed for modern listening while embracing classic CD playback. It offers multiple connectivity options including Bluetooth, FM transmission, and AUX, along with an SD card reader and FM radio. This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your device to ensure an optimal listening experience.



Image: The KLIM Journey Portable CD Player, shown with its accessories including wired earphones, an AUX cable, a USB-C charging cable, and a protective carry pouch.

## PACKAGE CONTENTS

- KLIM Journey Portable CD Player
- KLIM Fusion Wired Earphones
- Earphone Accessories (e.g., different size ear tips)
- USB-C Charging Cable
- Carry Pouch
- User Manual (this document)

# FULL OF GOODIES



Image: A flat lay of all items included in the KLIM Journey package, neatly arranged on a wooden surface. This includes the white CD player, black wired earphones, a USB-C cable, and a black zippered carry pouch.

## SETUP

### 1. Charging the Device

Before first use, fully charge your KLIM Journey CD Player. Connect the included USB-C charging cable to the player's USB-C port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status. A full charge provides over 14 hours of playback.

# TAKE IT EVERYWHERE



Compact & light  
Long-lasting battery  
(14+ hours of playtime)



Image: The KLIM Journey CD Player with a bright, illuminated screen, emphasizing its compact design and long-lasting battery, indicated by a "14H" battery icon.

## 2. Connecting Headphones

Insert the 3.5mm jack of the included KLIM Fusion earphones into either of the two audio output ports on the side of the player. The KLIM Journey supports two sets of earphones simultaneously for shared listening.

## 3. Inserting a CD

Gently slide the "OPEN" switch on the side of the player to open the CD compartment. Place your CD (CD, CD-R, CD-RW, HCD, MP3 CD) onto the spindle, ensuring it clicks into place. Close the lid firmly until it latches.

## OPERATING INSTRUCTIONS

### Device Controls Overview

1. Backlit display
2. PROG/FM (-)
3. DIR/Speed increase
4. FM Transmitter
5. FM radio/Speed decrease
6. A/B recording
7. Bluetooth
8. EQ/Recording
9. MODE/FM (+)
10. Volume
11. Hold switch

ALL THE CONTROL  
OPTIONS YOU NEED



Image: A detailed diagram of the KLIM Journey CD Player's top panel, highlighting and numbering each control button and feature for easy identification and understanding.

1. **Backlit Display:** Shows track information, mode, battery status, etc.
2. **PROG/FM (-):** Program playback order; in FM mode, decreases frequency.
3. **DIR/Speed Increase:** Directory navigation for MP3 CDs; increases playback speed.
4. **FM CAR:** Activates FM Transmitter mode for car connection.
5. **FM:** Toggles FM radio mode.
6. **A-B/REC:** A-B repeat function; long press for recording.
7. **Bluetooth:** Activates Bluetooth pairing mode.
8. **EQ/Recording:** Toggles equalizer presets; short press for recording.
9. **MODE/FM (+):** Changes playback mode (Repeat, Random, Intro); in FM mode, increases frequency.
10. **Volume:** Adjusts audio output volume.
11. **Hold Switch:** Locks all buttons to prevent accidental presses.
12. **Previous Track/Rewind:** Skips to previous track; long press to rewind.
13. **Play/Pause:** Starts or pauses playback.

14. **Stop:** Stops playback.
15. **Next Track/Fast Forward:** Skips to next track; long press to fast forward.

## CD Playback

- After inserting a CD, press the **Play/Pause** button to begin playback.
- Use the **Previous Track/Rewind** and **Next Track/Fast Forward** buttons to navigate tracks. Long press for fast forward/rewind.
- Press **Stop** to end playback.
- The device features an anti-skip/anti-shock protection chip that preloads 100 seconds of music to prevent interruptions during movement.

## Connecting to Your Car

The KLIM Journey offers three primary methods for connecting to your car's audio system:



Image: A visual representation of the three connection methods for the KLIM Journey to a car: Bluetooth, FM Transmitter, and AUX Cable, with corresponding icons and example car interiors.

### 1. AUX Connection:

Use the included AUX cable to connect the player's audio output to your car's AUX input port. This provides a direct, high-quality audio connection. Ensure your car has an AUX port.

### 2. Bluetooth Connection:

Press the **Bluetooth** button on the player to enter pairing mode. On your car's infotainment system, search for available Bluetooth devices and select "KLIM Journey". Once paired, audio will stream wirelessly. Note: Bluetooth compatibility may vary with different car models.

### 3. FM Transmission:

Press the **FM CAR** button. The player will display available FM frequencies. Tune your car's FM radio to the same frequency displayed on the KLIM Journey. This allows you to broadcast your music wirelessly to your car's radio. Choose a frequency that is clear of existing radio stations for best performance.

## FM Radio Operation

- Press the **FM** button to switch to FM radio mode.
- Use the **PROG/FM (-)** and **MODE/FM (+)** buttons to tune to desired frequencies.
- The wired earphones act as an antenna for improved reception.

## SD Card Playback & Recording

- Insert an SD card into the designated slot. The player will automatically detect and play compatible audio files (e.g., MP3).
- To record audio (e.g., from a CD or FM radio), press and hold the **A-B/REC** button or short press the **EQ/Recording** button (refer to specific model instructions for exact recording initiation). Ensure an SD card is inserted for recording functionality.

## Equalizer (EQ) and Speed Control

- Press the **EQ** button repeatedly to cycle through different equalizer presets (e.g., Pop, Jazz, Rock, Classic, Bass, Normal) to customize your audio experience.
- Use the **DIR/Speed Increase** button to adjust the playback speed of audio, useful for podcasts or audiobooks.

## MAINTENANCE AND CARE

- Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the CD lens, use a specialized CD lens cleaner. Do not use abrasive cleaners or solvents.
- Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures. Use the included carry pouch for protection when not in use or during transport.
- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in constant use.
- Handling CDs:** Always handle CDs by their edges to avoid fingerprints and scratches. Store CDs in their cases when not in use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not turn on.	Low battery; Hold switch engaged.	Charge the device; Disengage the Hold switch.
CD skips or playback is interrupted.	CD is dirty or scratched; Excessive vibration.	Clean the CD; Ensure the player is on a stable surface or use the anti-shock feature.

Problem	Possible Cause	Solution
No sound from headphones.	Headphones not properly connected; Volume too low; Headphones faulty.	Ensure headphones are fully plugged in; Increase volume; Test with another pair of headphones.
Cannot connect via Bluetooth.	Player not in pairing mode; Device too far; Interference.	Press Bluetooth button to enter pairing mode; Move devices closer; Turn off other Bluetooth devices.
FM transmission has static/interference.	Chosen FM frequency is occupied.	Select a different, clear FM frequency on the player and car radio.

## SPECIFICATIONS

Feature	Detail
Model Name	KLIM Nomad
Dimensions	14 x 14 x 2.8 cm
Weight	250 Grams
Compatible Media Types	CD, CD-R, CD-RW, HCD, MP3 CD
Supported Audio Formats	MP3
Connectivity Technology	Bluetooth, AUX, FM Transmission
Power Source	Battery Powered (Rechargeable Lithium-Cobalt)
Battery Life	14+ hours (approx.)
Special Features	Anti-skip/Anti-shock protection, SD Card Reader, FM Radio, Recording, Speed Control, Equalizer



Image: The rear packaging of the KLIM Journey, displaying technical specifications and product features in English, French, German, Italian, and Spanish.

## WARRANTY AND SUPPORT

KLIM Technologies offers a **5-year warranty** on the KLIM Journey Portable CD Player. This warranty covers manufacturing defects and ensures long-term reliability of your device.

For technical support, warranty claims, or any questions regarding your KLIM Journey, please visit the official KLIM website or contact their customer service directly. Refer to the contact information provided in your product packaging or on the KLIM Technologies Australia Amazon store page.

If you are not satisfied with the product, you may return it within 30 days for a full refund, as per Amazon's return policy.



Image: A promotional banner from KLIM highlighting their mission, commitment to quality, and a 5-year warranty, featuring images of their product engineers and specialists.

© 2024 KLIM Technologies. All rights reserved.

## Documents - KLIM – KLIM Nomad

### [\[pdf\]](#) User Manual



MAN Nomad manual all versions 20231011 v18 cdr Luis Manuale KLIM Lettore CD Portatile portatile con Bluetooth Technologies klim nomad cd player v 1697072200cdn shopify s files 1 0710 0101 4551 ||| Earphone power output Earphone impedance 64 In TF card mode, long press the button to enter th ... ice . The CD player does not connect to my car s bluetooth system External devices including the KLIM Nomad cannot be guaranteed to work with all car manufacturers infotainment system. Car system...

lang:fr score:46 filesize: 17.57 M page\_count: 34 document date: 2023-10-11

### [\[pdf\]](#) User Manual Instructions Troubleshooting Guide Diagram



MAN Nomad manual 20211013 v18 cdr Luis KLIM MULTI klimtechs 2021 12 ||| USER MANUAL MANUEL D UTILISATION BENUTZERHANDBUCH MANUALE UTENTE MANUAL DEL USUARIO NOMAD High-Fide ... NTACT AND TROUBLESHOOTING Please refer to page 7 for common issues and solutions when operating the KLIM Nomad. In case you require additional assistance or have any questions, please write us direct...

lang:en score:35 filesize: 12.05 M page\_count: 34 document date: 2021-10-13



### [pdf] User Manual Instructions Troubleshooting Guide Diagram

MAN Nomad manual 20220321 v2 WIP cdr Luis KLIM MULTI klimtechs 2022 03 |||

USER MANUAL MANUEL D UTILISATION BENUTZERHANDBUCH MANUALE

UTENTE MANUAL DEL USUARIO NOMAD High-Fide ... NTACT AND

TROUBLESHOOTING Please refer to page 7 for common issues and solutions when operating the KLIM Nomad. In case you require additional assistance or have any questions, please write us directl...

lang:en score:33 filesize: 12.11 M page\_count: 34 document date: 2022-03-23



### [pdf] User Manual Instructions Troubleshooting Guide Diagram


MAN Nomad manual 20220321 v2 WIP cdr Luis Manuale utente KLIM Lettore cd portatile Batteria a Lunga Durata Include Auricolari Fusion Compatibile con CD R RW MP3 SD Radio FM Bluetooth Ideale per Auto Hi Fi Nuovo 2022 Amazon it Elettronica C1twup1z4zL m media amazon images I |||

USER MANUAL MANUEL D UTILISATION BENUTZERHANDBUCH MANUALE

UTENTE MANUAL DEL USUARIO NOMAD High-Fide ... NTACT AND

TROUBLESHOOTING Please refer to page 7 for common issues and solutions when operating the KLIM Nomad. In case you require additional assistance or have any questions, please write us directl...

lang:en score:29 filesize: 5.47 M page\_count: 34 document date: 2022-03-24

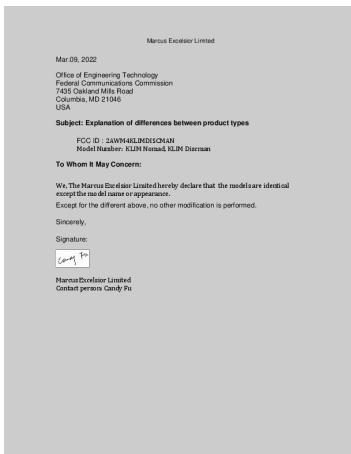

### [pdf]


Date gretchen Difference Description Marcus Excelsior Limited KLIMDISCMAN KLIM CD Players

2AWM4KLIMDISCMAN klimdiscman

Marcus Excelsior Limited Mar.09, 2022 Office of Engineering Technology Federal Communications Commission 7435 Oakland Mills Road Columbia, MD 21046 USA  
Subject: Explanation of differences between product types FCC ID :

2AWM4KLIMDISCMAN Model Number: KLIM Nomad, KLIM Discman To Whom It May Concern: W...

lang:en score:24 filesize: 114.32 K page\_count: 1 document date: 2022-03-09

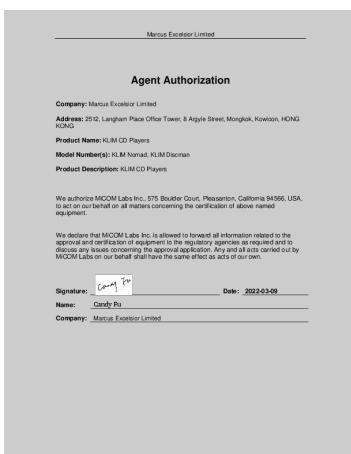

### [pdf] Agent Authorization

PLEASE PRINT ON COMPANY LETTERHEAD MiCOM Labs Inc QMS Agent Authorization Rev 1 0

Marcus Excelsior Limited KLIMDISCMAN KLIM CD Players 2AWM4KLIMDISCMAN klimdiscman

Marcus Excelsior Limited Agent Authorization Company: Marcus Excelsior Limited Address: 2512, Langham Place Office Tower, 8 Argyle Street, Mongkok, Kowloon, HONG KONG Product Name: KLIM CD Players Model Number s : KLIM Nomad, KLIM Discman Product Description: KLIM CD Players We authorize MiCOM Labs...  
lang:en score:24 filesize: 109.83 K page\_count: 1 document date: 2022-03-09

[\[pdf\]](#) User Manual Instructions Troubleshooting Guide Diagram



MAN Speaker 20220929 v18 cdr Luis KLIM Portable CD Player with Speakers New 2023 Walkman

Rechargeable Battery Headphones SD TF Card AUX Ideal Car User Manual B1P 2hM1TbL m media  
amazon images | |||

USER MANUAL MANUEL D UTILISATION BENUTZERHANDBUCH MANUALE  
UTENTE MANUAL DEL USUARIO Speaker High-Fi ... euillez vous rfrer la page 13  
pour les problmes courants pouvant survenir lorsque vous utilisez le KLIM Nomad et  
leurs solutions. Au cas o vous auriez la moindre question ou besoin d assistance  
suppl...

lang:en score:22 filesize: 3.31 M page\_count: 34 document date: 2023-02-21