



[Manuals.plus](#) /

› [TakTark](#) /

› TakTark Sound Machine User Manual

## TakTark WN100

# TakTark Sound Machine User Manual

Model: WN100

## INTRODUCTION

---

The TakTark Sound Machine is a portable device designed to create a calming auditory environment, aiding in relaxation, sleep, and focus. It features a variety of soothing sounds, customizable timer settings, and a memory function for convenience. Its compact design and dual power options make it suitable for use in various settings, including nurseries, bedrooms, and during travel.



Figure 1: TakTark Sound Machine (Model WN100)

## SAFETY INFORMATION

---

This product is not a toy. Always use according to voltage/power requirements and handle with care to avoid electric shock. Prolonged exposure to high sound levels can cause damage to hearing. Always use at safe and comfortable volume levels.

## PACKAGE CONTENTS

---

Please verify that all items are present in the package:

- 1x TakTark White Noise Machine

- 1x USB Charging Cable
- 1x User Manual



Figure 2: Product Packaging Detail (showing contents and contact information)

## PRODUCT OVERVIEW AND FEATURES

The TakTark Sound Machine is designed with user convenience and effectiveness in mind. Key features include:

- **20 Soothing Sounds:** A diverse selection including white noise, nature sounds, lullabies, and other calming melodies.
- **5 Timer Settings:** Options for 30, 60, 90 minutes, or continuous play.
- **Memory Feature:** Remembers your last sound, volume, and timer settings.
- **Compact and Portable:** Lightweight and small, ideal for travel and on-the-go use.
- **USB Power and Battery Operation:** Can be powered via USB or its built-in rechargeable battery for cordless use.



**PORTABLE**



Figure 3: Portability of the Sound Machine



**Long Standby**  
**20 Hours**



Figure 4: Long Standby Time (Up to 20 Hours)

## SETUP

Follow these steps for initial setup:

1. **Power On:** Connect the device using the provided USB cable to a USB power source (e.g., computer, power bank, wall adapter) or ensure the built-in battery is charged. Press and hold the power button (**U**) to turn on the device.
2. **Initial Sound Selection:** The device will start playing the last selected sound. You can change the sound as described in the 'Operating Instructions' section.
3. **Volume Adjustment:** Adjust the volume to a comfortable level using the volume buttons.
4. **Timer Setting:** Select your desired timer duration or continuous play.

## OPERATING INSTRUCTIONS

---

### Power On/Off

- To turn on, press and hold the power button (**U**) until the indicator light illuminates.
- To turn off, press and hold the power button (**U**) again until the indicator light turns off.

### Sound Selection

The device offers 20 unique soothing sounds across four categories. Press the sound selection button (**♪**) to cycle through the available sounds.



Nature Sounds



White Noise



Light Music



Fetal Sound





# 20

## WHITE NOISE CHOICES

Figure 5: Sound Categories

The 20 sounds include:

- **Nature Sounds (9):** Wave, Rain, Piano, Bird, Thunder, Bonfire, Loss of TV signal, and two additional nature sounds.
- **Light Music (5):** Various calming melodies.
- **White Noise (5):** Different variations of white noise.
- **Fetal Sound (1):** A single fetal heartbeat sound.

## 20 WHITE NOISE CHOICES









 Wave	 Rain	 Piano	 Bird
 Thunder	 Fetal Sound	 Bonfire	 Loss of TV signal
★ 9 NATURE SOUNDS		🎵 5 LIGHT MUSIC	🔊 5 WHITE NOISE
❤️ 1 FETAL SOUND			

Figure 6: Detailed Sound Options

### Volume Adjustment

The device features 16 adjustable volume levels. Use the volume up (+) and volume down (-) buttons to set the desired sound

level.

# 16 VOLUME LEVELS



The image displays a volume control interface for a sound machine. At the top, it says "16 VOLUME LEVELS". Below this is a vertical slider with 16 horizontal bars. To the left of the slider is a speaker icon with a plus sign, and to the right is a speaker icon with a minus sign. The "Volume Up" section features a sun icon, a photo of a smiling baby crawling, and the text "Volume Up" and "Capture serenity amidst the chaos". The "Volume Down" section features a moon icon, a photo of a baby sleeping in a crib, and the text "Volume Down" and "Sleep peacefully in familiar surroundings".

**Volume Up**  
Capture serenity amidst the chaos

**Volume Down**  
Sleep peacefully in familiar surroundings

Figure 7: Volume Levels

## Timer Settings

The sound machine includes an auto-off timer function. Press the timer button ( ) to cycle through the available settings:

- 30 minutes
- 60 minutes
- 90 minutes
- Continuous Play (indicated by no timer light)

# AUTO TIMER



30/60/90 Minutes Auto-Off Audio



Figure 8: Auto Timer Function

## Memory Function

The device is equipped with a memory function that saves your last used sound, volume level, and timer setting. When you power on the machine, it will automatically resume play with these saved preferences.

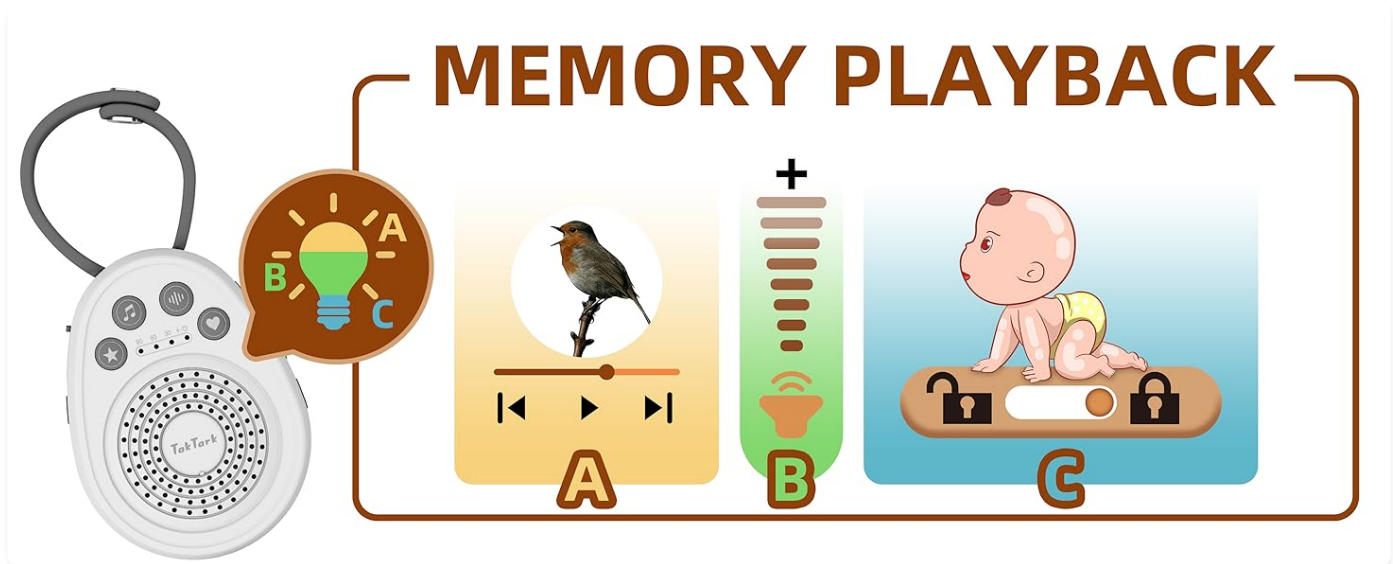


Figure 9: Memory Playback Feature

## Child Lock

To prevent accidental changes to settings, the sound machine includes a child lock feature. Locate the lock switch on the side of the device and slide it to the locked position. This will disable the control buttons.

 


Figure 10: Child Lock Feature

## MAINTENANCE

To ensure the longevity and proper functioning of your TakTark Sound Machine:

- Clean the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Keep the device away from water and excessive moisture.
- Avoid dropping the device or subjecting it to strong impacts.
- Store in a cool, dry place when not in use for extended periods.

## TROUBLESHOOTING

If you encounter issues with your sound machine, please refer to the following common solutions:

- **Device does not turn on:** Ensure the battery is charged or the device is connected to a working USB power source. Check the USB cable for damage.
- **No sound:** Check the volume level and increase it if necessary. Ensure the device is not muted.
- **Buttons are unresponsive:** Check if the child lock feature is enabled. Slide the lock switch to the unlocked position.
- **Sound quality is poor:** Ensure the speaker is not obstructed. Try a different sound to see if the issue persists.
- **Timer not working:** Verify that a timer setting (30, 60, or 90 minutes) is selected and not continuous play.

If the problem persists after attempting these solutions, please contact customer support.

## SPECIFICATIONS

Specification	Detail
---------------	--------

Specification	Detail
Model Number	WN100
Dimensions (L x W x H)	4.33 x 3.15 x 1.42 inches
Weight	3.53 ounces
Battery Type	1 Lithium Metal battery (included)
Power Source	USB Powered, Battery Powered
Number of Sounds	20
Timer Settings	30, 60, 90 minutes, Continuous
Volume Levels	16
Color	White
Material	Plastic
Manufacturer	TakTark
Country of Origin	China

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please contact TakTark customer service:

- **Email:** [info@taktark.cc](mailto:info@taktark.cc)
- **Facebook:** <https://www.facebook.com/Taktarkbabymonitor>