

ONIKUMA GAMING CW902

ONIKUMA GAMING CW902 Wired Gaming Mouse User Manual

1. INTRODUCTION

Thank you for choosing the ONIKUMA GAMING CW902 Wired Gaming Mouse. This manual provides detailed instructions for setting up, operating, and maintaining your new gaming mouse. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

2. PRODUCT OVERVIEW

The ONIKUMA GAMING CW902 is a wired gaming mouse designed for comfort and precision. It features adjustable DPI settings, vibrant RGB backlighting, and 7 responsive buttons to enhance your gaming and productivity experience.

2.1 Mouse Components

7 BUTTONS DESIGN

Adapt to your pace by the convenient buttons

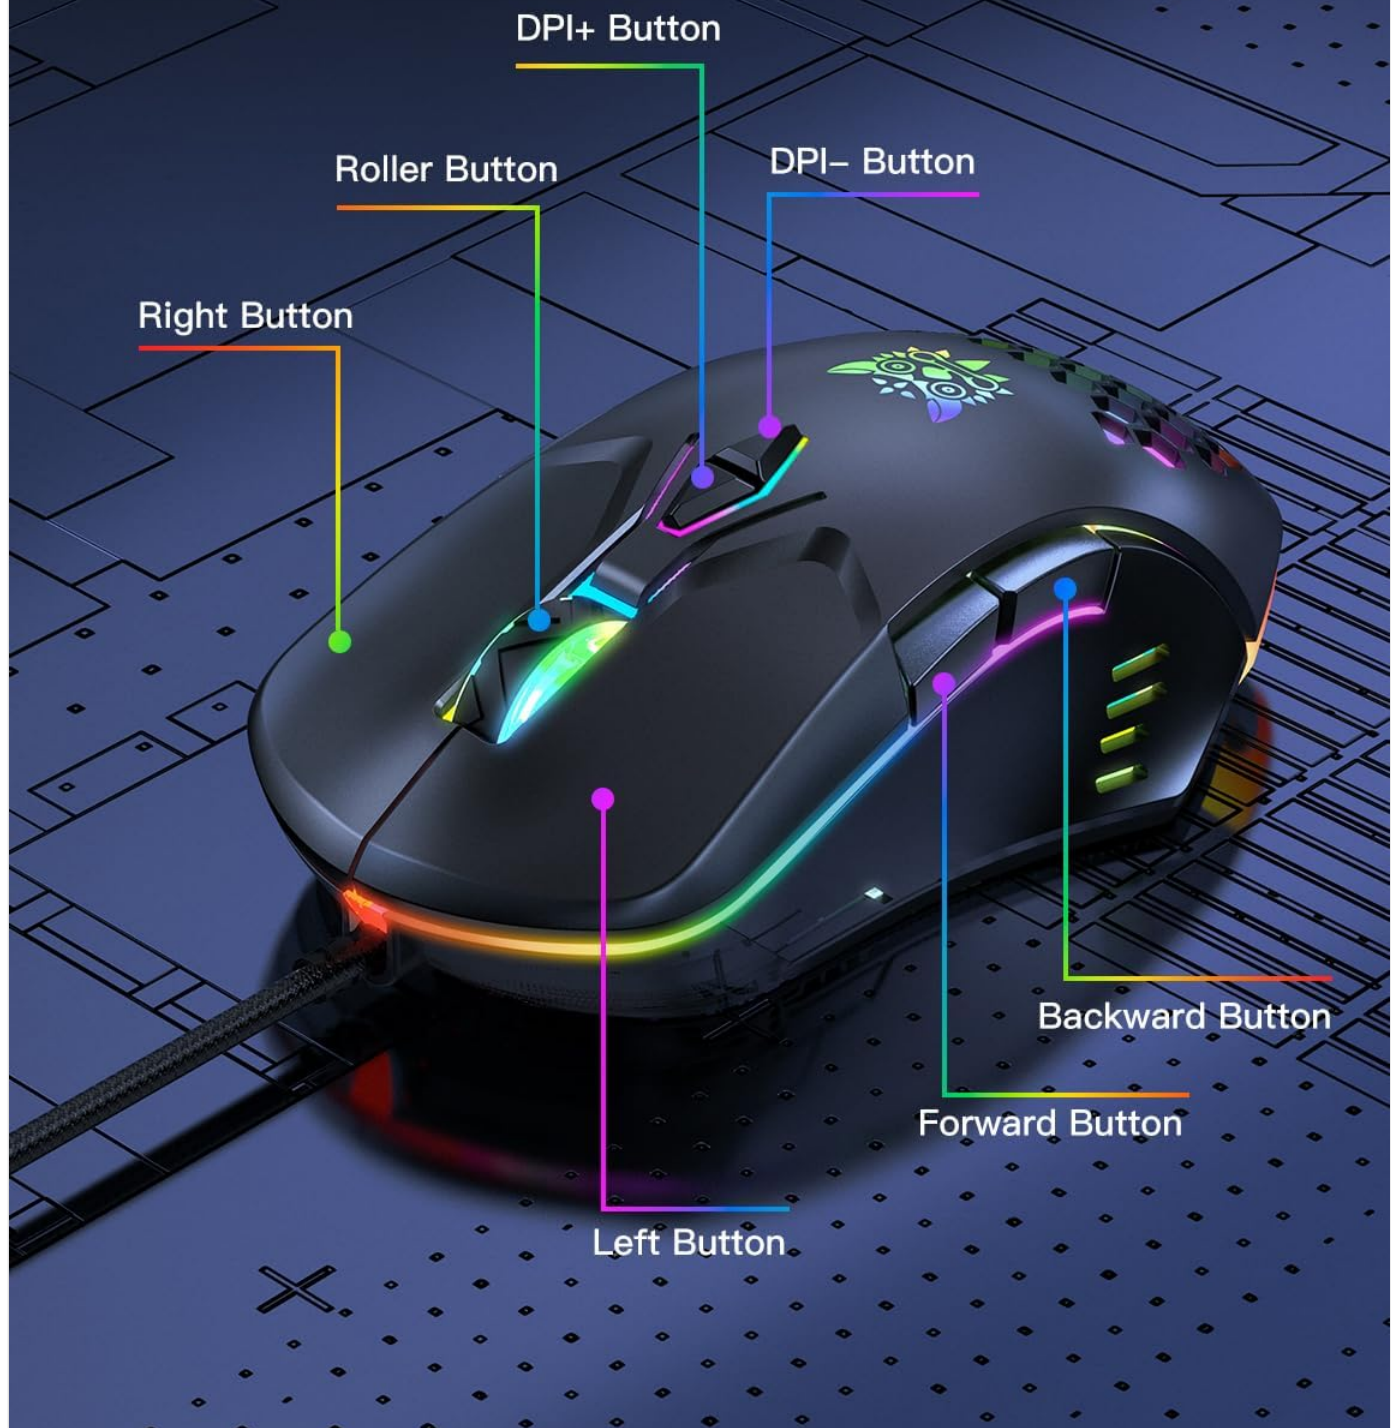


Image: ONIKUMA GAMING CW902 mouse with labeled buttons.

- **Left Button:** Standard left-click function.
- **Right Button:** Standard right-click function.
- **Roller Button (Scroll Wheel):** Scroll up/down, and middle-click function.
- **DPI+ Button:** Increases DPI sensitivity.

- **DPI- Button:** Decreases DPI sensitivity.
- **Forward Button:** Navigates forward in web browsers or file explorers.
- **Backward Button:** Navigates backward in web browsers or file explorers.

3. SETUP

The ONIKUMA GAMING CW902 mouse is designed for plug-and-play functionality, requiring no additional drivers for basic operation.

1. **Connect the Mouse:** Plug the USB connector of the mouse into an available USB port on your computer.
2. **System Recognition:** Your operating system (Windows, macOS, Linux, Chrome OS) will automatically detect and install the necessary drivers. This process may take a few moments.
3. **Ready for Use:** Once recognized, the mouse will be ready for immediate use.

4. OPERATING INSTRUCTIONS

4.1 DPI Adjustment

The mouse features 4 adjustable DPI levels, allowing you to customize cursor sensitivity to match your preferences for gaming or general use.

4 ADJUSTABLE DPI LEVELS

Click the DPI Control Button to Switch Cursor Speed

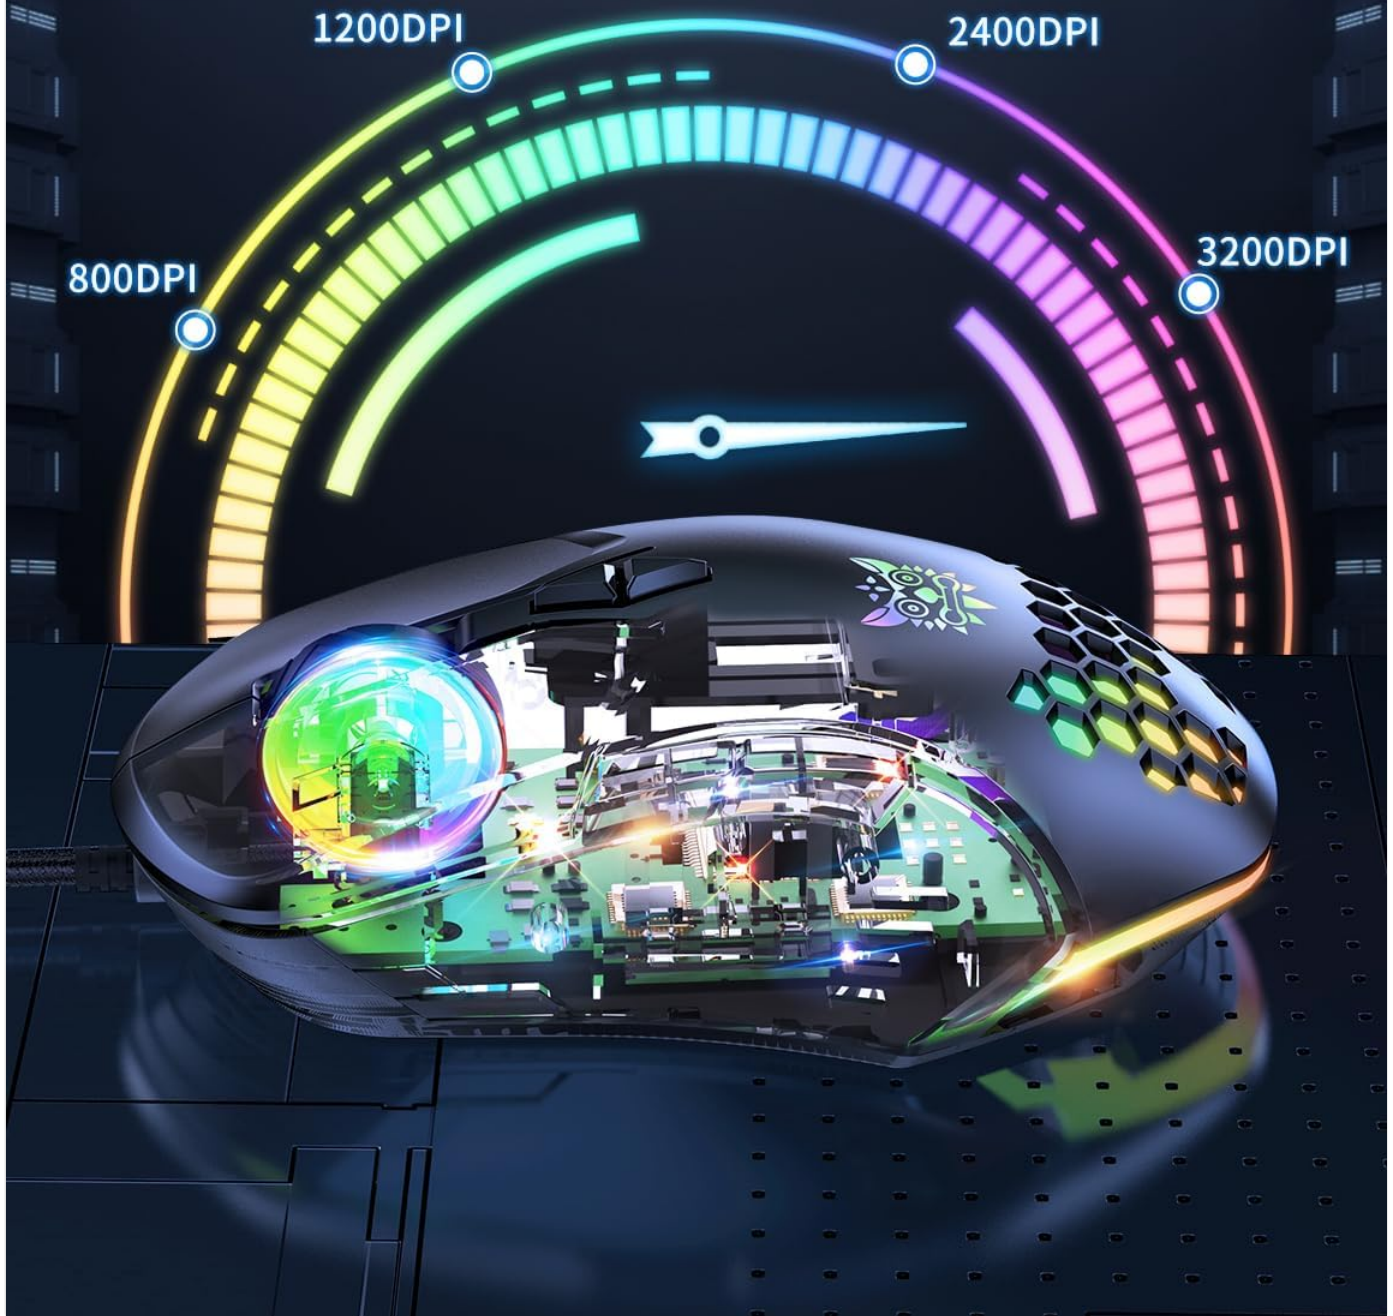


Image: Visual representation of DPI levels.

- Press the **DPI+ Button** to increase the DPI level.
- Press the **DPI- Button** to decrease the DPI level.
- The available DPI settings are: **800 DPI, 1200 DPI, 2400 DPI, and 3200 DPI**
- Each DPI change is typically indicated by a change in the mouse's RGB lighting color.

4.2 RGB Backlighting

The ONIKUMA GAMING CW902 mouse features dynamic RGB backlighting, providing a visually appealing aesthetic.



Image: ONIKUMA GAMING CW902 mouse with active RGB lighting.

- The RGB lighting automatically cycles through various colors and effects.

- There are no dedicated buttons to manually change RGB modes or turn off the lighting on this model.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your mouse.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the mouse. For stubborn dirt, a slightly damp cloth can be used, ensuring no liquid enters the mouse.
- **Sensor Cleaning:** Occasionally, use a cotton swab lightly dampened with rubbing alcohol to gently clean the optical sensor on the underside of the mouse.
- **Cable Care:** Avoid sharp bends or excessive pulling on the USB cable to prevent damage.
- **Storage:** Store the mouse in a clean, dry environment when not in use.

6. TROUBLESHOOTING

If you encounter issues with your ONIKUMA GAMING CW902 mouse, refer to the following common solutions:

- **Mouse Not Responding:**
 - Ensure the USB cable is securely plugged into a working USB port on your computer.
 - Try plugging the mouse into a different USB port.
 - Restart your computer.
- **Inaccurate Tracking or Cursor Jumps:**
 - Clean the optical sensor on the underside of the mouse.
 - Ensure you are using the mouse on a clean, non-reflective, and uniform surface (e.g., a mouse pad).
 - Adjust the DPI settings using the DPI+ and DPI- buttons.
- **Buttons Not Working:**
 - Check for any physical obstructions around the buttons.
 - Test the mouse on another computer to determine if the issue is with the mouse or the computer's software/drivers.

7. SPECIFICATIONS

Feature	Specification
Model Number	CW902
Connectivity	Wired USB
DPI Levels	800 / 1200 / 2400 / 3200
Number of Buttons	7 (Left, Right, Roller, DPI+, DPI-, Forward, Backward)
Lighting	RGB Backlit
Ergonomics	Ergonomic Design

Feature	Specification
Product Dimensions	2.95 x 1.69 x 5.12 inches
Item Weight	4.6 ounces (0.13 Kilograms)
Compatibility	Windows, macOS, Linux, Chrome OS

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official ONIKUMA GAMING website. If you require further assistance, contact ONIKUMA GAMING customer service directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question