

[Manuals.plus](#) /

› [MEDION](#) /

› MEDION Air Fryer P20 XXL Instruction Manual

MEDION MD11760

MEDION Air Fryer P20 XXL Instruction Manual

Model: MD11760

1. INTRODUCTION

Thank you for choosing the MEDION Air Fryer P20 XXL. This hot air fryer is designed for fat-free frying, offering a healthier alternative to traditional deep frying. With its powerful 2600 watts and generous 8.7-liter capacity across two compartments, it allows for versatile cooking. The non-stick coating ensures easy cleaning, and the integrated viewing window provides convenient monitoring of your food without interrupting the cooking process.

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.



Figure 1: MEDION Air Fryer P20 XXL with a basket of fries.

2. SAFETY INFORMATION

Always adhere to basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- Ensure adequate ventilation around the appliance during use.

3. PRODUCT OVERVIEW AND COMPONENTS

The MEDION Air Fryer P20 XXL features a dual-compartment design, allowing you to cook two different dishes simultaneously or a larger quantity of a single dish.

- **Dual Cooking Zones:** Two independently controlled baskets for versatile cooking.
- **Digital Touch Control Panel:** Intuitive interface for setting time, temperature, and selecting programs.
- **Viewing Window with Interior Lighting:** Monitor cooking progress without opening the baskets.
- **Removable Non-Stick Baskets:** Easy to clean and handle.
- **Air Circulation System:** Ensures even cooking and crispy results.

2 zones de cuisson commandées séparément

Permettent une préparation individuelle



Figure 2: Two independently controlled cooking zones.

Circulation de la chaleur à 360°

Le flux d'air chaud rotatif garantit des résultats croustillants



Figure 3: 360° heat circulation for even cooking.

4. SETUP

4.1 Unpacking

1. Carefully remove the air fryer and all packaging materials from the box.
2. Remove any stickers or labels from the appliance.
3. Check that all components are present: Main unit, 2 frying baskets, 2 cooking racks, and instruction manual.

4.2 Initial Cleaning

1. Before first use, wash the frying baskets and cooking racks with hot water, a mild dish soap, and a non-abrasive sponge.
2. Rinse thoroughly and dry all parts completely.
3. Wipe the inside and outside of the main unit with a damp cloth. Do not immerse the main unit in water.

4.3 Placement

1. Place the air fryer on a stable, heat-resistant, and level surface.
2. Ensure there is at least 10 cm (4 inches) of free space on the back, sides, and above the appliance to allow for proper air circulation.
3. Do not place the appliance against a wall or other appliances.

4.4 First Use (Burn-in)

It is recommended to run the air fryer empty for about 10-15 minutes during its first use to eliminate any manufacturing odors. A slight odor or smoke may be present, which is normal and will dissipate quickly.

1. Insert the clean baskets and racks into the main unit.
2. Plug the power cord into a grounded wall outlet.
3. Set the temperature to 180°C (350°F) and the timer to 15 minutes.
4. Allow the cycle to complete, then unplug the unit and let it cool down completely.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. Place the food into the frying baskets. Do not overfill. For best results, use the cooking racks provided.
2. Slide the baskets back into the air fryer until they click into place.
3. Plug the appliance into a grounded power outlet. The control panel will illuminate.
4. Press the Power button to turn on the unit.
5. Select a pre-set program or manually adjust the temperature and time using the '+' and '-' buttons.
6. Press the Start/Pause button to begin cooking.
7. During cooking, you can use the viewing window and interior light to check food progress.
8. Some recipes may require shaking or flipping food halfway through cooking. Carefully pull out the basket, shake/flip, and reinsert. The fryer will resume cooking.
9. Once the timer reaches zero, the fryer will beep and automatically shut off.
10. Carefully remove the baskets and transfer the cooked food to a serving dish.

Fenêtre de contrôle pratique et éclairage intérieur

Pour contrôler facilement la progression de la cuisson



Figure 4: Practical viewing window for monitoring cooking.

Peu ou pas d'huile nécessaire

Enfin un plaisir sain



Figure 5: Enjoy healthy cooking with little to no oil.

Insert supplémentaire pour la grille de cuisson

Améliore la circulation de l'air



Figure 6: Additional cooking rack for enhanced air circulation.

5.2 Dual Cook Function

The Dual Cook function allows you to cook a larger quantity of the same dish by synchronizing both baskets to the same temperature and time settings.

1. Load both baskets with the same food.
2. Set the desired temperature and time for one basket.
3. Press the 'Dual Cook' button on the control panel. The settings will be mirrored to the second basket.
4. Press Start/Pause to begin cooking.



Figure 7: Dual Cook function for cooking the same dish in both compartments.

5.3 Sync Finish Function

The Sync Finish function is ideal for cooking two different dishes that require different temperatures and times, ensuring they both finish cooking at the same moment.

1. Load each basket with different foods.
2. Set the desired temperature and time for each basket individually.
3. Press the 'Sync Finish' button. The fryer will automatically adjust the start times for each basket so they complete cooking simultaneously.
4. Press Start/Pause to begin cooking.



Figure 8: Sync Finish function for simultaneous completion of different dishes.

5.4 Automatic Programs

The air fryer comes with 9 pre-set automatic programs for common dishes, simplifying the cooking process.

- Fries
- Chicken
- Steak
- Fish
- Shrimp
- Cake
- Vegetables
- Roast
- Pizza

To use an automatic program, simply select the corresponding icon on the control panel. The fryer will automatically set

the optimal temperature and time.

9 programmes automatiques

Un programme adapté à chaque saveur



Figure 9: 9 automatic programs for various dishes.

5.5 MEDION LIFE+ App (100 Recipes)

Enhance your cooking experience with the MEDION LIFE+ app, offering over 100 recipes tailored for your air fryer. The app is available for download on both the App Store and Google Play.

100 recettes pour tous les goûts

Végétalien, végétarien, poisson ou viande,
il y en a pour tous les goûts.



Figure 10: MEDION LIFE+ app with 100+ recipes.

6. MAINTENANCE AND CLEANING

Regular cleaning of your air fryer will ensure optimal performance and extend its lifespan.

6.1 Cleaning After Each Use

1. Unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
2. Remove the frying baskets and cooking racks.
3. Wash the baskets and racks with hot water, a mild dish soap, and a non-abrasive sponge. The non-stick coating makes cleaning easy. Avoid using metal utensils or abrasive cleaning materials.
4. For stubborn food residue, soak the baskets in warm, soapy water for about 10-15 minutes.
5. Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
6. Clean the interior of the appliance with a damp cloth and mild soap if necessary. Ensure no water enters the electrical components.

7. Ensure all parts are thoroughly dry before reassembling or storing the appliance.

6.2 Storage

Store the cleaned and dried air fryer in a cool, dry place, away from direct sunlight and out of reach of children.

7. TROUBLESHOOTING

If you encounter any issues with your MEDION Air Fryer P20 XXL, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; Power outlet malfunction; Appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly.	Baskets are overcrowded; Food not shaken/flipped; Incorrect temperature/time.	Do not overcrowd baskets; cook in smaller batches if necessary. Shake or flip food halfway through cooking. Adjust temperature and time as per recipe or food type.
White smoke coming from the appliance.	Grease residue from previous use; High-fat food being cooked.	Clean the baskets and interior thoroughly after each use. For high-fat foods, drain excess fat from the basket during cooking.
Food is not crispy.	Too much moisture in food; Not enough oil (for some foods); Overcrowding.	Pat food dry before air frying. Lightly coat some foods with oil for crispiness. Do not overcrowd baskets.
Appliance smells during first use.	Manufacturing residue.	This is normal. Run the air fryer empty for 10-15 minutes as described in the 'First Use' section. Ensure good ventilation.

8. SPECIFICATIONS

Feature	Specification
Brand	MEDION
Model Number	MD11760
Color	White
Dimensions (L x W x H)	41 x 40 x 33 cm
Weight	8 Kilograms
Capacity	8.7 Liters (total)
Power	2600 Watts
Voltage	240 Volts

Feature	Specification
Material	Metal
Features	Automatic shut-off, Hot air circulation, Temperature selection, LED lighting, Touch screen

Capacité utile totale de 8,7 litres

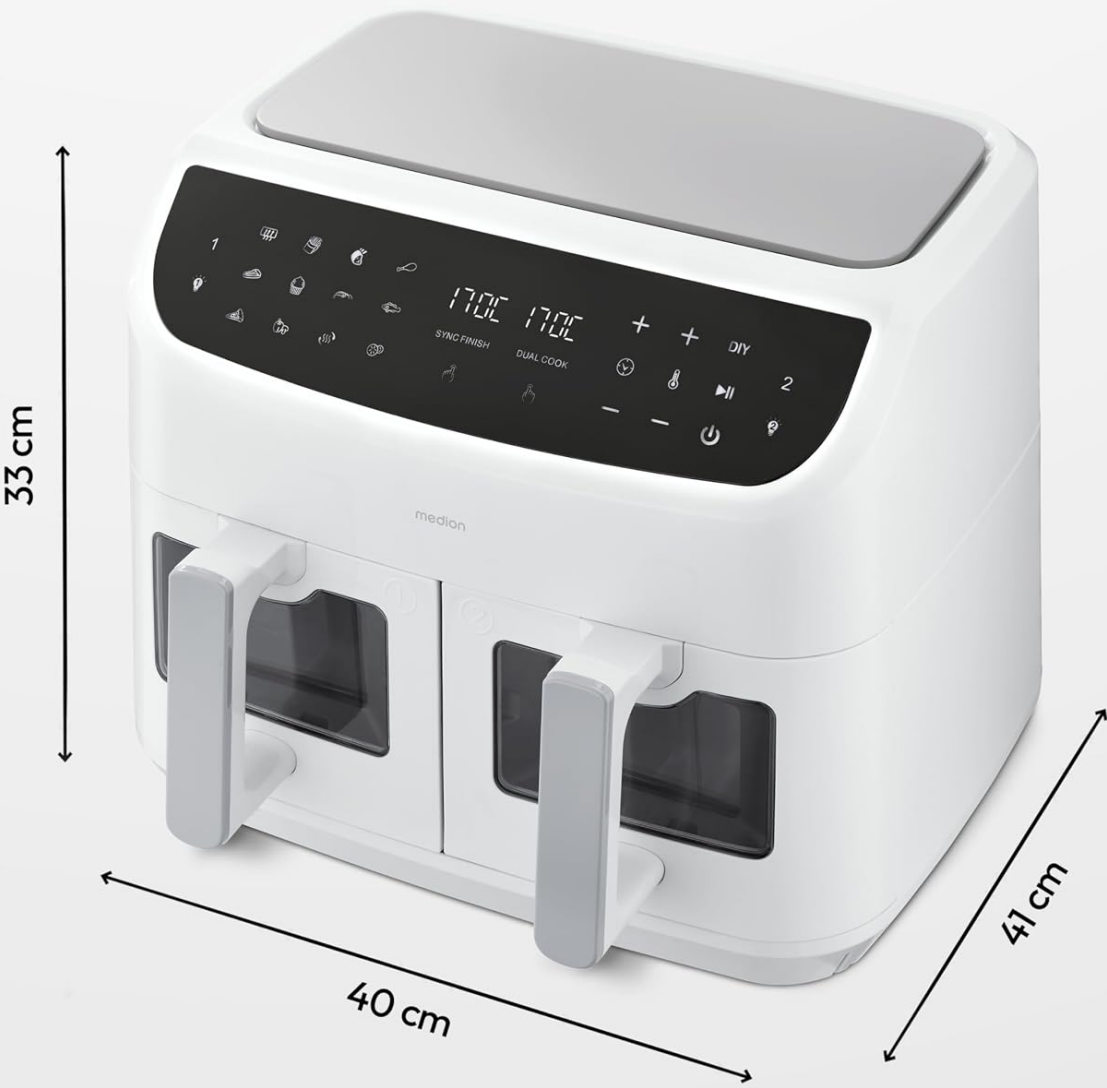


Figure 11: Product dimensions.

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official MEDION website. MEDION is committed to providing excellent customer service.

If you require technical assistance, have questions about your product, or need to claim warranty, please contact MEDION customer support. You can find contact details on the official MEDION website or through the retailer where you purchased the product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CL4ZM5>

More documents and user manuals: <https://manuals.plus/>