

- Manuals.plus /
- › SICOTAS /
- › SICOTAS Shoe Cabinet SCEWA10001OA Instruction Manual

SICOTAS SCEWA10001OA

SICOTAS Shoe Cabinet SCEWA10001OA Instruction Manual

Model: SCEWA10001OA | Brand: SICOTAS

1. PRODUCT OVERVIEW

The SICOTAS Shoe Cabinet (Model SCEWA10001OA) is a versatile storage solution designed to organize up to 24 pairs of shoes. Featuring classic rattan doors and a reclaimed caramel oak finish, it blends rustic charm with modern minimalism. This 41-inch tall cabinet includes six-tier adjustable shelves, providing flexible storage for various shoe types and other items. Its durable construction ensures long-lasting use in entryways, hallways, or closets.



Figure 1: SICOTAS Shoe Cabinet (Model SCEWA10001OA)

## 2. SAFETY INFORMATION

- **Anti-Tip Kit:** For safety, it is crucial to attach the shoe cabinet to the wall using the provided anti-tip kits. This prevents accidental tipping and potential injury.
- **Weight Limits:** Do not exceed the maximum weight capacity of 66 lbs for the top surface and 55 lbs for the interior shelves. Overloading can compromise stability and structural integrity.
- **Assembly:** Ensure all parts are correctly assembled and screws are tightened as per instructions to maintain structural stability.

## 3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. The package typically includes:

- All necessary wooden panels and rattan doors.

- Hardware kit (screws, dowels, cam locks, hinges, handles).
- Adjustable shelf pins.
- Anti-tip kit.
- Assembly instructions.
- Required assembly tools (usually an Allen wrench and screwdriver).

## 4. SETUP AND ASSEMBLY

---

Assembly of the SICOTAS Shoe Cabinet is designed to be straightforward. Follow the included step-by-step instructions carefully. It is recommended to assemble the unit on a soft, clean surface to prevent scratches.

### Assembly Tips:

- **Secure Back Fasteners:** Remember to attach the small fasteners to the back panels and tighten the screws at a 45-degree angle. This enhances the cabinet's stability and sturdiness.
- **Door Alignment:** If the doors appear uneven or have gaps after assembly, refer to the troubleshooting section for hinge adjustment instructions.

### Assembly Video Guide:

Your browser does not support the video tag.

Video 1: General Assembly Overview for SICOTAS Rattan Shoe Cabinet. This video provides a visual guide to the assembly process.

## 5. OPERATING INSTRUCTIONS

---

### Adjustable Shelves:

The shoe cabinet features six-tier adjustable shelves, allowing you to customize the storage space according to your needs. To adjust a shelf:

1. Empty the shelf of all contents.
2. Remove the shelf pins from their current holes.
3. Insert the shelf pins into the desired new holes at the preferred height. Ensure all four pins are securely in place and level.
4. Carefully place the shelf onto the pins.

# Easy Organization with Abundant Storage

4 Adjustable Shelves for Any Height Shoes



Figure 2: Interior view demonstrating adjustable shelves for varied shoe heights.



SICOTAS

Ample Storage with  
5 -Tier Shelf



Others

Only 3 - tier Shelf

Figure 3: Visual comparison highlighting the ample and adjustable storage capacity.

## 6. MAINTENANCE

To ensure the longevity and appearance of your SICOTAS Shoe Cabinet, follow these maintenance guidelines:

- **Cleaning:** The wood grain surface is designed to be easily cleaned. Wipe with a soft, damp cloth to remove dirt and dust. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Protection:** The surface is resistant to scratches, but it is advisable to use coasters or protective pads under heavy or sharp objects placed on the top surface.
- **Environmental Conditions:** Avoid prolonged exposure to direct sunlight or extreme humidity, which can affect the wood material.

## 7. TROUBLESHOOTING

**Uneven Doors or Gaps:**

If the cabinet doors appear uneven or have noticeable gaps after assembly, this can typically be resolved by adjusting the hinge screws. Most hinges allow for minor adjustments to align the doors properly.

Door Adjustment Video Guide:

Your browser does not support the video tag.

Video 2: Guide on how to adjust the gap between doors. This video demonstrates the process of adjusting hinge screws for proper door alignment.

8. SPECIFICATIONS

|                             |                                                     |
|-----------------------------|-----------------------------------------------------|
| Brand                       | SICOTAS                                             |
| Model Number                | SCEWA10001OA                                        |
| Color                       | Reclaimed Caramel Oak                               |
| Product Dimensions          | 14.8"D x 32.4"W x 41"H                              |
| Item Weight                 | 67.3 pounds (30.6 Kilograms)                        |
| Material                    | Engineered Wood, Rattan                             |
| Number of Shelves           | 6 (Adjustable)                                      |
| Top Surface Weight Limit    | 66 Pounds                                           |
| Interior Shelf Weight Limit | 55 Pounds                                           |
| Mounting Type               | Floor Mount (with anti-tip kit for wall attachment) |
| Assembly Required           | Yes                                                 |
| UPC                         | 635508492899                                        |



Figure 4: Product Dimensions and Weight Capacity.



Figure 5: Construction details including thickened MDF and integrated legs.

## 9. WARRANTY AND SUPPORT

SICOTAS provides a dedicated customer service team to assist you with any issues or questions you may encounter regarding your shoe cabinet. Please refer to the contact information provided in your product packaging or on the official SICOTAS website for support.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**<https://manuals.plus/asin/B0CL53XT9F>**

More documents and user manuals: **<https://manuals.plus/>**