

[Manuals.plus](#) /

› [MEDION](#) /

› MEDION 3-in-1 Microwave Oven with Grill and Hot Air Function User Manual

## MEDION MD 11493

# MEDION 3-in-1 Microwave Oven User Manual

Model: MD 11493

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, burns, or injury to persons.

- Read all instructions before using the appliance.
- Do not operate the oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not store this appliance outdoors. Do not use this product near water.
- Maintain the inside of the oven clean. Food particles or spilled liquids adhering to oven walls or floor will attract microwave arcing and cause damage.
- Always ensure the turntable and roller ring are correctly positioned before operation.

## 2. PRODUCT OVERVIEW

---

The MEDION MD 11493 is a versatile 3-in-1 appliance combining microwave, grill, and hot air functions, designed for efficient and convenient cooking.



Front view of the MEDION MD 11493 microwave oven, showcasing its sleek black design and digital display.

# Das 3in1- Multitalent!


Mikrowelle mit Grill und Heißluft für all Ihre Delikatessen



Illustration highlighting the 3-in-1 functionality: microwave, grill, and hot air for diverse cooking needs.

# Mikrowelle, Grill und Heißluft in Einem

Mehr Funktionen, mehr Geschmack

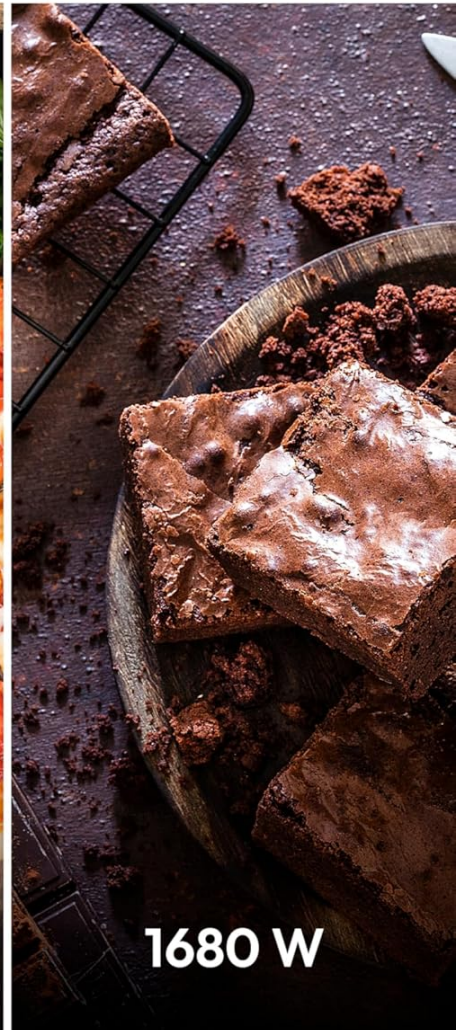

Visual representation of the power outputs: 900W for microwave, 1000W for grill, and 1680W for hot air, demonstrating the appliance's capabilities.

# Extra großes Fassungsvermögen

23 L Garinnenraum für größere  
Gesellschaften, Familien oder Freunde



Diagram showing the external dimensions of the microwave oven (47 cm width, 28 cm height, 42 cm depth) and its 23-liter capacity.

## Key Features:

- **Microwave Power:** Approximately 900 W for quick heating and cooking.
- **Grill Power:** Approximately 1000 W for browning and crisping.
- **Hot Air Power:** Approximately 1680 W for convection cooking.
- **Capacity:** 23-liter stainless steel interior.
- **Programs:** 10 automatic cooking programs for various dishes.
- **Defrost Function:** Efficient and gentle defrosting.
- **Display:** Digital display with digital timer.
- **Safety:** Child lock feature.
- **Accessories:** Includes glass turntable and stainless steel grill rack.

## 3. SETUP AND INSTALLATION

1. **Unpacking:** Carefully remove the microwave oven and all packing materials from the carton. Check for any damage. Do not remove the light brown mica sheet that is attached to the oven cavity to protect the magnetron.
2. **Placement:** Place the oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in the oven. Ensure there is adequate ventilation space: at least 20 cm of space above the oven, 10 cm at the back, and 5 cm on each side. Do not block air vents.
3. **Electrical Connection:** Plug the power cord into a standard 230V ~ 50Hz grounded electrical outlet. Ensure the outlet is easily accessible.
4. **Turntable Installation:**
  - Place the roller ring in the center of the oven cavity floor.
  - Place the glass turntable on top of the roller ring, ensuring it sits securely in the center hub.
5. **Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth.

## 4. OPERATING INSTRUCTIONS

---

This appliance offers multiple cooking modes for various culinary needs.

### 4.1. Setting the Clock

Upon plugging in, the display will show "0:00".

1. Press the **Clock/Timer** button once.
2. Turn the **Time/Weight** dial to set the hour.
3. Press the **Clock/Timer** button again.
4. Turn the **Time/Weight** dial to set the minutes.
5. Press the **Clock/Timer** button to confirm.

### 4.2. Microwave Cooking



Close-up of the control panel, highlighting the five microwave power levels for precise cooking.

The oven offers 5 microwave power levels.

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door.
3. Press the **Microwave** button repeatedly to select the desired power level (P100, P80, P50, P30, P10).
4. Turn the **Time/Weight** dial to set the cooking time.
5. Press the **Start/+30Sec.** button to begin cooking.

### 4.3. Grill Cooking

Use the grill function for browning and crisping food.

1. Place food on the stainless steel grill rack.
2. Press the **Grill** button.
3. Turn the **Time/Weight** dial to set the grilling time.
4. Press the **Start/+30Sec.** button to begin.

#### 4.4. Hot Air (Convection) Cooking

The hot air function allows for baking and roasting with circulating hot air.

1. Press the **Hot Air** button repeatedly to select the desired temperature (e.g., 140°C - 230°C).
2. Turn the **Time/Weight** dial to set the cooking time.
3. Press the **Start/+30Sec.** button to begin. The oven will preheat if necessary.

#### 4.5. Combination Cooking

Combine microwave with grill or hot air for faster and more comprehensive cooking.

- **Microwave + Grill:** Press the **Combi.** button once for C-1 (Microwave 55% + Grill 45%).
- **Microwave + Hot Air:** Press the **Combi.** button twice for C-2 (Microwave 30% + Hot Air 70%).
- Set time using the **Time/Weight** dial and press **Start/+30Sec.**

#### 4.6. Automatic Programs

## 10 Automatikprogramme

Für jede Speise das richtige Programm



Various dishes illustrating the convenience of the 10 automatic cooking programs.

The oven features 10 pre-set automatic programs for common dishes.

1. Press the **Auto Menu** button repeatedly to select the desired program (e.g., Popcorn, Potato, Pizza, Meat, Vegetable, Beverage, Pasta, Cake, Chicken, Reheat).
2. Turn the **Time/Weight** dial to select the weight or quantity.
3. Press the **Start/+30Sec.** button to begin.

#### 4.7. Defrost Function

## Auftauen leicht gemacht

Schnelle und schonende Erwärmung



Image of frozen vegetables, demonstrating the gentle and efficient defrosting capability of the microwave.

The defrost function allows for quick and gentle thawing of food by weight.

1. Press the **Defrost** button.
2. Turn the **Time/Weight** dial to select the weight of the food.
3. Press the **Start/+30Sec.** button to begin.

#### 4.8. Child Lock

To prevent unsupervised operation, especially by children:

- **To activate:** Press and hold the **Stop/Cancel** button for 3 seconds. A lock indicator will appear on the display.
- **To deactivate:** Press and hold the **Stop/Cancel** button for 3 seconds again. The lock indicator will disappear.

## 5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Before Cleaning:** Always unplug the oven from the power outlet and allow it to cool down.
- **Oven Interior:** Wipe the interior cavity, door, and door seal with a damp cloth after each use. For stubborn stains, use a mild detergent. The stainless steel interior is easy to clean.
- **Glass Turntable and Roller Ring:** These can be washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Exterior:** Clean the exterior surface with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- **Grill Rack:** Wash the stainless steel grill rack in warm soapy water and dry thoroughly.
- **Odor Removal:** To remove odors from the oven, combine a cup of water with the juice and peel of one lemon in a microwave-safe bowl. Microwave on high for 5 minutes. Wipe the interior with a soft cloth.

## 6. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following table for common problems and solutions.

| Problem                             | Possible Cause                                                                              | Solution                                                                                                  |
|-------------------------------------|---------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| Oven does not start.                | Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped. | Ensure plug is securely in outlet; Close door firmly; Check household fuse/circuit breaker.               |
| Food is not cooking or heating.     | Door not closed properly; Cooking time not set; Power level too low.                        | Close door firmly; Set appropriate cooking time; Increase power level.                                    |
| Sparking inside the oven.           | Metal or foil in the oven; Food particles on cavity walls.                                  | Remove any metal objects; Clean the oven interior thoroughly.                                             |
| Turntable is noisy or not rotating. | Roller ring or turntable not positioned correctly; Debris under turntable.                  | Re-position roller ring and turntable; Clean under the turntable.                                         |
| Display shows an error code.        | Internal malfunction.                                                                       | Unplug the oven for a few minutes, then plug it back in. If the error persists, contact customer support. |

## 7. SPECIFICATIONS

| Feature         | Detail           |
|-----------------|------------------|
| Brand           | MEDION           |
| Model           | MD 11493         |
| Capacity        | 23 Liters        |
| Microwave Power | 900 W (approx.)  |
| Grill Power     | 1000 W (approx.) |

| Feature                        | Detail                                      |
|--------------------------------|---------------------------------------------|
| Hot Air Power                  | 1680 W (approx.)                            |
| Installation Type              | Freestanding                                |
| Interior Material              | Stainless Steel                             |
| Color                          | Black                                       |
| Voltage                        | 230 Volts ~ 50 Hz                           |
| Product Dimensions (D x W x H) | 42 cm x 47 cm x 28 cm                       |
| Weight                         | 14.6 Kilograms                              |
| Included Components            | Glass turntable, Stainless steel grill rack |

## 8. WARRANTY AND CUSTOMER SUPPORT

MEDION is committed to providing excellent customer service. For any questions, technical assistance, or warranty claims, please contact our support team.

Our competent customer service team is available 365 days a year to assist you. If an issue cannot be resolved via phone or email, our repair service will take over quickly and efficiently.

Please refer to your purchase documentation for specific warranty terms and conditions applicable to your region. For more information, visit the official MEDION website or contact your local MEDION service center.

© 2025 MEDION. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0CL55K6K8>

More documents and user manuals: <https://manuals.plus/>