



Manuals.plus /

› SEREONIC /

› SEREONIC PRO BT-200PRO Portable Wireless TV Speakers User Manual

SEREONIC BT-200PRO

SEREONIC PRO BT-200PRO Portable Wireless TV Speakers User Manual

INTRODUCTION

The SEREONIC PRO BT-200PRO Portable Wireless TV Speakers are designed to enhance your television audio experience by bringing clear sound closer to you without increasing the main TV volume. This system utilizes advanced RF technology for near-zero audio latency, ensuring synchronized sound. Its portable design allows for use in various locations, and it includes options for private listening.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Transmitting Base
- Wireless Speaker (Receiver)
- Optical Audio Cable
- 3.5mm to RCA Audio Cable
- RCA Splitter
- Two Power Adapters (5V 2A)
- Wired Earbuds
- Installation Guide
- User Guide (This document)



Image: All components included with the SEREONIC PRO BT-200PRO system.

SETUP GUIDE

1. Connecting the Transmitting Base to Your TV

Audio Connection Options:

- **Optical Digital Audio (Recommended for Smart TVs):** Connect the included Optical Cable from your TV's "Optical Out" port to the "Optical In" port on the Transmitting Base. Ensure your TV's audio output setting is configured to PCM for compatibility with built-in TV applications (e.g., Netflix, Hulu).
- **3.5mm Audio Jack:** Connect the 3.5mm end of the 3.5mm to RCA cable to your TV's headphone or audio out jack. Connect the RCA ends to the corresponding RCA input on the Transmitting Base.
- **RCA Audio Output:** If your TV has dedicated RCA audio output jacks (typically red and white), connect the RCA ends of the 3.5mm to RCA cable to your TV's RCA output and the 3.5mm end to the Transmitting Base. If your TV's RCA outputs are already in use, utilize the provided RCA splitter to share the connection.

2. Powering the Transmitting Base:

Connect one of the provided power adapters to the Transmitting Base and plug it into a standard wall outlet. The Power indicator on the base will illuminate, confirming it is receiving power.

OPERATING INSTRUCTIONS

1. Charging the Wireless Speaker

Place the Wireless Speaker onto the Transmitting Base. The "LOW BATT/CHARGING" indicator on the speaker will light up, indicating it is charging. A full charge takes approximately 3 hours and provides up to 8 hours of continuous use at mid-volume.

Alternatively, you can charge the speaker directly using the second power adapter by connecting it to the USB-C port on the speaker and plugging it into a wall outlet. **Important:** Use only the provided 5V 2A power adapters to prevent potential damage to the device.



- EASY CHARGING BASE
- SIMPLY PLACE AND CHARGE
- EXTRA POWER ADAPTER INCLUDED
- KEEP YOUR SPEAKER FULLY CHARGED

 NEVER RUN OUT OF CHARGE

Image: The wireless speaker being placed on its charging base.

2. Powering On/Off

To power on the Wireless Speaker, rotate the volume knob clockwise until you hear a click. To power off, rotate it counter-clockwise until it clicks and the indicator lights turn off.

3. Adjusting Volume

Rotate the large central knob on the Wireless Speaker to adjust the audio volume to your preferred listening level.

4. Private Listening with Earbuds

For private listening, plug the included wired earbuds into the 3.5mm headphone jack located on the Wireless Speaker. The speaker's internal sound will automatically mute, and audio will be directed to the earbuds.



Image: Private listening with earbuds connected to the wireless speaker.

5. Portability

The Wireless Speaker can be carried up to 100 feet from the Transmitting Base, allowing you to enjoy TV audio in various rooms or outdoors within range without interruption.



TAKE ANYWHERE
IN THE HOUSE



8 HOUR
PLAYBACK

Image: The wireless speaker used in different locations, highlighting its portability.

MAINTENANCE

Proper care and maintenance will ensure the longevity of your SEREONIC PRO Wireless TV Speakers.

- **Cleaning:** Wipe the speaker and base with a soft, dry cloth. Avoid using liquid cleaners, abrasive materials, or solvents, as these can damage the finish or internal components.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong the internal battery's lifespan, avoid fully discharging the speaker frequently. It is recommended to charge it regularly, even if not completely depleted.

TROUBLESHOOTING

If you encounter any issues with your SEREONIC PRO Wireless TV Speakers, please refer to the following common problems and solutions:

Problem	Solution
No sound from the Wireless Speaker.	<ul style="list-style-type: none"> • Ensure the Transmitting Base is powered on and connected correctly to the TV's audio output. • Verify the Wireless Speaker is powered on and charged. • Check the volume level on both the Wireless Speaker and your TV. • If using Optical Digital Audio, confirm your TV's audio output is set to PCM. • Ensure earbuds are not plugged into the speaker if you intend to use the speaker's sound.
Audio delay (lip sync issues).	The system uses proprietary RF technology with near-zero latency (12 milliseconds). If you experience delay, ensure the Transmitting Base is connected directly to the TV's audio output and not through other devices that might introduce additional latency.
Speaker not charging or battery dying quickly.	<ul style="list-style-type: none"> • Ensure the speaker is correctly seated on the charging base or the USB-C cable is securely connected. • Use only the provided 5V 2A power adapters. Using higher voltage chargers can damage the battery or device. • Battery life is approximately 8 hours; frequent charging is normal for extended use.
Audio cuts out intermittently.	<ul style="list-style-type: none"> • Ensure the Wireless Speaker is within the 100ft range of the Transmitting Base. • Minimize obstructions between the speaker and base. • Check for potential interference from other wireless devices operating on similar frequencies.

SPECIFICATIONS

Detailed technical specifications for the SEREONIC PRO BT-200PRO Wireless TV Speakers:

Feature	Detail
Model Name	SEREONIC PRO Soundbox (BT-200PRO)
Speaker Type	Soundbar, Portable
Connectivity Technology	RF Wireless
Maximum Range	100 Feet
Audio Latency	12 Milliseconds (Near Zero)
Power Source	Battery Powered
Battery Capacity	2600 Milliamp Hours
Charging Time	3 Hours
Playback Time	Up to 8 hours (continuous use)
Speaker Maximum Output Power	10 Watts
Compatible Devices	All smart TVs with RCA, 3.5mm, Optical Audio, or Coaxial audio Output
Product Dimensions	3"D x 9"W x 7"H
Item Weight	0.67 ounces (19 Grams)

WARRANTY AND SUPPORT

Warranty Information

This SEREONIC PRO BT-200PRO Portable Wireless TV Speaker comes with a Limited Warranty. Please refer to the specific warranty documentation included in your package for full terms and conditions regarding coverage and duration.

Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact SEREONIC customer support. Contact information can typically be found on the manufacturer's website or in the included documentation.

Manufacturer: Serene Group, Inc.

IMPORTANT NOTES

No official product videos were provided in the input data. Therefore, no video content could be embedded in this manual.