

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Luqeeq](#) /

› [Luqeeq Film & Slide Scanner Luqeeegg0hf2qkdv8 User Manual](#)

Luqeeq Luqeeegg0hf2qkdv8

Luqeeq Film & Slide Scanner User Manual

Model: Luqeeegg0hf2qkdv8



1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Luqeeq Film & Slide Scanner. Please read this manual thoroughly before using the device to ensure proper setup, usage, and maintenance. Keep this manual for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- 1 x Film Scanner
- 1 x User Manual (this document)
- 1 x Power Cable (Mini USB)
- 1 x Cleaning Wipe
- 5 x Film Slots of different types (for 135 film, 126KPK film, 110 film, Super 8 mm film, and negatives)



Image: Luqeeq Film & Slide Scanner and its accessories, including the main unit, power cable, cleaning wipe, and multiple film holders.

3. PRODUCT OVERVIEW

The Luqeeq Film & Slide Scanner is designed to convert various film types into 12MP digital JPG photos. It features a 2MP CMOS sensor and a 2.0-inch screen for previewing scans.



Image: Front view of the Luqeeq Film & Slide Scanner, showing the display screen and control buttons.

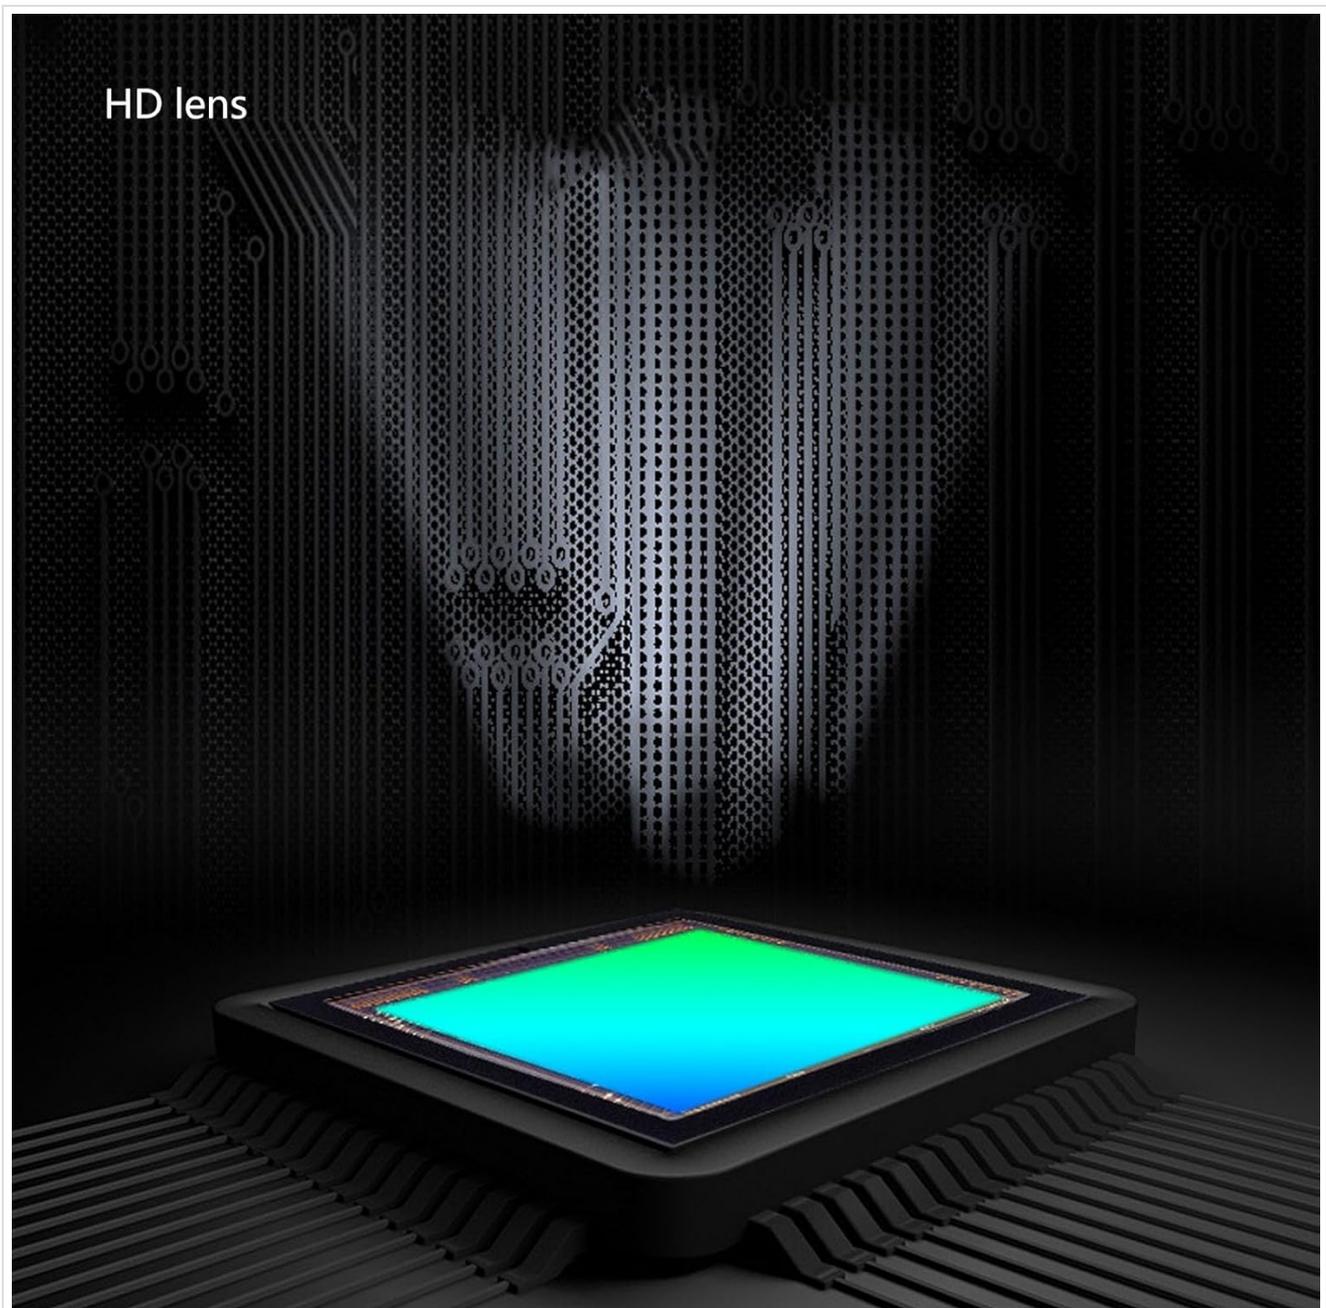


Image: An internal view highlighting the HD lens and CMOS sensor, which are crucial for high-fidelity image capture.

4. SETUP

1. **Power Connection:** Connect the provided power cable to the Mini USB port on the scanner and to a suitable USB power source (e.g., computer USB port, USB wall adapter).
2. **Insert Memory Card:** Insert a compatible storage card (supports up to 128GB, not included) into the designated slot on the scanner. Ensure it is inserted correctly.
3. **Power On:** Press and hold the power button for approximately 3 seconds to turn on the device. The screen will illuminate.



Image: The film scanner positioned on a desk, ready for operation, demonstrating its compact design.

5. OPERATING INSTRUCTIONS

Follow these steps to scan your films and slides:

1. **Select Film Type:** After powering on, press the Menu key to navigate through the options. Select the appropriate film size/type that matches your film (e.g., 135 film, 126KPK film, 110 film, Super 8 mm film, black and white negative, or slideshow).
2. **Insert Film Holder:** Choose the correct film slot/holder for your film type from the included accessories. Carefully insert your film or slide into the holder.
3. **Load Film Holder:** Insert the loaded film holder into the scanner's film slot.
4. **Preview Image:** The scanner's screen will display a preview of your film/slide.
5. **Adjust Settings (Optional):** Use the scanner's controls to adjust image effects such as Negative, Color, or Black & White, and optimize exposure if available.



CLEANING BRUSH



Optimize photos with adjustable exposure



Image: Visual representation of how adjustable exposure can optimize photo brightness and clarity during the scanning process.

6. **Scan and Save:** Once satisfied with the preview and settings, press the 'OK' or 'Scan' button to capture the image. The scanned photo will be saved to the inserted storage card.
7. **Transfer Photos:** You can transfer your scanned photos by:
 - Removing the storage card and using a card reader on your computer.
 - Connecting the scanner directly to your computer via the USB cable. The scanner will appear as a mass storage device, allowing you to access the saved JPG files.

6. MAINTENANCE

To ensure the longevity and optimal performance of your scanner, follow these maintenance guidelines:

- **Cleaning the Lens and Screen:** Use the provided cleaning wipe or a soft, lint-free cloth to gently clean the scanner's lens and screen. Do not use abrasive cleaners or solvents.
- **Cleaning Film Holders:** Ensure film holders are free of dust and debris before inserting film. Dust can appear on scanned images.

- **Storage:** Store the scanner in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

7. TROUBLESHOOTING

If you encounter issues with your scanner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Scanner does not power on.	No power, loose cable, or faulty power source.	Ensure power cable is securely connected. Try a different USB port or power adapter. Hold power button for 3 seconds.
Scanned images are blurry or low quality.	Dirty lens/film, incorrect film type selected, or poor original film quality.	Clean the scanner lens and film holders. Ensure film is inserted correctly. Select the correct film type in the menu. Adjust exposure settings.
Cannot save photos.	No memory card, full memory card, or incompatible card.	Insert a compatible storage card (up to 128GB). Check if the card is full and delete unnecessary files or use a new card. Ensure the card is not write-protected.
Cannot transfer photos to computer.	Loose USB connection, incorrect mode, or driver issue.	Ensure USB cable is securely connected. The scanner should appear as a mass storage device; no special drivers are typically needed for basic file transfer. Try a different USB port on your computer.

8. SPECIFICATIONS

Technical specifications for the Luqeeq Film & Slide Scanner:

Feature	Detail
Item Type	Film Scanner
Material	ABS
Weight	Approx. 445 g / 15.7 oz
USB Interface	USB2.0, Mini USB
Sensor	2MP CMOS sensor
Screen	2.0 inch
Light Source	LED backlight
Image Format	JPG
Image Resolution	12MP, 5MP

Feature	Detail
Scannable Film Types	135 film, 126KPK film, 110 film, Super 8 mm film, Black & white negative, Slideshow
Image Effects	Negative, Color, B&W
Card Storage	Storage card (supports up to 128GB, not included)
Languages Supported	English, French, Spanish, Portuguese, German, Italian, Simplified Chinese, Traditional Chinese
Model Number	Luqeegg0hf2qkdv8

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for warranty claims.

