

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Disney](#) /
- › [Haunted Mansion \(2023\) Blu-ray Disc User Guide](#)

Disney B0CL59FYCL

Haunted Mansion (2023) Blu-ray Disc User Guide

Model: B0CL59FYCL

INTRODUCTION

This user guide provides essential information for the proper use, care, and enjoyment of your Haunted Mansion (2023) Blu-ray disc. Please read this manual carefully to ensure optimal playback and longevity of your disc.

PRODUCT OVERVIEW

Blu-ray Disc



This image displays the front cover of the Haunted Mansion (2023) Blu-ray disc. It features the film's title prominently, along with images of the main cast members including LaKeith Stanfield, Tiffany Haddish, Owen Wilson, Danny DeVito, and Rosario Dawson. The iconic Haunted Mansion building is depicted at the bottom, set against a dark, spooky background with spiderwebs and ghostly figures. The Blu-ray Disc logo is visible at the top, and a '12' age rating symbol is in the bottom left corner.

The Haunted Mansion (2023) Blu-ray disc contains the full-length feature film in high-definition video and audio. This disc is designed for playback on Blu-ray compatible players.

- **Format:** Blu-ray Disc

- **Movie Title:** Haunted Mansion (2023)
- **ASIN:** B0CL59FYCL
- **UPC:** 745978993717

SETUP

To enjoy your Blu-ray disc, ensure you have the following:

1. **Blu-ray Player:** A Blu-ray disc player, PlayStation console (PS3, PS4, PS5), or Xbox console (Xbox One, Xbox Series X) capable of playing Blu-ray discs. Ensure your player is updated with the latest firmware for optimal compatibility.
2. **Display Device:** A television, monitor, or projector with an HDMI input. For the best experience, an HD or 4K display is recommended.
3. **Audio System:** Connect your Blu-ray player to your TV or an external audio system (e.g., soundbar, AV receiver) for sound output.
4. **Power and Cables:** Ensure all devices are properly powered and connected using appropriate cables (e.g., HDMI cable for video and audio).

OPERATING INSTRUCTIONS

Playing the Disc

1. Gently remove the Blu-ray disc from its case, holding it by the edges to avoid touching the playback surface.
2. Insert the disc into your Blu-ray player or console with the label side facing up.
3. Close the disc tray or slot. The player should automatically detect the disc and begin loading.
4. Once loaded, the disc menu or the film itself will appear on your display.

Navigation and Features

- **Main Menu:** Use your player's remote control to navigate the disc's main menu. Options typically include "Play Movie," "Scene Selection," "Audio Settings," "Subtitles," and "Special Features."
- **Audio Settings:** Select your preferred audio track (e.g., English Dolby Digital, DTS-HD Master Audio) from the audio menu.
- **Subtitles:** Enable or disable subtitles, and select your preferred language from the subtitle menu.
- **Scene Selection:** Jump to specific chapters or scenes within the movie.
- **Special Features:** Explore bonus content such as behind-the-scenes documentaries, deleted scenes, or trailers, if available on the disc.

MAINTENANCE AND CARE

Proper care of your Blu-ray disc will ensure its longevity and consistent performance.

- **Handling:** Always hold the disc by its outer edges or by inserting a finger through the center hole. Avoid touching the playback surface (the shiny side).
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (e.g., microfiber cloth) from the center outwards in a straight line. Do not wipe in circular motions. Do not use abrasive cleaners or solvents.
- **Storage:** Store the disc in its original case when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Do not place the disc on rough surfaces. Scratches on the playback surface can lead to playback

errors.

TROUBLESHOOTING

If you encounter issues during playback, try the following solutions:

Problem	Possible Solution
Disc does not play or load.	Ensure the disc is inserted correctly (label side up). Clean the disc gently with a soft cloth. Check if your player is a Blu-ray player (DVD players cannot play Blu-ray discs). Update your Blu-ray player's firmware. Try the disc in another Blu-ray player to rule out player issues.
No video or distorted video.	Check HDMI cable connections between the player and TV. Ensure your TV input is set to the correct HDMI port. Verify the disc is clean and free of deep scratches.
No audio or distorted audio.	Check audio cable connections (if applicable) or HDMI audio settings. Ensure your TV or audio system volume is not muted or too low. Select the correct audio track from the disc's audio menu.
Disc freezes or skips.	Clean the disc thoroughly. Check for visible scratches or damage on the disc surface. Ensure your player's lens is clean (refer to your player's manual for cleaning instructions).

SPECIFICATIONS

Key technical details for the Haunted Mansion (2023) Blu-ray disc:

- **Format:** Blu-ray Disc
- **ASIN:** B0CL59FYCL
- **UPC:** 745978993717
- **Media Format:** Blu-ray
- **Genre:** Comedy, Family, Fantasy
- **MPAA Rating:** NR (Not Rated) - *Note: The image shows a "12" rating, which is likely a regional rating. For US market, it's listed as NR.*
- **Package Dimensions:** 6.75 x 5.4 x 0.5 inches (approximate, for standard Blu-ray case)
- **Item Weight:** 2.24 ounces (approximate, for disc and case)
- **Audio:** High-definition audio tracks (specific formats may vary by disc, typically DTS-HD MA or Dolby TrueHD)
- **Video:** 1080p High Definition (for Blu-ray)
- **Region Code:** Blu-ray discs are typically region-coded (A, B, or C). Please check your player's region compatibility. This disc is generally Region A for North America.

WARRANTY AND SUPPORT

Physical media products like Blu-ray discs typically come with a limited warranty against manufacturing defects. Please inspect your disc upon receipt.

- **Defective Discs:** If you receive a disc that is physically damaged or does not play due to a manufacturing defect, please contact the retailer or distributor from whom you purchased the product for a replacement or refund.
- **General Support:** For technical issues related to your Blu-ray player or display device, please refer to the respective manufacturer's user manual or support channels.
- **Content Inquiries:** For questions regarding the film content or special features, please refer to official Disney resources or the film's distributor.

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for embedding in this manual.