Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Mueller /
- MuellerLiving Immersion Hand Blender Full Set Instruction Manual

Mueller Blender Stick 7 Accessories

MuellerLiving Immersion Hand Blender Full Set

Model: Blender Stick 7 Accessories

Introduction Safety Instructions Package Contents Setup Operation Maintenance
Troubleshooting Specifications Warranty & Support

1. Introduction

Thank you for choosing the MuellerLiving Immersion Hand Blender Full Set. This versatile kitchen appliance is designed to simplify your cooking tasks with its powerful motor and multiple attachments. Please read this manual carefully before first use to ensure safe and optimal performance of your new appliance.



Image: The MuellerLiving Ultra-Stick Hand Blender, showcasing its multi-purpose design and seven included attachments, positioned on a kitchen counter.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- To protect against risk of electrical shock, do not put the motor unit, cord, or electrical plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- · Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended household use.
- Blades are sharp. Handle carefully.

3. PACKAGE CONTENTS

Your MuellerLiving Immersion Hand Blender Full Set includes the following components:

- Main Motor Unit (Hand Blender Body)
- · Stainless Steel Blending Shaft
- Milk Frother Attachment
- Whisk Attachment
- Mixing Hooks (2 pieces)
- Beaters (2 pieces)
- · Chopper Bowl with Blade and Lid
- Potato Masher Attachment
- 600 ml Measuring Beaker



Image: A complete overview of all components included in the MuellerLiving Immersion Hand Blender Full Set, including the main unit, various attachments, and the measuring beaker.

4. SETUP AND ASSEMBLY

Before first use, ensure all parts are clean. Refer to the 'Maintenance and Cleaning' section for initial cleaning instructions.

Attaching Accessories:

- 1. Align the desired attachment (e.g., blending shaft, whisk, beaters, frother, potato masher) with the motor unit.
- 2. Insert the attachment into the motor unit and twist clockwise until it locks securely into place. You should hear a click or feel it firmly seated.
- 3. For the chopper bowl, place the blade onto the central pin inside the bowl, add ingredients, then place the motor unit onto the chopper bowl lid and twist to lock.



Image: A detailed view demonstrating the easy and quick attachment swap mechanism of the hand blender, showing the insertion and twist-to-lock motion.

5. OPERATING INSTRUCTIONS

The MuellerLiving Immersion Hand Blender features 8 variable speeds and a Turbo mode for optimal control over your blending tasks.

General Operation:

- 1. Ensure the desired attachment is securely connected to the motor unit.
- 2. Plug the appliance into a power outlet.
- 3. Submerge the blending shaft or attachment into the ingredients. For best results, ensure the blade housing is fully immersed to reduce splashes.
- 4. Adjust the speed dial on top of the motor unit to select your desired speed (1-8).
- 5. Press and hold the power button to start blending. For maximum power, press the 'Turbo' button.
- 6. Release the button to stop operation.



Image: A detailed view of the hand blender's control panel, highlighting the variable 8-speed dial and the Turbo button for enhanced power.

Specific Attachment Uses:

- Stainless Steel Blending Shaft: Ideal for blending shakes, smoothies, soups, and vegetable purées directly in pots or tall containers.
- Milk Frother: For foaming all types of milk for coffee and other beverages.
- Whisk: Perfect for whipping cream, egg whites, and light batters.
- Mixing Hooks: Designed for mixing various types of dough, such as bread or pizza dough.
- Beaters: Suitable for preparing pancake or waffle batter, and other medium-consistency mixtures.
- Chopper Bowl: Use for quickly chopping ingredients like nuts, herbs, onions, or small amounts of meat.
- Potato Masher: Creates creamy mashed potatoes or mashes other cooked vegetables and fruits effortlessly.



Image: A visual guide illustrating the different attachments (Milk Frother, Whisk, Beaters, Mixing Hooks, Blender, Chopper Bowl, Potato Masher) and their respective culinary applications.



Image: Examples of various dishes and preparations, such as soups, veggie purées, pancakes, smoothies, whipped cream, and meat, demonstrating the versatility of the hand blender.

6. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your appliance. Always unplug the hand blender before cleaning.

Cleaning Instructions:

- Motor Unit: Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
- Dishwasher Safe Parts: The Blending Shaft, Whisk, Frother, Beater, and Mixing Hooks are dishwasher safe.
- Hand Wash Only Parts: The Chopper Bowl lid and Potato Masher attachment should be cleaned with soap and water. Do not place them in the dishwasher.
- **Blades:** Handle the blades with extreme care as they are very sharp. Clean them using a brush and soapy water.
- Storage: Store the hand blender and its attachments in a dry place, away from direct sunlight and heat.

7. TROUBLESHOOTING

If you encounter issues with your MuellerLiving Immersion Hand Blender, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet malfunction; attachment not securely locked.	Ensure the blender is properly plugged into a working outlet. Check if the attachment is fully locked into the motor unit.
Motor stops during operation.	Overheating due to prolonged use or processing too thick ingredients.	Unplug the blender and let it cool down for at least 10-15 minutes. Reduce the amount or thickness of ingredients.
Attachments are difficult to remove.	Food residue buildup; improper attachment.	Ensure the unit is unplugged. Gently twist and pull. Clean any residue around the connection point.
Splashing during blending.	Blade housing not fully immersed; too high speed for liquid.	Ensure the blade housing is fully submerged in the ingredients. Start with a lower speed and gradually increase.

8. SPECIFICATIONS

• Brand: Mueller

• Model: Blender Stick 7 Accessories

• Color: Silver

• Power Source: AC

• Number of Speeds: 9 (8 variable speeds + Turbo)

• Controls Type: Push Button, Rotary Dial

• Blade Material: Stainless Steel

• Product Dimensions: 8.5"D x 2.65"W x 2.65"H (main unit)

• Item Weight: Approximately 4.55 pounds (full set)

• Included Components: Main Motor Unit, Stainless Steel Blending Shaft, Milk Frother, Whisk, Mixing Hooks, Beaters, Chopper Bowl, Potato Masher, 600ml Beaker.

9. WARRANTY AND SUPPORT

Your MuellerLiving Immersion Hand Blender Full Set comes with a **Limited Warranty**. Please retain your proof of purchase for warranty claims.

For detailed warranty information, product support, or to inquire about replacement parts, please visit the official Mueller store or contact customer service:

- Official Mueller Store: Visit Mueller Store on Amazon
- Customer Service: Refer to the contact information provided on the product packaging or the official Mueller website

Most new products are eligible for a 30-day return/replacement policy from the date of purchase, subject to retailer terms and conditions.

© 2024 MuellerLiving. All rights reserved.

Related Documents - Blender Stick 7 Accessories



Mueller Ultra-Stick Hand Blender MLR010001N User Manual & Guide

Comprehensive user manual for the Mueller Ultra-Stick Hand Blender (Model MU-HB-02, MLR010001N). Learn about safety instructions, features, assembly, operation, cleaning, and warranty.



Mueller Electric Hand Mixer 5 Speed 250W Turbo User Manual

Comprehensive user manual for the Mueller Electric Hand Mixer, featuring 5 speed settings, 250W Turbo function, and a storage case. Includes safety instructions, operating guide, cleaning, maintenance, troubleshooting, and specifications.



 
Mueller Espresso Machine with Conical Burr Grinder User Manual

This manual provides instructions for operating, cleaning, and maintaining the Mueller Espresso Machine with Conical Burr Grinder (Model: MLR010557N). It covers safety instructions, parts overview, brewing, grinding, descaling, and troubleshooting.



Mueller Vegetable Chopper Pro: User Manual and Instructions

Comprehensive user guide for the Mueller Vegetable Chopper Pro, covering assembly, disassembly, usage, cleaning, storage, and important safety precautions. Features a detailed parts list and blade guide.



Mueller V-PRO 5-Blade Mandoline Slicer User Manual & Instructions

Comprehensive user manual for the Mueller V-PRO 5-Blade Mandoline Slicer, covering safety instructions, parts overview, usage, best practices, cleaning, storage, and warranty information. Includes detailed descriptions of all components and operational steps.



Mueller Vegetable Chopper Pro User Manual and Instructions

Comprehensive user manual for the Mueller Vegetable Chopper Pro, detailing assembly, usage, cleaning, storage, and safety guidelines for this kitchen essential.