

Volkano VK-3900-D8

Volkano Helios Series Dual 8-Inch Bluetooth Party Speaker User Manual

Model: VK-3900-D8 | Brand: Volkano

1. INTRODUCTION

The Volkano Helios Series Dual 8-Inch Bluetooth Party Speaker is a versatile and stylish audio system designed for powerful sound output, suitable for various occasions. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your speaker to ensure optimal performance and longevity.





Image: Front view of the Volkano Helios Series Dual 8-Inch Bluetooth Party Speaker.

2. PACKAGE CONTENTS

Please ensure all items are present in the package:

- 1 x Volkano Helios Series Dual 8-Inch Bluetooth Party Speaker, Black
- 1 x Microphone
- 1 x Audio Cable (Auxiliary)
- 1 x Instruction Manual



Image: The Volkano Helios speaker displayed with its included microphone, auxiliary cable, and instruction manual.

3. PRODUCT FEATURES

- Dual 8-inch woofers for powerful sound output.
- Bluetooth 5.0 + EDR connectivity for wireless audio streaming.
- Integrated USB and SD Card inputs for direct media playback.
- Auxiliary (Aux) input for wired connections.
- Two microphone inputs for karaoke or public speaking.
- FM Radio tuner for listening to local stations.
- Variable bass and treble controls for customized sound.
- Built-in wheels and a retractable handle for easy portability.
- Guitar input for connecting musical instruments.
- Up to 6 hours of playtime on a single charge.
- USB power output for charging external devices.
- Dynamic LED party lights.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the power cable to the speaker's charging port and plug it into a standard wall outlet. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off.

4.2 Powering On/Off

1. To power on: Locate the power button, usually on the control panel, and press and hold it for a few seconds until the display illuminates.
2. To power off: Press and hold the power button again until the display turns off.

5. OPERATING INSTRUCTIONS



Image: Close-up of the speaker's top control panel, showing various buttons and knobs for operation.

5.1 Bluetooth Mode

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing 'BT' on the display.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for available devices and select "Volkano Helios" from the list.
4. Once connected, the 'BT' indicator will stop flashing, and you can play audio from your device.

5.2 USB / SD Card Playback

1. Insert a USB flash drive or SD card into the respective port on the speaker's control panel.
2. The speaker will automatically switch to USB or SD mode and begin playing compatible audio files.
3. Use the playback controls (Play/Pause, Next/Previous Track) on the speaker to manage your music.

5.3 AUX Input

1. Connect one end of the provided auxiliary cable to the AUX input port on the speaker.
2. Connect the other end to the audio output jack of your external device (e.g., MP3 player, laptop).
3. Press the 'Mode' button on the speaker until 'AUX' is displayed.
4. Control playback and volume from your external device.

5.4 FM Radio

1. Press the 'Mode' button until 'FM' is displayed.
2. Press the 'Play/Pause' button to initiate an automatic scan for available FM stations. The speaker will save them automatically.
3. Use the 'Next/Previous Track' buttons to navigate through the saved stations.

5.5 Microphone and Guitar Input

- Connect a microphone to one of the 'MIC IN' ports.
- Connect a guitar to the 'GUITAR IN' port.
- Adjust the microphone and guitar volume using their dedicated knobs on the control panel.

5.6 Lighting Effects

The speaker features dynamic LED party lights. Use the 'Light' button on the control panel to cycle through different lighting modes or to turn the lights off.



Image: The Volkano Helios speaker with its front LED lights glowing green, showcasing the party light feature.

5.7 Tone Control (Bass & Treble)

Use the dedicated 'Bass' and 'Treble' knobs on the control panel to adjust the low and high frequencies of the audio output according to your preference.

6. MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in constant use.
- Water Exposure:** This speaker is not waterproof. Avoid exposing it to water or excessive moisture.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Connect the speaker to a power source and allow it to charge.
No sound output.	Volume is too low or muted. Incorrect input mode selected.	Increase the speaker's volume. Ensure the correct mode (Bluetooth, AUX, USB, SD, FM) is selected. Check source device volume.
Bluetooth device cannot connect.	Speaker is not in pairing mode. Device is too far. Interference.	Ensure speaker is in Bluetooth mode and 'BT' is flashing. Move device closer to speaker. Turn off other Bluetooth devices.
Microphone not working.	Microphone volume is low. Microphone not properly connected.	Increase the microphone volume knob on the speaker. Ensure the microphone is fully plugged into the 'MIC IN' port.

8. SPECIFICATIONS

Feature	Detail
Model Number	VK-3900-D8
Speaker Type	Party Speaker (Dual 8-Inch)
Connectivity Technology	Bluetooth 5.0 + EDR
Speaker Maximum Output Power	80 Watts RMS
Frequency Response	20 KHz
Audio Output Mode	Stereo
Input Voltage	15 Volts
Playtime	Up to 6 hours
Product Dimensions (D x W x H)	36.9D x 76W x 34H centimetres
Material	Plastic
Color	Black

9. WARRANTY AND SUPPORT

9.1 Manufacturer's Warranty

This Volkano product is covered by a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship. Please retain your proof of purchase for warranty claims.

9.2 Extended Coverage

You may be eligible to extend your coverage for an additional 12 months, totaling 24 months of coverage. Please refer to the Volkano official website or product registration information for details on how to register your product for extended warranty.

9.3 Customer Support

For any questions, assistance, or support regarding your Volkano Helios Series speaker, please contact Volkano customer service. Your satisfaction is important to us. You can typically find contact information on the official Volkano website or through the retailer where you purchased the product.

 <p>Volkano Gemini Series 2x True Wireless Bluetooth Speakers Instruction Manual VK-3133-BK</p>	<p>Get detailed instructions for the Volkano Gemini Series 2x True Wireless Bluetooth Speakers (VK-3133-BK). This manual covers setup, charging, pairing, controls for music playback and calls, FM radio, USB/SD card modes, troubleshooting, safety precautions, and warranty information.</p>
 <p>Volkano Mini Bazooka Series Bluetooth Speaker VK-30001-S11 Instruction Manual</p>	<p>Comprehensive instruction manual for the Volkano Mini Bazooka Series Bluetooth Speaker (VK-30001-S11). Learn how to use Bluetooth, USB, FM Radio, charge the device, and follow care and safety guidelines.</p>
 <p>Volkano Cobra Series VK-3454-BK True Wireless Bluetooth Speaker User Manual</p>	<p>Comprehensive user manual for the Volkano Cobra Series VK-3454-BK True Wireless Bluetooth Speaker, covering setup, operation, troubleshooting, safety, and warranty information.</p>
 <p>Volkano Rocket Series VK-3013-BK Bluetooth Speaker User Manual</p>	<p>Instruction manual for the Volkano Rocket Series VK-3013-BK Bluetooth Speaker, detailing features, specifications, operation, and disposal instructions.</p>