

SUSTEAS SL-107A

SUSTEAS 3-in-1 Electric Indoor Grill Instruction Manual

MODEL: SL-107A

Brand: SUSTEAS

1. Introduction

Thank you for choosing the SUSTEAS 3-in-1 Electric Indoor Grill. This versatile appliance is designed to simplify your cooking experience, allowing you to prepare a variety of meals from grilled sandwiches to steaks and vegetables with ease. Its compact design and efficient heating technology make it an ideal addition to any kitchen.

Key Features:

- **3-in-1 Multifunctionality:** Functions as a panini press, contact grill, and opens 180-degrees for use as a double grill.
- **Adjustable Temperature Control:** Precise heat settings from 365°F to 410°F for optimal cooking.
- **Non-Stick Cooking Plates:** Ensures easy food release and effortless cleanup.
- **Floating Hinge:** Accommodates various food thicknesses, from thin sandwiches to thick burgers.
- **Integrated Drip Tray:** Collects excess fat and liquids for healthier cooking and cleaner operation.

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the grill.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The grill is equipped with a robust handle and non-slip feet for enhanced safety and stability during use.

3. Setup and Initial Use

Before first use, ensure all packaging materials are removed. The grill comes with a drip tray and this instruction manual.

1. Place the grill on a stable, heat-resistant, and dry surface.
2. Insert the removable drip tray into its designated slot at the back of the grill.
3. Wipe the non-stick cooking plates with a damp cloth or sponge to remove any dust or residue from manufacturing. Dry thoroughly.
4. For the first use, it is recommended to operate the grill for a few minutes without food to burn off any manufacturing oils. A slight odor or smoke may be present; this is normal.



Figure 1: The SUSTEAS 3-in-1 Electric Indoor Grill in its closed position, ready for use.

Top And Bottom Grilling Plate

Provides even heat to achieve char-grill marks



Figure 2: The grill plates showing the internal heating elements for efficient cooking.

For a visual guide on setting up and using your grill, watch the official seller video below:

Video 1: Official demonstration of the SUSTEAS electric panini press grill, showcasing its features and ease of use.

4. Operating Instructions

The SUSTEAS Electric Indoor Grill is designed for user-friendly operation.

1. **Power On:** Plug the grill into a standard 120V electrical outlet. The red indicator light will illuminate, indicating the power is on.
2. **Preheat:** Turn the temperature control knob to your desired setting (Min to Max, 365°F-410°F). The green indicator light will illuminate, signaling that the grill is preheating. Once the set temperature is reached, the green light will turn

off.

3. Cooking Modes:

- **Panini Press/Contact Grill:** Place food on the bottom plate and gently lower the top plate. The floating hinge will adjust to the thickness of your food, ensuring even cooking.
- **180-Degree Open Grill:** To use as a flat grill, press the release button on the side of the hinge and open the top plate completely until it lies flat, creating two large cooking surfaces. This is ideal for grilling multiple items simultaneously.

4. **Cooking:** Place your food on the preheated grill plates. Cook until desired doneness is achieved.

5. **Power Off:** Once cooking is complete, turn the temperature control knob to the 'OFF' position and unplug the grill from the outlet.



Figure 3: Close-up of the control panel showing the power (red) and preheat (green) indicator lights, and the temperature dial.

Dual Cooking Plates

Opens flat for 180° grilling



Figure 4: The grill's ability to open 180 degrees, providing a larger cooking surface.

Floating Hinge

Evenly presses any size sandwich

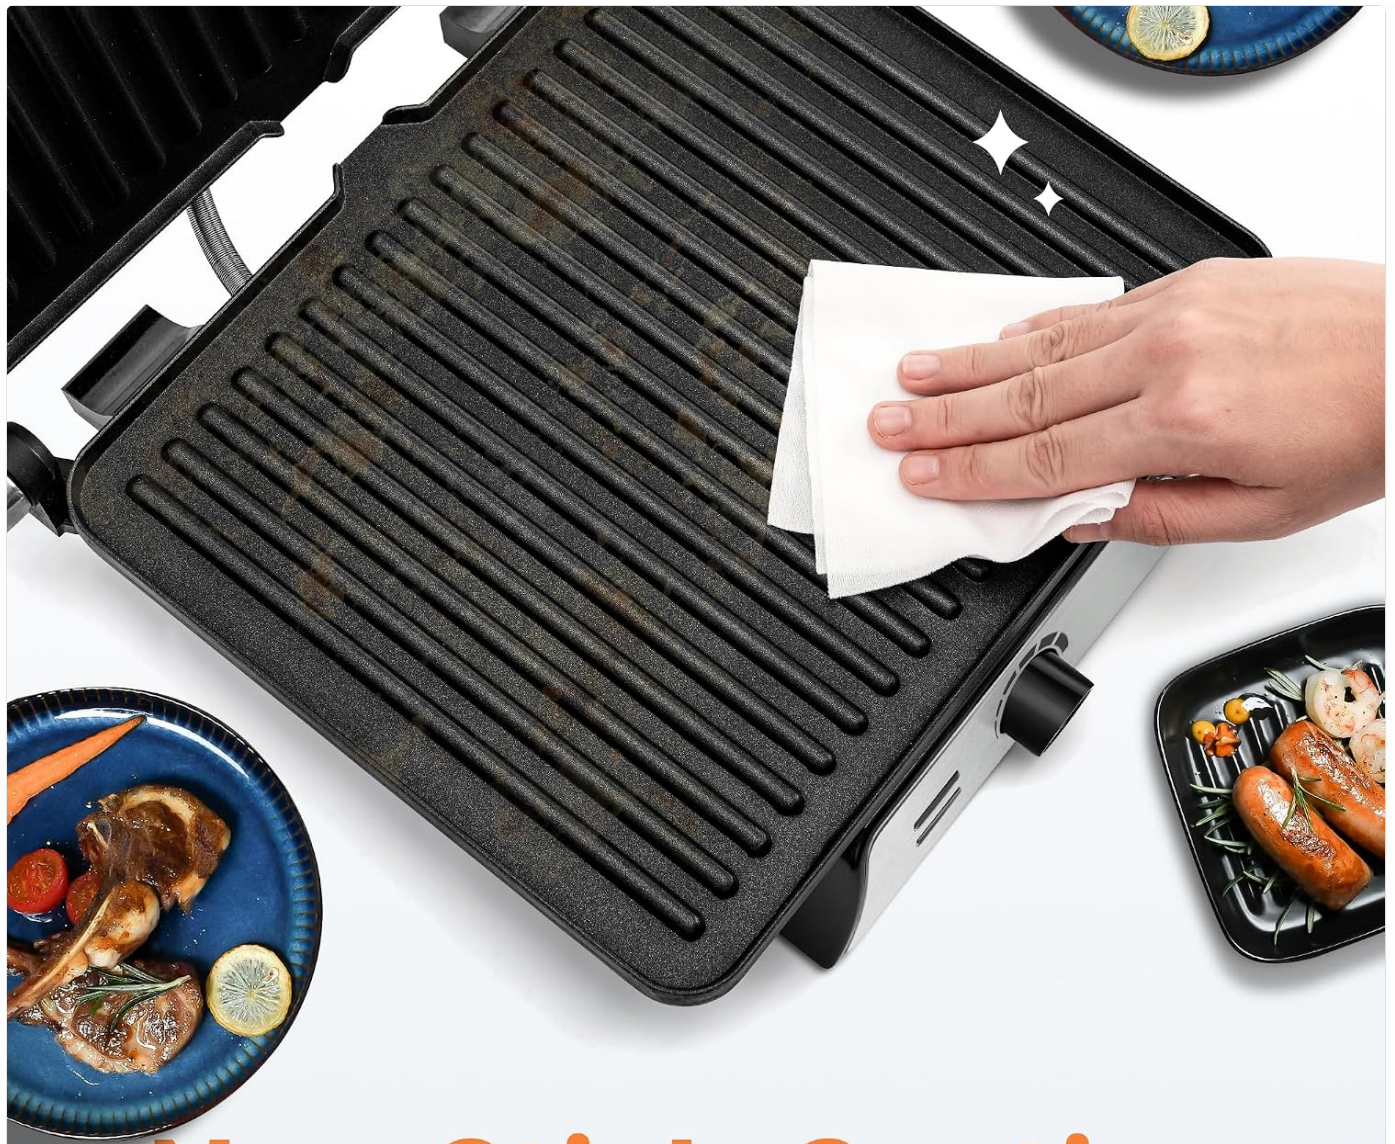


Figure 5: The floating hinge mechanism, allowing the top plate to adjust to various food thicknesses for even pressure.

5. Maintenance and Cleaning

Proper cleaning ensures the longevity and performance of your grill. Always unplug the grill and allow it to cool completely before cleaning.

1. **Remove Drip Tray:** Carefully slide out the drip tray and discard any collected fat or liquid. Wash the drip tray with warm, soapy water and dry thoroughly.
2. **Clean Cooking Plates:** The non-stick plates are not removable. Once cooled, wipe the cooking plates with a damp cloth or sponge. For stubborn residue, use a small amount of mild dish soap. Avoid abrasive cleaners or scouring pads, as they can damage the non-stick coating.
3. **Clean Exterior:** Wipe the exterior of the grill with a damp cloth. Do not use harsh chemicals or abrasive materials.
4. **Storage:** Ensure the grill is completely clean and dry before storing. Store in a cool, dry place.



Non-Stick Coating

Allows food to slide off easily

Figure 6: Demonstrating the easy cleaning process for the non-stick cooking plates.



Removable Drip Tray

Excess fat drains into the drip tray

Figure 7: The removable drip tray, designed to collect excess fat for easy disposal and healthier meals.

6. Troubleshooting

If you encounter any issues with your SUSTEAS Electric Indoor Grill, please refer to the following common problems and solutions:

- **Grill does not turn on:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check if the temperature control knob is turned to an 'ON' position (not 'OFF').

- **Grill is not heating up:**

- Confirm the green preheat light is on. If not, ensure the temperature knob is set correctly.

- Allow sufficient time for the grill to preheat. The green light will turn off when ready.

- **Food is sticking to the plates:**

- Ensure the plates are clean and free of old food residue.
- Lightly brush the plates with cooking oil or spray before adding food.

- **Excessive smoke:**

- This may occur if the grill plates are not clean or if too much oil/fat is used. Clean the plates thoroughly.
- Ensure the drip tray is in place and not overflowing.

If the problem persists after trying these solutions, please contact customer support.

7. Product Specifications

Feature	Specification
Brand	SUSTEAS
Model Number	SL-107A
Special Feature	Temperature Control, Non Stick Coating
Color	Black and Stainless
Material	Stainless Steel
Product Dimensions	13"D x 12.87"W x 15"H
Wattage	1500 watts
Item Weight	6.6 Pounds
Included Components	Drip tray, Instruction Manual
Style	Grill
Voltage	120 Volts
Material Type Free	BPA Free
Number of settings	4
Warranty Type	Limited Warranty
Manufacture Year	2023
Country of Origin	China

8. Warranty and Support

This SUSTEAS Electric Indoor Grill comes with a**Limited Warranty**. Please refer to the warranty card included in your packaging for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact SUSTEAS customer service through the retailer's platform or the contact information provided on the product packaging.

© 2024 SUSTEAS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question